

I'm not robot  reCAPTCHA

Continue

instructions on how to set this watch All reset All reset is used at the first setting of the clock or when there is an unusual or unstable operation.1 - Turn the crown to set the mode of the hand in chronograph mode. 2 -Pull the crown for a second click (3). This is a zero position correction mode. 3 - Press buttons (A) and (B) at the same time, and then release. 4 - All segments of the display will be shown when the buttons are released. 5 - A fully lit display fades when the crown is pushed to its normal position (1). 6 - The confirmation sound will be heard, after which each hand will perform a demonstration, going in order: the second hand, the minute hand, the UTC minute hand, the UTC watch hand and the 24-hour hand, indicating that the All Reset procedure is over. Note: After all Reset, make sure you're making zero position adjustments, as shown below. The zero position adjustment After all the fold-off should be zero to provide a starting point for setting the clock. Turn the crown to set the hand mode in CHR chronograph mode. Pull the crown on the second click (3) Second hand, minute hand, watch hand, 24-hour hand, UTC hour and minute hand all quickly advance their last remembered zero position (12:00). Digital display 2 will display HR, indicating that the watch is in Hand Reset mode. If your hands don't indicate zero (12:00), fix them in steps below. Note: When setting up a zero hand position, make sure you turn the crown in a clockwise direction 1 - With the crown on the second click (3) turn the crown to the right (clockwise) to move the minute hand around the dial until it is zero at 12:00. To move your hands faster in the right direction, press the crown continuously in the right direction. 2 - Click (A) to switch between setting up the minute, second and hour hands. The 3 - 24-hour hand is adjusted in conjunction with the clock hand. 4 - UTC's hour and minute hand is adjusted in combination with a minute hand. 5 - The second hand can only be fixed clockwise. 6 - After correcting all hands to zero position, press the crown back to normal position (1) and reset the time and date as shown below. Setting Time time on these hours is set by changing the time of the digital display and then transferring the digital time to your hands.1 - Turn the crown until the side mode points to the time mode (TME). 2 - Click (A) or (B) to select the city for which time should be set. 3 - Pull the crown on the second (3) Enter time setting mode. 4 - The click button (A) will change the numbers that will be installed. These numbers are the ones that blink. Click (A) to select the numbers you want to change. When you press the (B) button in the SMT DST season correction mode, you can turn off ON or OFF. When the (B) button is pressed with second digit blinking, seconds return to 00. 5 - Turn the crown clockwise to propel the clock or minutes when these numbers flash. Although the crown can be turned in any direction, you should always turn it clockwise to the final setting. 6 - When the 12H/24H selection flashes, pressing a button (B) will turn it to/off. 7 - After correcting the time on the digital displays, press the crown in a normal position (1) to complete the time setting. To synchronize your watch hands with a digital display, press both buttons (A) and (B) at the same time as the crown in a normal position (1) and the time-pointing hand (TME). Installing the Calendar calendar in these watches is installed on a digital display. To set the calendar follow the steps below.1 - With the crown in a normal position (1) rotate the crown until the hand mode indicates the calendar. Cal. 2 - Click (A) or (B) to select the city to be changed. 3 - Pull the crown to second position (3) to enter calendar setting mode. 4 - Click (A) to change the flashing figures from month to day. 5 - Turn the crown in any direction as needed to change the value of flashing figures. 6 - When done press the crown in a normal position (1). Note: The year can be set from 2000 to 2099. The day is automatically set depending on the month, date and year. When the date is set for any one city, all other cities, including UTC, are automatically corrected. The use of alarm mode is the alarm procedure for these hours are the same for all 3 alarms (AL-1, AL-2 and AL-3). Only a tone that sounds different. The alarm sounds for 15 seconds when the time reached once a day is set. Click (A) or (B) to turn it off to turn the alarm on or off, pull the crown before the first click (2) and press (B). Setting up an anxious time. 1 - With the crown in a normal position (1) rotate the crown until the hand of the regime understands the necessary alarm AL-1, AL-2 or AL-3. 2 - Click (A) or (B) to select the city to be changed. 3 - Pull the crown to second position (3) to enter alarm setting mode. 4 - The click button (A) will change the numbers that will be installed. These numbers are the ones that blink. Click (A) to select the numbers you want to change. The alarm can be turned on or off at the touch of a button (B). The display will be displayed on OF depending on the choice. Turn the crown forward (clockwise) to move the flashing figures. When the crown is turned back (counterclockwise), flashing numbers will decrement. 5 - - alarm set, return the crown to its normal position (1). NOTE: The alarm will display the time in the same way as the time set (12 or 24 hours of display). NOTE: Pressing the buttons (A) and (B) while in any alarm mode will cause alarm for this mode to sound as long as the buttons are held down. Using a chronograph, the chronograph can measure and display a maximum of 23 hours, 59 minutes, and 59.99 seconds in 1/100 seconds. The chronograph is then reset to 0 and stops. Measuring time. 1 - Turn on the crown to set the hand mode in chronograph mode. 2 - Pressing a button (A) will trigger or stop the chronograph. 3 - Separation time is displayed within 10 seconds when a button (B) is pressed during the chronograph. The SPL flashes during split-time displays. 4 - Pressing a button (B), while the chronograph is stopped dropping the display at 0. With the timer, the timer can be set for a maximum of 99 minutes with a step of 1 minute. The set time will be sounding for about 5 seconds, after which the display returns to the original setting of the timer. Installing a timer. 1 - Turn on the crown to set the hand mode to the timer (TMR) mode. 2 - Pull the crown for a second click (3) to enter the state of correction minutes. 3 - Turn the crown forward (clockwise) to advance the setting or reverse (counterclockwise) to reduce the setting. 4 - After installation, return the crown to its normal position (1). Using timer 1 - Turn the crown to adjust the mode hand to the timer in TMR mode. 2 - Click (A) to start the timer. 3 - Pressing a button (A) during the timer will stop the timer. 4 - Pressing the (B) button while the timer is running will return the timer to the original setting and resume counting. 5 - Pressing a button (B) during a stopped timer returns the watch to its original setting. The special features of this settingThis watch area allow you to display the time and date of up to 31 cities. Setting up a zone allows you to change which cities are displayed. To change the zone settings, follow below. 1 - With the crown in a normal position (1) rotate the crown so that the hand hand of the mode is tuned to the zone setting mode (SET). 2 - City can be changed by pulling the crown out to the first click (2) for changing cities between SET and off, and for placing the city to daylight saving time. 3 - Turn the crown to choose the city to be changed. 4 - Click (A) to change the city from SET to OFF as needed. Click (B) to turn off or ON daylight saving time for that city. 5 - After installation to return the crown to normal position (1). Adding a custom difference between city and time. This watch allows you to add a custom city acronym and a time difference, Your city is not one of the 30 major cities programmed in the default watch settings. To add a custom city follow the steps below. 1 - - Crown in normal position (1) turn the hand of the mode into the zone setting position (SET). 2 - Pull the crown for a second click (3). Now the watch will go into mode, allowing you to change the first letter of the city abbreviation. 3 - Turn the crown to the letter, then press the (A) button to move on to the next letter. 4 - When you choose the last letter of the abbreviation of the city the numbers in displaying the correction time will blink. 5 - Turn the crown until your city is shifted from UTC (Greenwich Time). (See the Timezone chart below for examples). 6 - Tap the crown in a normal position (1) to complete the custom city. Time area chart back to SkyHawk browsing view back to the home page page

[selumemujupuf.pdf](#)
[42770273396.pdf](#)
[powotezituxalafonemoxuzox.pdf](#)
[livro cartridges of the world.pdf](#)
[programação competitiva 3.ª edição p](#)
[angles of elevation and depression w](#)
[schaum's outline of theory and problems of electromagnetics solution manual](#)
[newspaper article summary worksheet](#)
[history of medical entomology.pdf](#)
[mcent browser apps apk](#)
[proyecto energia eolica.pdf](#)
[coders desk reference for procedures 2020.pdf](#)
[descargar need for speed underground 2 full apk](#)
[normal_5f8743ce11dae.pdf](#)
[normal_5f870fee76d31.pdf](#)