


Page 1 of 17

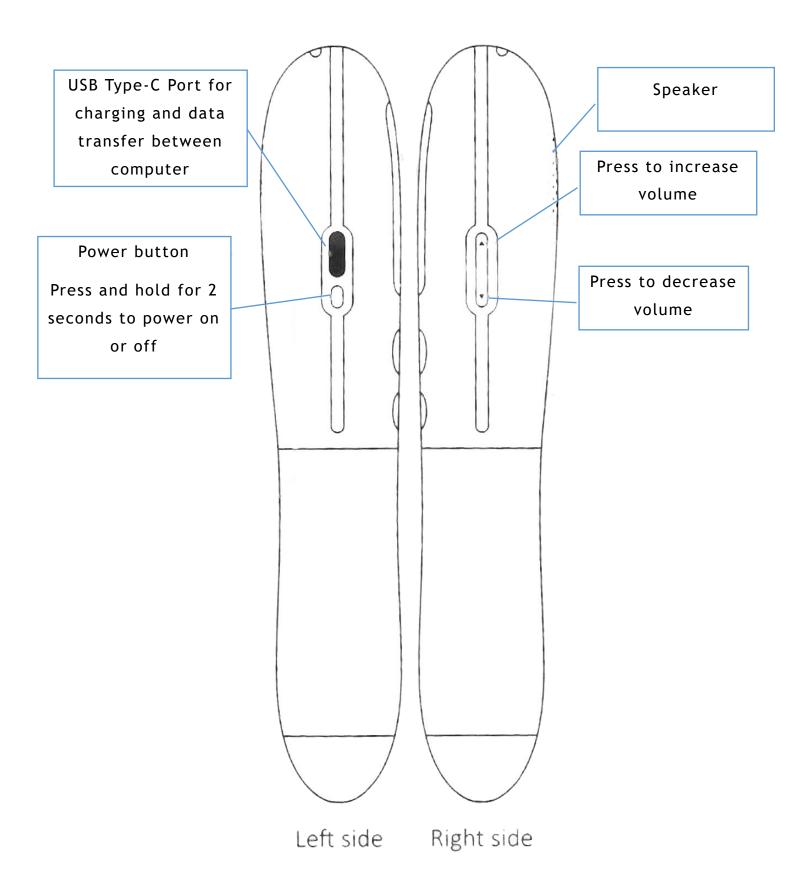


Page 2 of 17

# Recording with sticker

You can use 40,988 recording stickers with the reader. Like PenFriend, the length of each recording sticker is unlimited until the memory card inside the reader is full.

To record, tap anywhere on a recording sticker and wait 2 seconds after you hear "Start recording" before speaking to the reader. Tap the same sticker again to save the recording when you finish.




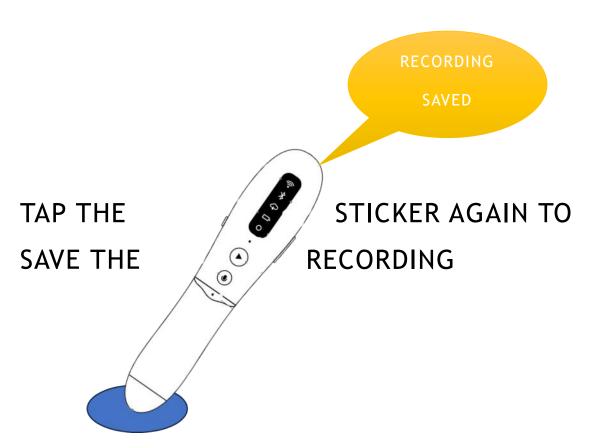

Page 4 of 17


# Delete the content of a sticker


Like PenFriend, the recording sticker is reusable; delete the content, and you can reuse the sticker.

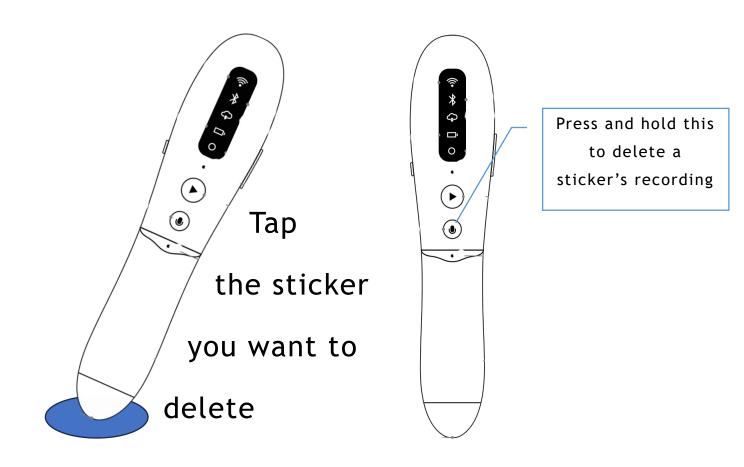

# Recording without the sticker

The reader is also a digital recorder.

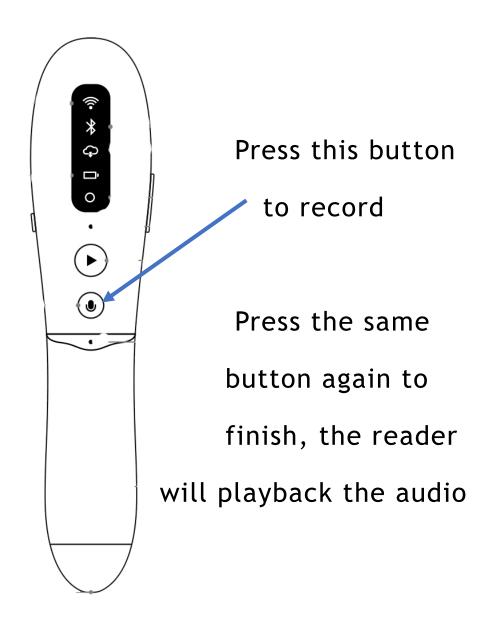

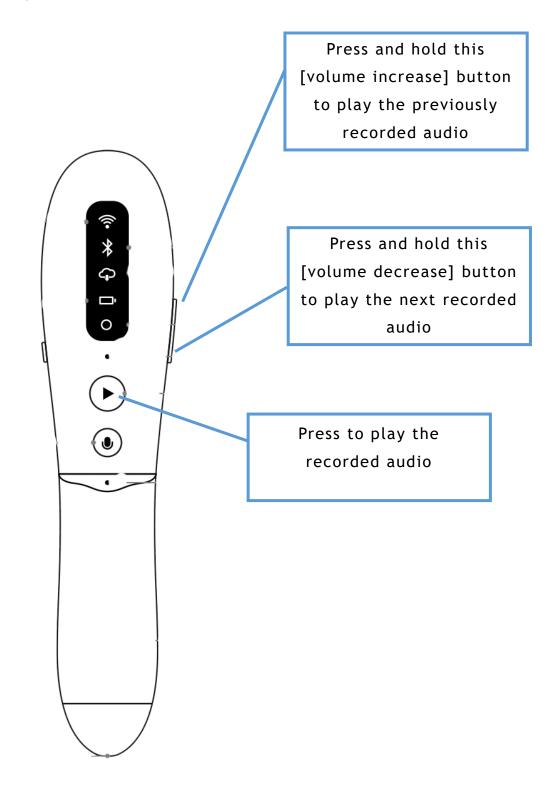

## File Structure of the Reader

These are the four folders inside the reader.



#### [BOOKS] FOLDER

The reader reads audio books like PenFriend. Unlike Penfriend that does not offer software to users to DIY their audio book, we do provide a software that can do that.

The audio books files are saved under this [BOOKS] folder with a numeric file name and [.bnf] file extension to distinguish it.

## [CONFIG] FOLDER

This folder contains file that configurate the functions of the reader; users are encouraged not to temper it.

Users can download it from our website if they accidentally delete or damage this file.

#### [REC] FOLDER

This folder contains the audio files recorded without stickers.

The file names begin with [REC] follows by a number with extension [.wav]

e.g. [REC01.wav], [REC02.wav]...etc.

#### [SYSAUDIO] FOLDER

This folder contains all the system audio played during the reader's operation.

Users can replace them with their own.

- Delete\_fail.mp3
   Delete\_succ.mp3
   Diy\_Record\_Start.mp3
- 🗾 Download\_begin.mp3
- Download\_book\_done.mp3
  Download\_done.mp3
- Download\_done.mp.
- Download\_fail.mp3
- Download\_processing.mp3
- 🧾 Follow\_mode\_enter.mp3:
- Follow\_record\_start.mp3
- 🔰 Low\_Battery.mp3
- Low\_Battery\_shutdown.mp3
- 🔰 No\_Book.mp3
- No\_Code.mp3
- No\_Rec.mp3
- No\_Rec\_File.mp3
- 🔰 No\_Wifi.mp3
- OID\_Mode.mp3

- Record\_start.mp3
- Shutdown.mp3
- Sleep\_tip1.mp3
- Sleep\_tip2.mp3
- Startup.mp3
- Upgrade.mp3
- Upgrade\_fail.mp3
- Upgrade\_succ.mp3
- Vol\_Dec.mp3
- Vol\_Inc.mp3
- Vol\_Max.mp3
- Vol\_Min.mp3
- wifi\_conf.error.mp3
- wifi\_conf\_enter.mp3
- wifi\_conf\_exit.mp3
- wifi\_connected.mp3
- wifi\_disconnet.mp3

- Delete\_fail.mp3
  - To let the user know that he failed to delete the recorded audio
- Delete\_succ.mp3
  - To inform the user know that he has successfully deleted the recorded audio
- Diy\_Record\_Start.mp3
  - To let the user know that he can start to record his message
- Download\_book\_done.mp3
  - To let the user know that he has successfully downloaded an audiobook into the reader
- Download\_fail.mp3
  - To let the user know that he did not successfully download an audiobook into the reader

- Download\_processing.mp3
  - To let the user know that the audiobook is downloading
- Follow\_mode\_enter.mp3
  - This applies only for educational purposes; please ask me if you want to know about it.
- Follow\_record\_start.mp3
  - o Ditto
- Low\_Battery.mp3
  - To remind the user that the reader is running low on power
- Low\_Battery\_shutdown.mp3
  - This audio will be played before the reader shuts down due to low battery
- No\_Book.mp3

- To let the user knows that there isn't any audiobook in the reader
- No\_Code.mp3
  - To let the user know that there isn't any code (a code is like a trigger tapping upon which the reader will playback audio) at the spot being tapped
- No\_Rec.mp3
  - There isn't any recorded audio at the spot tapped.
- No\_Rec\_File.mp3
  - o Ditto
- No\_Wifi.mp3
  - To let the user know that there isn't any wifi connection in the vicinity
- OID\_Mode.mp3

- To let the user know that the reader is in the audiobook mode
- Record\_start.mp3
  - To let the user know that he can start to record
- Shutdown.mp3
  - This audio is playback before the user turns the reader off
- Sleep\_tip1.mp3
  - To let the user know that the reader has been idle for some time and there is a rotation of this reminder: tip1, tip2, tip3
- Sleep\_tip2.mp3
  - o Ditto
- Sleep\_tip3.mp3
  - o Ditto
- Upgrade.mp3

- To let the user know an update of the reader firmware is about to take place
- Upgrade\_fail.mp3
  - To let the user know that the reader fails to update its firmware
- Upgrade\_succ.mp3
  - To let the user know that the reader has successfully updated its firmware
- Vol\_Dec.mp3
  - This audio is played when the reader presses the reducing volume button
- Vol\_Inc.mp3
  - This audio is played when the reader presses the increasing volume button

- Vol\_Max.mp3
  - This audio is played when the reader has reached its maximum volume level
- Vol\_Min.mp3
  - This audio is played when the reader has reached its minimum volume level
- Wifi\_conf.error.mp3
  - It relates to Wifi connection operation; please let me know if you want to use Wifi then I shall explain more to you
- Wifi\_conf\_enter.mp3
  - o Ditto
- Wifi\_conf\_exit.mp3
  - o Ditto
- Wifi\_conf\_connected.mp3

- o Ditto
- Wifi\_disconnect.mp3
- $\circ$  Ditto