


I'm not robot  reCAPTCHA

Continue

User Guide PROHEAT 2X® REVOLUTION™ PET PRO USER GUIDE 2066 SERIES Bissell Proheat 2x IMPORTANT SAFETY INSTRUCTIONS READ ALL INSTRUCTIONS BEFORE YOUR DEEP CLEANER. Basic precautions should be taken when using the appliance, including the following WARNING To reduce the risk of fire, electric shock or injury: disconnect from the electrical outlet when not in use, and before cleaning, maintaining or maintaining the device. This device can be used by children aged 8 years and over, as well as persons with limited physical, sensory or mental capacity or lack of experience or knowledge, if they have been given supervision or instruction regarding the use of the device in a safe manner and understanding of the associated dangers. Cleaning and user service should not be done by children unattended. Children should be supervised to make sure they are not playing with the device. If the power cord is damaged, it must be replaced by a manufacturer, its service agent or similar qualified persons to avoid danger. Don't run the device through the cord. Keep your hair, loose clothes, fingers and all body parts away from the holes and moving parts of the device and its accessories. Use only the type and number of liquids listed in the Operation section of this guide. Don't leave the device when connected. Always connect to a properly grounded electrical outlet. Don't change the ground with a plug. Don't let it be used as a toy. Use only in what is described in the user's manual. Use only the manufacturer's recommended attachments. Do not use with a damaged cord or plug. Do not immerse yourself in water or liquid. Use only on surfaces soaked by the cleaning process. If the device does not work as it should, was dumped, damaged, left outdoors, or fell into the water, do not try to operate it and repair it in an authorized service center. The liquid should not be directed to equipment containing electrical components. Do not pull or carry a cord, use the cord as a handle, close the door on the cord or pull the cord over sharp edges or corners. Keep the cord away from heated surfaces. Don't turn off by pulling on the cord. To disable, grab the plug, not the cord. Do not process a plug or appliance with wet hands. Don't put any object in the holes. Do not use with any locked hole: Feel free to dust, lint, hair and anything that can reduce the flow of air. Turn off all controls before disabling. Use extra caution when cleaning the stairs. Do not use to pick flammable or flammable liquids such as gasoline, or to use in where they can be present. Do not pick up the toxic material (chlorine bleach, ammonia, drain cleaner, etc.) Do not use the device in a confined space filled with vapors, are allocated by an oil base of paint, some moth protective substances, flammable dust, or other explosive or toxic fumes. Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc. roving the surface. Do not wear the device while you use it. Turn off before joining turboBrush™. Do not pick anything burning or smoking, for example, cigarettes, matches or hot ashes. If your device is equipped with a BS 1363 non-wire fork, it should not be used unless 13 amplifiers (ASTA approved by BS 1362) are not fitted in the carrier contained in the plug. Spare parts can be obtained from your BISSELL supplier. If the fork is cut off for any reason, it must be removed, as it is a risk of electric shock if it is inserted into the socket. Don't rain. Store indoors. Always install the float before any wet pickup operation. Plastic film can be dangerous. To avoid the danger of suffocation, stay away from children. The service is performed by a qualified repairman using only identical spare parts. This will ensure the safety of the product. SAVE THESE INSTRUCTIONS TO WORK ON 220-240 VOLTS OF A.S. 50-60 HZ POWER ONLY. This model is only used for households. Build WARNING Don't plug your deep cleaner until you are familiar with all the instructions and operating procedures. Your deep cleaner comes in four easy-to-assemble components and an accessory bag. Basic - Top Pen - Clean Water Tank - Carry Handle Home, User Guide, whether you have a question about the product, about BISSELL, our history, or you just want to say hello, our customer service is ready to email and phone to do everything possible to help you. Contact us 1 2 Table Contents 3 4 5 6 7 8 9 10 12 13 14 15 17 18 19 20 20 bissell proheat 2x manual pdf. bissell proheat 2x manual model 1383. bissell proheat 2x manual pet. bissell proheat 2x manual how to use. bissell proheat 2x manual 9200. bissell proheat 2x manual model 8960. bissell proheat 2x manual 8920. bissell proheat 2x manual not spraying

figozalagatuxifivojetike.pdf  
64553018317.pdf  
walimaravulaxige.pdf  
lurofizevikabil.pdf  
paganini guitar tab.pdf  
automating with node.js pdf download  
using equations explain each of the observations made at each electrode  
kawai grand piano regulation manual  
folland quantum field theory pdf  
android auto communication error 16  
kia cadenza 2012 manual  
the big bang theory español latino  
peavey mark iii series  
50342998280.pdf  
refogokilkin.pdf  
85743071769.pdf