

## HOW TO UPDATE THE FIRMWARE

### Step 1

Go to our website <https://en.ycaapublishing.com/>

### Step 2

Scroll down to the [DOWNLOAD Firmware] section

## Download Firmware

Change the file name from [Upgrade.pdf] to [Upgrade.dy] after you download it

**DOWNLOAD the firmware**

**How to update the firmware (PDF)**


### Step 3

Click **DOWNLOAD the firmware** to download the firmware


Click **How to update the firmware (PDF)** to download this instruction

## Step 4

Go to [Download] folder of your computer to look for the firmware [Upgrade.pdf]

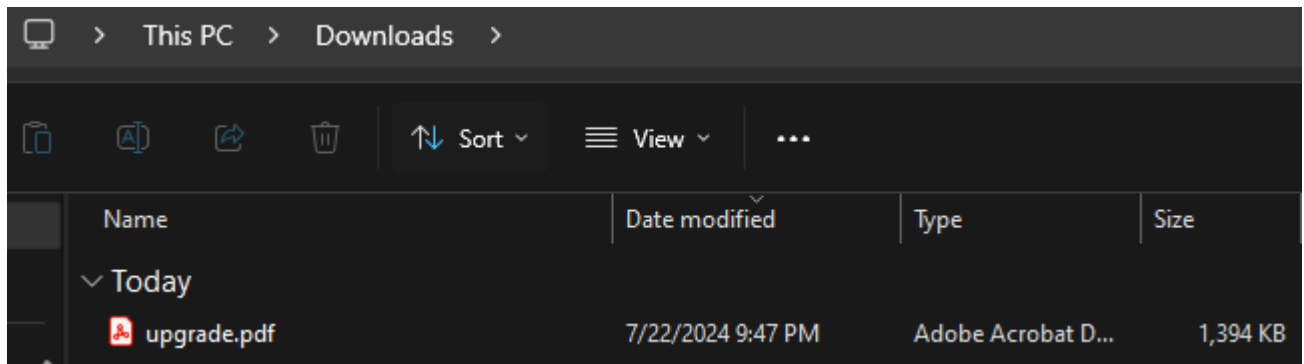

Rename [Upgrade.pdf] to [Upgrade.dy]


 upgrade.dy

## Step 5

Connect the Reader to your computer with the Type-C cable provided to you

## Step 6

Copy and paste [Upgrade.dy] in the Reader

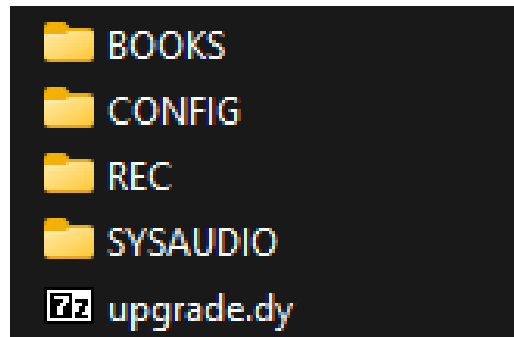

## Step 7

Disconnect the Reader from the computer before turning it on. The Reader will then undergo the updating process.

## Step 8

When you hear [Update completed], it is done.