 







# KidQuest

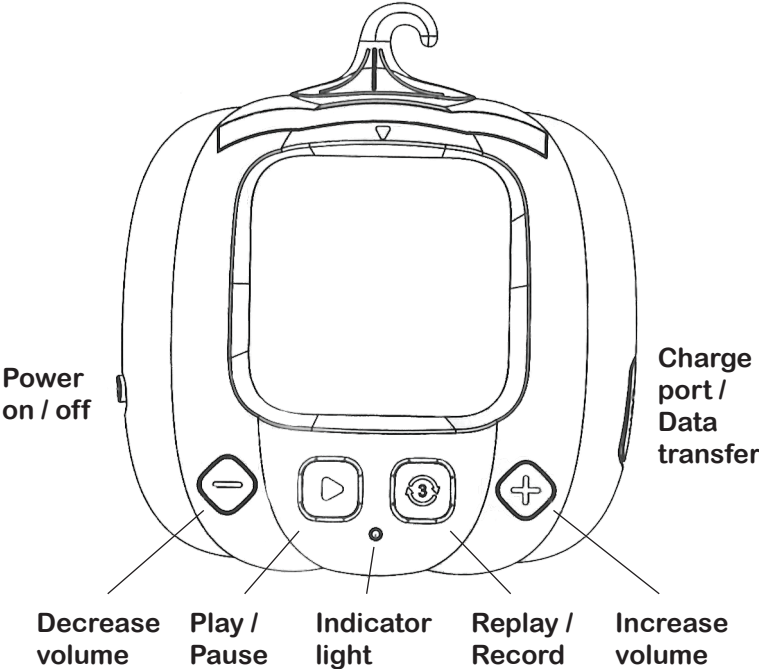 


	<b>Press once to pause the audio. Press again to resume playback from where it stopped.</b>
	<b>REPEAT:</b> Press once to replay the current audio.  <b>RECORDING:</b> Insert a blank recording card. You will hear "This card is empty". Press once to start recording — you will hear "Start recording". Press once again to stop and save the recording — you will hear "Recording saved."  <b>DELETE RECORDING:</b> Insert a recording card with audio. The device will play the recorded content. Press and hold the button for 2 seconds to delete the audio — you will hear "Recording deleted." After deletion, the card becomes blank and can be reused for recording.

	<b>Indicator light</b> <ul style="list-style-type: none"><li>• Upon powering on, the green light turns on for 3 seconds, then turns off.</li><li>• When a card is inserted, the green light turns on.</li><li>• When the card is removed, the green light turns off.</li><li>• During recording, the green light flashes continuously.</li><li>• When recording is finished, the green light remains on.</li></ul>
	<b>Press to increase the volume. Each press raises the volume to a higher level.</b>
	<b>Press to lower the volume. Each press reduces the volume to a quieter level.</b>

## CHARGING PORT

Please recharge the device when the indicator light blinks red.

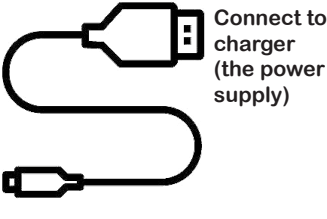

The power supply charger is not included in this product, most mobile phone chargers can be used for charging the KidQuest

## DATA TRANSFER

You can copy, paste, or delete MP3 audio files in KidQuest by connecting it to a computer using the included cable. The device will appear as a USB drive, making it easy to manage files.

For details on how to name MP3 files and organize folders on KidQuest, refer to the "Managing Files" section.

## MANAGING FILES

Once connected to a computer, there are three folders in KidQuest; BOOK, DIY, SYSTEM.



BOOK

MP3 files saved in this folder should start with the card number, ranging from 1 to 972.

For example:

1.mp3 audio file corresponds to card number 1,  
2.mp3 files corresponds to card number 2,  
and so on up to 972.mp3 which corresponds to  
card number 972.

Ensure the files are named correctly so the  
device plays the appropriate audio for each card.



DIY

This folder stores MP3 files created by recording.  
Please refer to the "Recording Button" instructions  
for how to record.

MP3 files in this folder should be named starting  
with the card number, ranging from 973 to 1022.

For example:

973.mp3 audio file corresponds to card number 973,  
1022.mp3 files corresponds to card number 2, and  
so on.



SYSTEM

This folder contains instructional audio that provides  
guidance to help users operate KidQuest.


You can replace these files with your own  
recordings, but please make sure to use the same  
file names.

You may do this by recording directly with  
KidQuest's recording function, renaming and  
pasting the files into this folder, or recording them  
on your computer before replacing them in  
KidQuest.

## OPERATIONS


### STEP 1

Turn on the  
power

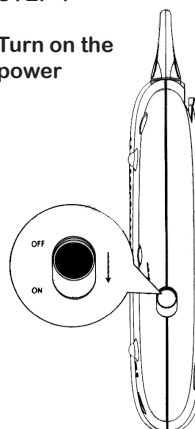

### STEP 2

Insert a card

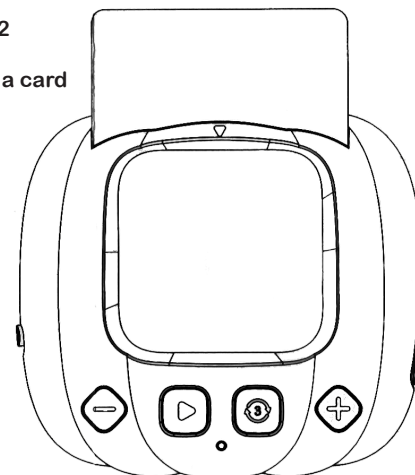

## PRODUCT SPECIFICATIONS

DIMENSION	105 mm (Height) x 95 mm (Width) x 15 mm (Thick)
NET WEIGHT	60 grams
BUILT-IN BATTERY	DC 3.7V
INPUT POWER	DC 5V 500mA / 1000 mA
CHARGER	Not included

**KidQuest** is a product by YCAA Publishing Ltd  
Contact us if you have any question or technical problem about  
this product. Our website is [www.en.YCAApublishing.com](http://www.en.YCAApublishing.com), and  
our email address is: [Contact@YCAApublishing.com](mailto:Contact@YCAApublishing.com)  
You can also contact us  
by this Canada phone number (1) 672 991 4564