


• 130 •

INSTRUCTION MANUAL

A 3D hologram fan by

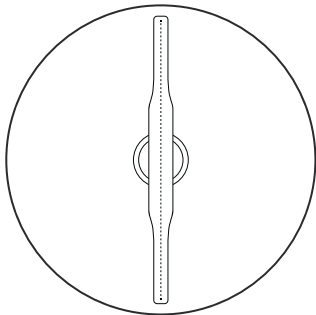

Learn more at

[www.dseeholofan.com](http://www.dseeholofan.com)



---

**Do not dismantle the device,  
plug in or take out the TF card  
without permission!**



## Security Warning

- 1 Do not touch the high speed running LED blades while operating. Before the device start, the light bar will turn white and flash several times, and then start. There is a risk of injury to the blades rotating at high speed when the fan is running. It is strictly forbidden to touch the fan blades to avoid personal injury.
- 2 Please fix the device properly before connecting to the power supply. Keep away from crowds, and set up relevant protective measures to prevent body damage.



### Attention:

Please read this instruction manual very carefully before using the devices. The users undertake all the personal injuries or property losses caused by not following this instruction manual when operating the devices.

DSEE HoloFan reserves the right to revise and explain this instruction manual. This instruction manual may be revised without further notice.

## Device Specifications


Device Model	DSEE 130
Size(cm)	1302mm
No.of LEDs per blade	512
No. of blade	8
Brightness	1800cd/m
Physical resolution	1024*1024
Color bits	24bit
Rotating speed	375/450rpm (50/60Hz fresh rate)
Input/working Voltage	220V/24V
Power rate	300W
Operation system	Android
WiFi	2.4G/5G WiFi, LTE
CPU	8core processor
Memory/Storage	RAM: 2G, ROM: 8G
Bluetooth	Supported
Waterproof	No


## Equipment List

Item	Quantity
DSEE 130 fan motor	1
DSEE 130 fan blade	8
Wall mount	1
Power adapter	1
Manual	1
Certificate	1
Warranty Card	1
M3*8 screw	32
M5*8 screw	1
Phillips screwdriver	1

## Product Overview

DSEE 130 holographic fan is a new generation of holographic screen products of DSEE HoloFan, with a product size of 1.3 meters and a dislocation display resolution of up to 2K. DSEE 130 holographic screen is designed with 8 light bars, equipped with android system, supports WiFi network, and supports Bluetooth connection. At the same time, the device can be controlled and managed through remote control, APP (iOS, Android), PC software and cloud platform, and can support rich picture and video formats to meet the display needs of different application scenarios.

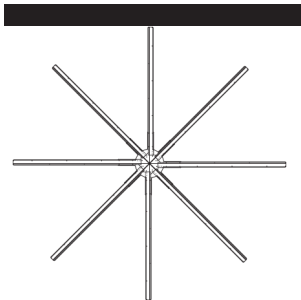

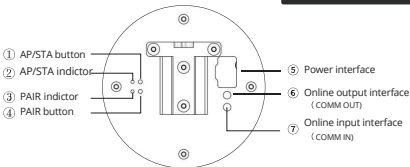

### ① AP/STA button:

Long press AP/STA button over 2 seconds, Can reset the device to normal mode (Hotspot mode in which the device actively transmits WiFi)

### ② AP/STA Indicator:

Indicates device network mode

### ③ PAIR Indicator:

Indicates the master and slave and running status of the device

### ④ PAIR button:


Long press to switch host-responder mode, short press to pair the remote control


### ⑤ Power interface:

Plug in the power adapter to supply power to the device

### ⑥ ⑦ Online output/input interface:

Use when the device is used in the union screen

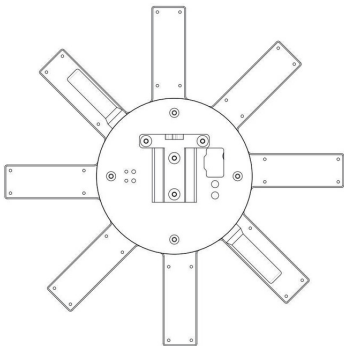

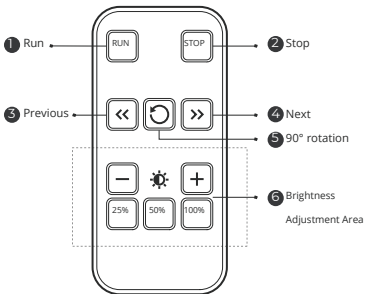

- 1 Run**: Start the device and switch from standby mode to running mode.
- 2 Stop**: Stop the device and switch from running mode to standby state.
- 3 Previous**: Switch to display the previous video in the playlist.
- 4 Next**: Switch to display the next video in the playlist.
- 5 90° rotation**: Rotate the screen 90° counterclockwise.
- 6 Brightness**: Adjust the brightness of the device.

### **Attach Device**

- 1 Connect the wall-mounted fixture to the pole to fix it, then put the device into the fixture, and fasten it with the screws provided.

### **Blade Installation**

- 2 Take the blade out of the package, put it into the corresponding card slot of the host, and fasten it with the screws provided.

### **Connect Power Supply**

- 3 Take out the power adapter, connect to the power interface and power on, the indicator light on the back is always red (if you press the auto-start button, it will display a green light)

## 4 Pair Remote Control

When the device is in standby, press the pairing button on the back, the corresponding indicator light will turn blue and flash, then press the 100% button in the brightness adjustment area of the remote control, the indicator will turn blue and flash quickly when pairing is successful, and then resume into the standby state indicator, the pairing is completed at this time

## 5 Turn Device On/Off

Press the start button of the remote control, the device indicator will flash red quickly, and the front light strip will flash white warning in full screen. After 3 seconds, the device starts up and the indicator turns pink. After the device is started, the front light strip enters the normal screen display state, and the boot is successful at this time. Press the stop button on the remote when turning off the device.



The DSEE HoloFan 130 supports wall hanging and bracket installation, with the following only The method of wall hanging installation is introduced. For vertical mounting of bracket, please consult distributors.

1



Wall Hanging Fastener



Installation Illustration


### Install the Fastener

Wall mounting fasteners are fixed directly to the wall using expansion screws or ordinary screws

On, make sure the sheet metal parts are installed firmly to prevent vibration when the equipment is rotating  
Movement causes equipment to fall and become dangerous.

2

Fixing structure behind the machine. Insert the bottom into the wall hanging fixture, simultaneously. Screw the M5 sheet metal parts as shown in the figure. Set the screws and complete the installation.

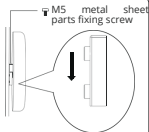




---

## DSEE Cloud Platform

This device supports remote control and management through the DSEE cloud platform. The cloud platform website address can be found at [www.dseeholofan.com](http://www.dseeholofan.com). Before connecting to the cloud platform, the device's WiFi mode should be switched to network mode (STA mode) manually. Detailed operation steps of switching to the network mode and switching back to the normal mode can be referred to the part about connection mode switch on Page 15.

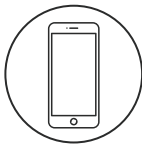

---

## **Mobile Software Instructions**

## Download Software

1

Go to <http://www.dseeholofan.com> and download the software.

2

## WiFi Connection

### 1. Device is in normal mode

- 1 Keep the smartphone connect to the device WiFi, type in the corresponding passwords.
- 2 Click  off or on to start or stop the device.


### 2. Device is in network mode

- 1 Keep the smartphone connect to the router which the device connect to.
- 2 Click  to search for devices which are connected to the network. Choose the device on the list, type in the corresponding passwords and turn to home page after connecting successfully.
- 3 Click  to start or stop the device.



## 3 WiFi Mode Switch



### 1. Switch from normal mode to network mode.

- 1 Click  to start the WiFi mode switch, type in the WiFi SSID and password of the router.
- 2 Click on the switch button.
- 3 If the device connects to the network successfully, then the AP/STA indicator at the back of the device turns blue. If the connection is failed, then the red light blinks.

### 2. Switch from network mode to normal mode.

- 1 Click  to start the WiFi mode switch, click the button to switch to normal mode.
- 2 When the switch is successful, the device WiFi can be found by smartphone or PC again.

## 4 Video or Picture Upload

Click  button, and click  to choose videos or pictures, name the chosen file and confirm to finish the upload.



## Clear the Playlist

- 5 Click the **+** to add or the **✖** to clear the playlist.



## Delete

- 6 Swipe left on the chosen video in the playlist, and click **✖** to delete this file.



## Play/Pause

- 7 Swipe left on the chosen file in the playlist. Click **▶** to play or pause the video.



8

## Adjust the Playlist Order

Long press on the chosen video, drag it upward or downward to the corresponding position to adjust the order of the playlist.



9



Video Name: xxxx.mp4

Number of displaying:

Cancel Confirm

## Set Number of Loops of Video Playback

Swipe left on the chosen video in the playlist, and click to enter the dialogue box to edit the number of loops of video playback. (Note: 0 means play this video indefinitely)



[www.dseeholofan.com](http://www.dseeholofan.com)