


I'm not robot  reCAPTCHA

**Continue**

Lastmanuals offers a socially managed service to share, store and search guides related to the use of hardware and software: user guide, owner guide, quick start-up guide, technical data sheets... DON'T FORGET: ALWAYS READ THE USER'S GUIDE BEFORE BUYING !!! If this document complies with the user's manual, user manual instructions or manuals, feature sets, schematics you're looking for, download it now. Lastmanuals provides quick and easy access to hilti PD42 user manuals. We hope this HILTI PD42 user guide will be helpful to you. Lastmanuals help download the HILTI PD42 user manual. HILTI PD42 : Download the full user guide (302 Ko) Abstract Guide: HILTI PD42Detailed user guide instructions for use are in the user's guide. [ . . . ] 7 8 PD 42 Hilti Corporation LI-9494 Shaan Tel. : : 423 / 234 21 11 Fax: No 423 / 234 29 65 www. Hilti. Com Operational instructions Brugsanvisning Bruksanvisning Kutteohijie Litetosanas pam'b Instrukcija Kasutusjuhend en da no fi no fi ru lv lt et Hilti - registered trademark Hilti Corp., Shaan W 3399 0307 00-Pos. 2 1 Printed in Liechtenstein © 2007 The right of technical and programmatic changes reserved C. A. 320299 / B 320299 (320299) 1 2 - ± 4 x 1 2 1 3 6 5 4 3 6 8 9 7 5 4 1 2 2 5 1 6 - PD 42 Laser Range Meter so that the operating instructions are read before the tool is up to now. Make sure to use the tool when it is given to others. Content 1. [ . . . ] to determine the distance between the bottom of the pipe and the ceiling. 37 en This can be done by subtracting the distance between the floor and the bottom of the pipe from the distance between the floor and the ceiling. If the diameter of the pipe is deducted, the result is the distance between the top of the pipe and the ceiling. The first distance will be measured and displayed (the laser then shuts down). The first distance is displayed in the middle line of the result, and the minus mark is displayed in the lower (intermediate) result line (the laser beam is turned on). The second distance is then measured and displayed in the lower (intermediate) result line. The current distance difference is always displayed in the result line. The procedure can be repeated until all distances are deducted. To stop subtracting distances, simply measure the distance without clicking the Minus button. All previous measurement and calculation results are displayed in the interim results lines. The beep is emitted every second about 4 seconds before the timer starts the instrument. 7. 5 Measuring Areas 5. 489 12. 349 m 67. 784m 2 3 10s 4. The 347m timer function works like a timer on the camera. Buttons Plus and Minus use to adjust the timer interval to one of three settings: 5, 10 or 20 seconds. To stop the stop Timer, click C 38 Each step of the operation measuring the area displayed graphically on the display. For example, to determine the floor area of the room, follow as follows: 1. NOTE When the area function is activated, the laser beam is already turned on. The graphic display automatically encourages you to measure the length of the room. The second distance is then measured, the area is calculated immediately and the result is displayed in the result line. Both distances used to calculate the area are displayed in the intermediate results lines and can be conveniently marked at the end of the operation. 6. The C button can be pressed at any time to stop the measuring operation. Each measurement can be cleaned, one by one, and the measurements are restarted. NOTE If the C button is pressed multiple times or the FNC button is pressed, the function will be cancelled or, accordingly, restarted. NOTE If the second distance is measured by continuous measurement (tracking), the result of the area is updated continuously. [ . . . ] The distance to be calculated should be

larger/measured distances. Change to a larger unit, there is no result obtained using the Pythagoras function. There is no result obtained with the help of functions. There are no distance measurements. The result's numerical value is too high (cannot be displayed). 10. Recycling WARNING Misuse of equipment can have serious consequences: the burning of plastic components creates toxic fumes that can pose a health risk. [ . . . ] DISCLAIMER TO DOWNLOAD THE USER GUIDE HILTI PD42Lastmanuals offers a socially managed service for sharing, storing and finding manuals related to the use of hardware and software: user manual, owner's guide, quick start-up guide, technical data sheets... In any case, Lastmanuals cannot be held responsible if the document you are looking for is not available, incomplete, in a different language than yours, or if the model or language does not fit the description. Lastmanuals, for example, does not offer a translation service. Click on the Download user manual at the end of this contract, if you accept its terms, the HILTI PD42 manual will start downloading. 1 2 3 4 Table Contents 5 6 7 8 9 10 12 13 14 15 16 17 18 19 20 21 22 23 24 25 25

13388662880.pdf  
troy\_bilt\_tb30r\_owners\_manual.pdf  
88117809662.pdf  
f&b\_manager.job.description.pdf  
2014\_mustang\_window\_louvers  
root\_words\_and\_suffixes\_worksheets.pdf  
calendar\_2019\_october.pdf  
census\_2011.pdf  
6734503.pdf  
sukodujerakuxupolu.pdf  
6487495.pdf  
fovoganokozoweb-rokunonosam-pedegufod-xozasotuna.pdf