

☐

I'm not robot

  
reCAPTCHA

Continue

This article explains the use of the 3ware RAID controller administration program. You can download it from the Hetzner mirror (the login credentials are listed in the server's delivery mail), or use it inside the rescue system. When downloading the program, please make sure you choose an architecture suitable for your operating system (x86 for 32Bit systems and x86\_64 for 64Bit systems). Once downloaded, remove the archive to the directory of your choice. If you use it in the UNIX (Linux/BSD) system, we recommend that it be executed and copied to the folder /bin to use it conveniently: cd/path/to/extracted/tw\_cli/ chmod s x tw\_cli cp tw\_cli /bin/tw\_cli Additional information on how to use the program can be found here on our mirror. As you can read the state of the RAID hardware First, please get the identifier installed controller RAID using the following command: Ctl Model (V)Ports Drives Units NotOpt RRate VRate BBU ----- u0 RAID-1 OK - - - 698.637 ON - Port Unit Status Size Blocks Serial ----- p0 OK u0 69 8.63 GB 146 5149168 S13UJ1C-704597 p1 OK u0 698.63 GB 1465149168 S13UJ1B-708871 In this example, one unit u0, which consists of two drives - p0 and p1. Replace u0 p0 and p1 with the identifiers you receive in the following examples. How to set up a HARDWARE RAID Regardless of whether changes to the existing RAID mode are required or if the new RAID needs to be configured, the first thing to do is remove the existing block (s): tw\_cli maint deleteunit c0 u0 As you have to specify multiple drives in the following commands, please keep in mind that : used for listing (e.g. for a lump) and - for ranges. For example p0:1:2 is the same as p0-2. Setup RAID 0 (with two drives, not recommended!): tw\_cli maint createunit c0 raid0 p0:1 Setup RAID 1 (with two drives): tw\_cli maint createunit c0 raid1 p0:1 Setup RAID 5 (with three drives): tw\_cli maint createunit c0 raid5 p0:1:2 Setup RAID 5 (with four drives): tw\_cli maint createunit c0 raid5 p0:1:2:3 Setup RAID 5 (with four drives and a starting size of 200GB): tw\_cli /rescue>/c0 add type=raid5 disk=0:1:2:3 v0=200 Setup RAID 6 (with four drives): tw\_cli maint createunit c0 raid6 p0-3 How to use the drives as JBOD The 3ware 9650SE controller can configure the drives as JBOD, which makes them usable as one large unit with the capacity the sum of all drives. drives. LSI/3ware recommends that the drives instead be configured as single drives. Show current status: tw\_cli /c0 show exportjbod /c0 JBOD Export Policy - from Enable JBOD: tw\_cli /c0 set exportjbod on Incorporating JBOD Export Policy on /c0... Done. How to start REBUILD with tw\_cli with DEGRADED RAID First, check the state of the RAID controller: Example RAID 1: Unit UnitType Status %RCmpl %V//M Band Size (GB) Cash AVrfy --- ----- u0 RAID-1 DEGRADED - - - - 698.637 ON - Port Status Unit Block Size ----- p0 DEGRADED .63 GB 1465149168 S13UJ1KS210609 p1 OK 698.63 GB 1465149168 S13UJ1N-600102 Degraded Discs must be removed from the array: tw\_cli maint remove c0 p0 If the disc is faulty, get it replaced on the next step, that can be requested through a robot. After that, the controller must be re-scanned: Now the recovery of the array can be launched: tw\_cli maint to recover c0 u0 p0 P0 Once this recovery is done will begin and status can be requested: Exit when recovery has been started: Unit UnitType %RCmpl %V//M Band size (GB) A CashVrfy ----- u0 RAID-1 REBUILDING 5 - 698.8.36 37 ON - The size of the port state block blocks the serial ----- p0 DEGRADED u0 698.63 GB 1465149168 S13UJ1KS210609 p1 OK u0 698.63 GB 1465149168 S13UJ1N-600102 If the recovery is interrupted due to errors of ECC You can force to restore (not recommended): tw\_cli /c0/u0 start restoring ignoreECC Other useful commands Show help and controller details Read the values of the SMART drive For the series 6000, 7000 and 8000 controllers: smartctl -a -d 3ware,p0 /dev/twe0 For controllers series 9000 : smartctl -a -d 3ware,p0 /dev/twa0 For a series of 9750 controllers: smartctl -a -d 3ware,p0 /dev/tw0 Export Drive Set Drive, as a hot spare tw\_cli/c0 add a raidtype-spare drive2 Page 2Page 3Page 4 Go to: Footer Content Newegg.com - a great place to buy computers, computer parts, electronics, software, accessories and DVDs online. With high prices, fast shipping, and top-rated customer service - Newegg Purchases are updated ™ If you're reading this post, please click on this link to reboot this page. (Don't use the browser Update button). Please email us if you are running the latest version of your browser and you still see this message. Newegg.com - Computer Parts, Laptops, Electronics, HDTVs, Digital Cameras and more! How do I know the price? Add it to your Go shopping cart for checkout, the price will be listed in OrderY can remove the product from your order by clicking the Change Cart button To save it, click Send order Why we can't show you details about Продукта? Некоторые производители вводят ограничения на то, как детали их продукции могут быть переданы. Facebook Twitter Instagram LinkedIn Pinterest YouTube Twitch Discord Mixer Если Adobe Reader не появляется при нажатии на ссылку для файла PDF, вы можете скачать Adobe Reader с веб-сайта Adobe. Downloads in the last 60 days: 0 All components All categories Category Description Operating system Version Release Download Driver Treiber 3Ware 9550 - 9650 - 9690 Treiber 3Ware 9550 - 9650 - 9690 WindowsAllgemein (Alle Versionen)Architecture: 32-Bit, 64-Bit 3.00.05.056 - 9.5.4 28/Sep/11 269,3 kB Driver Treiber VMware ESX / ESXi 4.0 Update 1 Virtualisierung [details] Treiber VMware ESX / ESXi 4.0 Update 1 VirtualisierungVMware ESX / ESXi 4.0 16-JAN-10 09/Aug/10 964,3 kB Driver LinuxRedHat Linux Enterprise Server 5.4Suse Linux Enterprise Server 11Architecture: 32-Bit, 64-Bit 9.5.3 04/Dez/09 10,5 MB Firmware 9.5.4 11/Nov/11 607,9 kB Firmware 9.5.3 04/Dez/09 600,4 kB Manuals March 2007 14/Nov/08 8,6 MB Manuals August 08 14/Nov/08 6,7 MB Manuals Version 9.5.2 Mai 2009 13/Okt/08 983,3 kB Manuals Installation Guide 3Ware BBU 23/Jun/08 984,7 kB Software Management-SW - 3DM2 CLI Windows [details]3DM2 CLI Windows from the 10.2.2.1/9.5.5.1 code set 8xxx/95xx/96xx/97xx Management-SW - 3DM2 CLI Windows WindowsAllgemein (Alle Versionen) 10.2.2.1/9.5.5.1 08/Apr/13 79,6 MB Software Management-SW 3DM2 CLI Linux Management-SW 3DM2 CLI Linux LinuxAllgemein (Alle Versionen) 10.2.2.1/9.5.5.1 21/Dez/12 10,0 MB Software Management-SW 3DM2 CLI FreeBSD Management-SW 3DM2 CLI FreeBSD 10.2.2.1/9.5.5.1 21/Dez/12 11,6 MB Software Management-SW 3DM2 CLI Open Solaris 10.2.2.1/9.5.5.1 21/Dez/12 42,6 MB Software Management-SW 3DM2 CLI Windows Management-SW 3DM2 CLI Windows WindowsAllgemein (Alle Versionen)Architecture: 32-Bit, 64-Bit 10.2.2.1/9.5.5.1 21/Dez/12 79,6 MB Software Virtualisierung [details] VirtualisierungVMware ESX / ESXi 4.0 10.2 19/Aug/10 6,0 MB Software Linux / Windows 32/64 [details] LinuxAllgemein (Alle Versionen)WindowsAllgemein (Alle Versionen)Architecture: 32-Bit, 64-Bit 9.5.3 04/Dez/09 8,3 MB Datasheet 28/Aug/08 693,6 kB Datasheet 28/Aug/08 301,9 kB Display archived downloads (37) (37) 3ware raid controller commands. 3ware raid controller setup. 3ware raid controller software. 3ware raid controller firmware. 3ware raid controller drivers download. 3ware raid controller bios not installed. 3ware raid controller driver. 3ware raid controller rebuild

normal\_5f8c753632a10.pdf  
normal\_5f8a7adfd09e4.pdf  
normal\_5f89b8edd57ee.pdf  
normal\_5f8a6e45df5a6.pdf  
normal\_5f8e04a541c7e.pdf  
san diego unified  
charles bronson solitary fitness pdf free download  
sharp el-1197piii calculator  
jason dandruff shampoo near me  
star wars the rise of skywalker visual dictionary pdf download  
blood type eating pdf  
altar of siena b1f guide cabal wiki  
the pearl pdf john steinbeck  
enfoque humanista en la educacion pdf  
kindle fire vs kindle fire kids  
mission impossible 4 in hindi 300mb  
5th grade reading log  
a christmas carol full book pdf  
elementos básicos da comunicação visual pdf  
advantages and disadvantages of fast food essay pdf  
repetitouch free (root) (ads) apk  
alcatel one touch 5036a rom  
13532444985.pdf  
2965745261.pdf  
aerated\_autoclaved\_concrete.pdf  
61103771373.pdf  
vativezefasedebosudujakit.pdf