


☐

I'm not robot

  
reCAPTCHA

Continue

## Manual for vtech cs6949

Información de contacto Base de manuales de instrucciones online © 2020 by ManualsBase.com. All rights reserved. This website or its third-party tools use cookies that are necessary for their operation and are necessary to achieve the purposes set out in the Cookie Policy. If you want to know more or revoke your consent to all or some cookies, please read the cookie policy. By closing this banner, scrolling on this page, clicking on a link or otherwise browsing, you agree to the use of cookies. BCGo [www.vtechphones.com](http://www.vtechphones.com) to register your product for advanced warranty support and the latest VTech product news. User's Guide CS6948-3 CS6949 CS6949-2 CS6949-3 DECT 6.0 cordless phone page 24Press the previous menu or idle mode without making any changes. Hold the button to clear the missed call indicator when the phone is not in use. While the phone rings, press to temporarily silence the base ringtone. 3 – lightOn when the phone is in use, or when the answering machine receives a call. On when a handset is registered. Flashes when an incoming call is made. Flashes when handsets are logged out. Flashes when another phone is in the same line.4 - Press to start or stop message playback. Flashes when there are new messages or memos in the response system. X/Press to delete the playback message or playback announcement. When you check the redial list, phone book, or caller ID log, press to delete a single entry. When typing names or numbers, press to delete a character or digit. Press once to repeat the playback message. Press twice to play the previous message. \*\*\*\*\*Press to jump to the next message.5 - Mute the microphone during a call. Temporarily silence the base ringtone while the phone rings. Press the side of all handsets when the phone is not in use. Press to turn the built-in call system on or off. / Press to make, answer or end a call. During a call, press and hold the quiet mode or turn it off. Press repeatedly to see other dialing options when checking a caller ID log entry.7 - To enter the space during text editing.8 - Temporarily switch to tone dialing during a call.9 - Repeatedly during a caller ID log check to add or remove 1 in front of the phone number before dialing it or saving it to the phone book. Hold the button to set or select your voicemail number.\*\*\*\*\*Page 3Congratulations on purchasing your new VTech product. Before using this phone, please read important safety instructions. This guide contains all the features and fixes required to install and operate your new VTech phone. Please read this manual carefully to ensure proper installation and operation. Ensure this innovative and feature-rich VTech product. Support, shopping and everything new at VTech can be found on our website at [www.vtechphones.com](http://www.vtechphones.com). In Canada, please visit [www.vtechcanada.com](http://www.vtechcanada.com).Telephones identified with this logo have reduced noise and interference when used with most T-coiled hearing aids and cochlear implants. The TIA-1083 compliant logo is a trademark of the Telecommunications Industry Association. Used under license. The ENERGY STAR® program ([www.energystar.gov](http://www.energystar.gov)) recognizes and promotes the use of products that save energy and contribute to the protection of our environment. We are proud to label this product with the ENERGY STAR® label, which complies with the latest energy efficiency guidelines. Important safety instructionsWhen using your phone equipment, basic safety precautions should always be followed to reduce the risk of fires, electric shocks and injuries, including the following:Read and understand all instructions. Follow all warnings and instructions marked on the product. Remove this product from the socket before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning. Do not use this product near water such as near a bathtub, washing bowl, sink, wash tub or swimming pool, or in a wet basement or shower. Do not place this product on an unstable table, shelf, stand, or other unstable surfaces. Avoid placing the PBX in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and vapours. Slots and openings in the back or bottom of the switchboard and handset are designed for ventilation. In order to protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or carpet. This product should never be placed nearby or over a radiator or heat register. This product should not be placed in an area where proper ventilation is not provided. This product should only be operated by the power source indicated on the label. If you're not sure how to use the power supply 1.2.3.4.5.6.7.8.TCompatible with the T-CoilTIA-1083Page 414Phone Base Speaker is: When the wired handset is called, press /SPEAKER to switch between the switchboard and the corded handset. When the hands-free device is active, the speaker and the /SPEAKER light turns on. VolumeTo adjust the listening volume to a cordless handset: Press /VOLUME or /VOLUME during a call. To adjust the listening volume at the switchboard: Press VOL or VOL . The volume settings for the handset and the hands-free device are independent. When the volume reaches the minimum or maximum setting, you will hear two beeps. Mute the mute function allows you to hear the other party, but the other party can not hear you. Press MUTE during a call. The screen displays Muted until the mute mute is switched off. Press MUTE again to continue the conversation. On the screen, the microphone briefly turns on.\*\*\*\*\*Join a call in progressYou can use the switchboard and a cordless handset or two cordless handsets at the same time on an external call. To join a call with a cordless handset: If a handset or switchboard is already being called, press or on another handset to join the call. Press OFF or place the handset in the handset charger to end the call. The call continues until both devices are suspended. To join a call to the switchboard: Lift the wired handset or press /SPEAKER. Place the wired handset back on the switchboard or press /SPEAKER to end the call. The call continues until both devices are suspended. Call WaitIf you subscribe to the wait service with your phone service provider, you will hear a warning tone if there is an incoming call while you are making another call. Press FLASH to put the current call on hold and make the new call. Press FLASH AT ALL TIMES to switch back and forth between calls. If you also subscribe to the caller ID service, you can see the caller's name and phone number while waiting for the call.\*\*\*\*\*Page 5Supply in your home or office, contact your dealer or local energy company. Do not rest on the power cord. Do not install this product where the cable is accessible. Never slide objects of any kind through the slots in the phone base or handset into this product, as they can touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the phone base or handset that are not the specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can result in an electric shock when the product is subsequently used. Do not overcharge sockets and extension cables. Unplug this product from the power outlet and refer maintenance to an authorized service facility under the following conditions: If the power cord or plug is damaged or frayed. If liquid has been spilled on to the product. If the product has been exposed to rain or water. If the product is not functioning normally by following the operating instructions. Fit only the controls that are covered by the operating instructions. Improper adjustment of other controls can result in damage and often requires extensive work by an authorized technician to bring the product back to normal operation.9.10.11.12.13.\*\*\*\*If the product has failed and the switchboard and/or handset has been damaged. If the product has a significant performance change.14. Avoid using a phone (except wirelessly) during an electric

storm. There is a remote risk of electric shock from lightning.15. Do not use any Phone to report a gas leak near the leak. Under certain circumstances, a spark may occur when the adapter is plugged into the socket or when the handset is replaced in its cradle. This is a common event associated with closing an electrical circuit. The user should not connect the phone to a power outlet or place a charged handset in the cradle if the phone is in an environment containing concentrations of flammable or flame-supporting gases, unless there is sufficient ventilation. A spark in such an environment could cause a fire or an explosion. Such environments may be: medical use of oxygen without adequate ventilation; Industrial gases (cleaning solvents; gasoline vapours; etc.); a leak of natural gas; etc.16. Place your phone's phone next to your ear only when it is in normal speech mode.17. The power supplies are designed to be correctly aligned in a vertical or floor-mounted position. The times are not designed to hold the plug in place when connected to a ceiling, a lower table, or a cabinet outlet. SAVE THESE INSTRUCTIONS••Page 625Call blockif you have subscribed to the Caller ID service, you can set the phone to block unknown calls and certain unwanted calls. The call block list can store up to 20 entries. When a call is blocked, the caller hears a simulated clocked sound for a ring cycle. The call receiver can answer the call during the first call if no caller ID information is available. Otherwise, the call will be disconnected. Block unknown callsAll incoming calls with unknown numbers are blocked. Press MENU when the phone is not in use. Press or select call block, then press SELECT. Press or select Calls w/o num, then press SELECT. Press or select Unlock or Block, then press SELECT. You hear a confirmation tone. Add a call block entryPress MENU when the phone is not in use. Press or select Call Block, and then press SELECT. Press SELECT to select The Block List. Press or select Add New Entry, and then press SELECT. When the input number is displayed, use the dial ingesrais to enter a number (up to 30 digits). 1.2.3.4.1.2.3.4.5.-OR Copy a number from the redial list by pressing REDIAL, then pressing it repeatedly, or REDIAL to find the desired number. Press SELECT to copy the number.6. Press SELECT to switch to the name.7. When typing name use the dial ingesraists to enter a name (up to 15 characters). Additional keystrokes indicate other characters on this button. The first character of each word is capitalized.8. Press SELECT to save. You hear a confirmation tone and then the screen returns to the previous menu. When entering names and numbers, you can: press or move the cursor to the left or right. Press DELETE on the cordless handset or X/DELETE on the phone base to delete a digit. Hold DELETE to delete all digits. Hold PAUSE to create a Pause (a p is displayed). Press 0 to add a space.\*\*\*\*\*Page 7BatteryCAUTION: Use only supplied Battery.Do do not dispose of the battery in a fire. Check with local waste management codes for specific disposal instructions. Do not open or mutilate the battery. Released electrolyte is corrosive and can cause burns or injuries to the eyes or skin. The electrolyte can be toxic if swallowed. Be careful when using batteries to avoid short circuiting with conductive materials. Charge the battery supplied with this product only in accordance with the instructions and restrictions in this guide. Precautions for users of implanted pacemakersHeart pacemakers (applies only to digital cordless phones):Wireless Technology Research, LLC (WTR), an independent research facility, led a multidisciplinary assessment of interference between portable wireless phones and implanted pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to doctors: Pacemaker patients should keep wireless phones at least six inches away from the pacemaker. Should NOT place wireless phones directly above the pacemaker, such as in a chest pocket when it is turned on. Should use the wireless phone on the ear opposite the pacemaker. The WTR assessment did not identify a risk for bystanders with pacemakers from other people using wireless phones. About Wireless PhonesPrivacy: The same features that make a cordless phone \*\*\*\*\*Conveniently create some limitations. Phone calls are transmitted between the switchboard and the cordless handset by radio waves, so that the wireless phone calls could be intercepted by radio receivers within range of the cordless handset. For this reason, don't remember that wireless phone calls are as private as those on wired phones. Power: The phone base of this cordless phone must be connected to a working power outlet. The socket should not be controlled by a wall switch. Calls cannot be made via the cordless handset if the phone base is disconnected, turned off, or power is interrupted. Possible TV interference: Some cordless phones work with frequencies that can cause tvs and video recorders to interfere. To minimize or prevent such interference, do not set up the cordless phone's switchboard nearby or on a TV or video recorder. In the event of interference, the removal of the cordless phone, which is further from the TV, reduces or eliminates the video recorder is removed, the interferences. Rechargeable batteries: Be careful when using batteries to avoid short circuiting with conductive material such as rings, bracelets and keys. The battery or conductor can overheat and cause damage. Note the correct polarity between and the battery charger. Nickel-Metal Hydride Batteries: Dispose of these batteries safely. Burn or do not pierce the battery. Like other batteries of this type, if burned or perforated, they could release corrosive material that could cause injury.\*\*\*\*\*Page 834Press SELECT to confirm this. The handset shows deletion... then no old messages and then returns to the previous menu. You hear a confirmation tone. Remote accessA two-digit security code is required to access the answering machine from any touch-to-tone phone. The default code is 19. You can use this default code or set your own. Choose your phone number from any touch tone phone. When the system plays your advertisement, enter the two-digit security code. Enter one of the following remote commands. Command Description1Play all messages.2Play new messages.3Save the current message (while playing).33 Delete all old messages.4Repeat the current message (while playing).5Stop.\*5 Listen to a list of remote commands.6Jump to the next message (during playback).\*7 Mark a new announcement.8Send the call.0Turn the call system. Hang up or press 8 to end the call.4.1.2.3.4.If you do not press buttons after entering the remote access code, all new messages will play. If there are no new messages, all old messages are played back. Once the new messages have been played, the phone announces the help menu options. If you do not press a button within 20 seconds, the remote access call is automatically disconnected. When the answering machine system's memory is full, the phone announces that the memory is full. Enter the remote access code. When the answering machine is turned off, the phone responds after 10 rings and announces: Please enter your FERAccess code. Set remote access codeYou can set your own remote access code from 00 to 99. Press or scroll to Answering sys, and then press SELECT. Press or scroll to Ans sys setup, and then press SELECT. Press or scroll to the remote code, and then press SELECT. Use the dial ingesrais to enter a two-digit number. -OR- Press or scroll to a desired two-digit number. Press SELECT to save and you will hear a confirmation tone.\*\*\*1.2.3.4.5.6.Page 9About the built-in answering machine and voice mail service ... 29 Set up your built-in answer system ..... 29Rotate the on or off ..... 29Standard announcement ..... 30Record your own announcement ..... 30Play your announcement ..... 30Options during playback: ..... 30Delete your announcement ..... 30Set Number of rings ..... 31Turn the call screening on or off ..... 31Turn the alarm tone of the message on or off ..... 31Voice-Instructions ..... 32Using 32Using built-in answer system ..... 32New message display ..... 32News playback ..... 33Delete all messages ..... 33Remote access ..... 34Set Remote Access Code ..... 34Call screening ..... 35Call interception ..... 35Record, play and delete notes ..... 35Using your built-in answering machine and voicemail service... 36Retrieving voicemail from the phone service ..... 36Retrieving voicemail ..... 36Set your voicemail number ..... 36Disable the new voicemail ads ..... 37Expand your PBX ... 37Screen Messages ..... 38Frequently asked questions ..... 40ECO mode ..... 43General Product Care ..... 43The RBRC® Seal ..... 44FCC, ACTA and IC regulations .... 44California Energy Commission Battery Charging Test Guide ..... 46Only for C-UL compliance ..... 47Limited warranty ..... 50Technical specifications ..... 52 52

walgreens cool mist humidifier manua , tales of the rays apk , normal\_5f9548ae9e014.pdf , monrovia plants catalog , normal\_5f89094d15d1f.pdf , normal\_5f88cb0e8f1c3.pdf , statistics of diabetes in the philippines 2018 pdf , viber apk pour android 2.3.6 , normal\_5faa5bde4e453.pdf ,