


I'm not robot



reCAPTCHA

Continue

1 DocuCentre S2520 DocuCentre S2320 User Guide 1 2 Microsoft, Windows Vista, Windows Server and Internet Explorer are either registered trademarks or microsoft trademarks in the U.S. and/or other countries. All trademarks/brands are trademarks or registered trademarks of their respective owners. A screenshot of a Microsoft product is reprinted with permission from Microsoft. For information about the license, contact the license. This guide of security instructions is preceded by a symbol. Always read and follow the instructions before following the necessary procedures. Data stored on the machine's hard drive can be lost if there are any problems on the hard drive. Fuji Xerox is not liable for any direct or indirect loss of data loss or caused by it. Fuji Xerox is not responsible for machine failure due to computer virus or computer hacking. Important 1. This guide is copyrighted with all reserved rights. Under copyright laws, this manual cannot be copied or modified in general or in part, without the written consent of the publisher. Parts of this guide can be changed without notice. 3. We welcome any comments on ambiguities, errors, omissions, or missing pages. 4. Never try any procedure on the machine that is not specifically described in this guide. Unauthorized exploitation can lead to failures or accidents. Fuji Xerox is not responsible for any problems with the unauthorized operation of the equipment. Exports of this product are strictly controlled in accordance with the laws relating to foreign exchange and foreign trade in Japan and/or the United States export control rules. Xerox, Xerox and Design, as well as Fuji Xerox and Design are registered trademarks or trademarks of Xerox Corporation in Japan and/or other countries. CentreWare is a registered trademark or trademark of Xerox Corporation in Japan and/or other countries. DocuWorks is a registered trademark or trademark of Fuji Xerox Co., Ltd. 3 Content Table 1 Before using the machine... 9 Foreword Types of Guides Using This Guide to the Organization of This Guide to The Conventions on Safety Notes Electrical Safety Machine Installation Operational Security Expendable Location Warning and Warning Label Warning... 21 Regulation of Radio Frequency Emissions (Class A) Product Safety Certification (UL, CB) Environment on license Libcurl FreeBSD MD Legal Settings Environment Notice Supported By Environmental Scanning Feature Interface Feature using the USB interface using the Ethernet Interface Installing the Machine's IP Address Installation (IPv4) Installation of the Machine's IP Address (IPv6) When using the device setting customization customization tool to set up the IP address of the activation port of communication to use the feature settings feature CentreWare Internet Services CentreWare Internet Services Supported Environment and Settings, starting CentreWare Internet Services Installing Elements on CentreWare Internet Services (Properties) Tab 4 Tab 54 Tab Address Book ... 54 Installing a print/scan driver... 57 Installing a print driver... 57 Product non-installation review... 59 components of the machine... 60 Front, Left... 60 Right side, Back... 61 Inside... 62 Duplex Automatic Tape Documents... 63 Power source... 64 Switching power to... 64 Switching power... 64 Energy saving mode... 65 Entering Power Saver mode... 65 Getting out of the power saver mode... 65 Control panel... 67 On fast buttons... 68 About icons on display... 70 On the default display screen... 73 Installing the default display... 73 Account mode... 75 types of account modes... 75 Writing text... 77 Installation Of Options Configuration Paper Loading ... 81 Types of paper... 82 Supported paper weights and leaf counts... 82 Supported paper type... 83 Unsuitable paper... 85 Storage and processing of paper... 85 Boot paper... 87 Download paper in Trays 1 to 4 (optional)... 87 Load paper in Tray 5 (bypass)... 88 Changing the size of the paper... 90 Changing paper size for Trays 1 to change paper Settings Copy... 95 Review of copying operations... 96 Posting the document... 96 Creating enhanced settings... 98 Entering the number of copies 5 Table Content Start copying Work on automatic rotation operations, Performed when copying The Cancellation of the Current Copy Job Check Status ID-Card Copy Advanced Copy Setting Easier / Darken Original Type One-Way Matched Page toward Offers Side Paper Reduce /Increase the Original's Original Size - Mandatory Exit Position - Linking Position To Erase Edge Management Copy Paper with Accounting Operations Using copying Procedure Scanning Placement Document Using Data scanning features using the PC app Sending scan data to the PC as the app Sends data to scan directly from the machine to PC operations while scanning The Cancellation of the Current Scan Work Work Work Advanced Scanner Settings Ease / Darken Original Type sided Resolution File Format Original Size Print Main Print Function Driver Print Operations While Printing Set Features Exit System Administration System Program List Of Tools Menu Items , отображаемые в режиме системы системы настройки системы Системы Настройки потребления Настройки Настройки Настройки Таймер Другие настройки Настройки настройки настройки IPv4 Адрес решения IPv6 Адрес IP-режим Настройки Ethernet Скорость IP-фильтр Настройки Скопировать Настройки / Darken Original Type One-Way Paper Offer Reduce/Increase Edge To Erase Sharpness Background Suppression. Suppression level Pre-installed Automatic Mapping ID Card Copy Settings Original type of Edge Card Number erase Crawl Settings ease / Darken Original File File Resolution Format (B/W) File format (color) Original size background suppression back. Suppression Level Compression Edge Sharpness Erase the maximum size of the application 7 Table Content Content Recipient Customer Management Office Confirm/Edit Reset Copied Impressions Machine Status Expendables Check Language Check IP Address Machine Checking user account information Check the meter print reports / Lists Notice Display ID-Card Guide Display Fast-Button Choice Timer Version Job Status Replacement Cartridge Drum Cleaning Machine Cleaning External Cleaning Document Cover and Document Glass Cleaning Documents Presser and Narrow Glass Strip Cleaning Documents Feeder Rollers Problem Addressing problems with problem with image quality problems copying problems can not copy problems with the output of print printing Fails to print output scan problems unable to download scanning data on the computer unable to send scan data in 8 Can't SMB) Scanning image quality Network Problems Associated problems with the use of TCP /IP (LPD/Port9100) Problems with The Use of CentreWare Internet Services Problems with Internet Functions / Intranet Connection Problems IPv4 Paper Jam's left cover (A) Paper Jam in One Tray Module Cover (B) Paper Jam in Two Tray Module Cover Additional Notes and Restrictions on the Use of Machine Notes and Restrictions on The Use of Notes and Restrictions on The Use of Notes copying feature and restrictions on the use of notes and restrictions on the use of notes and restrictions on the scanning feature when you connect to the Internet or intranet notes and restrictions when dealing with computer notes and restrictions for using SMB Notes and Restrictions to use TCP/IP (LPD/Port9100) Notes and restrictions for IPV6 Using the machine This chapter describes how to use this guide, as well as security notes and legal notices which you should read before using the machine. Preface... Ten types of guides... 11 Using this guide... 12 Safety Notes... 14 Position... 22 Environment... 22 About the license... 23 Legal notice... 25 10 1 Before using the forward to the car before using the machine 1 Thank you for choosing the DocuCentre S2520/S2320 (further called the machine). This guide describes how to drive a car and the precautions you should follow during To get the most out of the machine and use it effectively, be sure to read this guide before using it. This guide assumes that you have a basic knowledge of the operating environment of a person's computer in use and networking environments. For information about the environment of your personal computer in use and basic knowledge and network environment operations, refer to the manuals provided by the personal computer, operating system and network system. After reading this guide, be sure to keep it handy for a quick link. This will be useful if you forget how to perform operations or if a problem arises with the machine. Warning: This equipment will be inoperable when power from power grids fails. 10 11 Types of Manuals The following guides are provided with the machine. User Guide (this guide) Guide describes how to use copying, printing, and scanning functions, as well as how to install paper, perform day-to-day maintenance, make machine status settings, troubleshooting, and set up the network. The guide is included in Media (Software/Product Guide). The Basic Operating Manual (Booklet) Guide describes a quick link to core operations, daily maintenance and problem solving for this machine. The guide is included in Media (Software/Product Guide). Before using the Machine 1 (HTML) manual, the guide describes installation procedures and configurations for print drivers and printer environments. This guide is included in Media (Software/Product Guide). Print Driver Help Describes Printing and Operations Functions. For this machine, guides on additional components are available. Additional components come with a guide on the installation procedure, which provides information on how to customize the product and other details. 11 12 1 Before using the machine, using this guide before using Machine 1 This guide is designed for first-time machine users. It describes the main operations for copying, printing, and scanning functions. Organizing This Guide 1 2 This guide consists of the following chapters: Before using the machine describes how to use this manual and provides information about the license. The environment settings describe the environment required for the product review machine to work describes the names of machine parts, as well as major operations such as how to turn the machine on and off, how to use the Power Saver feature, and how to use CentreWare Internet services. Paper loading describes the types of paper and other media that can be used on the machine and how to load the paper into the tray. describes the main operation and features of the copy function. Scan describes the main operations and features of the scanning function. PrintSubor the main printing operations. Tools describe system administration mode, as well as how to change Options. The state of the machine describes how to check the malfunctions that occurred in the car and print out various reports. 10 Work Status describes how to check job status and how to remove jobs. 11 Maintenance describes how to replace consumables and clean the machine. 12 Problem solving describes troubleshooting procedures to solve problems with the machine. 13 The app describes machine specifications, additional accessories and warnings/limitations. 12 13 Using this guide to conventions Screenshots and illustrations used in this guide vary depending on the configuration of the machine and the additional components installed. Some items in the screenshot may not be displayed or available depending on the configuration of the machine. Procedures in this guide may vary depending on the driver and utility software used in connection with the updates. In this document, the computer refers to a personal computer or workstation. This guide uses the following terms: Important Note: Important Information You Should Read. Learn more about operations or features. This guide uses the following symbols: : Cross help included in this guide. Feature names, on-screen messages, and input. Before using Machine 1: Folders, files, apps, buttons, or menu names are displayed on the screen. Menu names, commands, windows, or dialog boxes displayed on your computer screen, as well as the names of the buttons and menus. The buttons are the hardware buttons on the control panel. Key : Keys on the computer keyboard. : The path to a certain point as part of the procedure on the control panel. For example: When you see Select Tools procedure, copy settings mean you need to select Tools and then select Copy Settings. The path to a specific element as part of the procedure on the computer. For example: When you see the to find files and folders procedure, click Start to Search for files or folders, it means you need to click Start, click Search, and then click For files or folders to search for files and folders. The orientation of documents or paper is as follows: „,long Edge Feed (LEF): „,Short Edge Feed (SEF): Downloading a document or paper in portrait orientation when viewed from the front of the machine. Download a document or paper in a landscape orientation when looking from the front of the machine. LEF Orientation SEF Orientation Feed Direction Channel 13 14 1 Before using the Safety Notes machine Before using Machine 1 Before using this product, read Safety Notes carefully for use safety. This product and recommended supplies have been tested and in accordance with strict safety requirements, including agency approvals and environmental standards. Follow the following safety instructions for use. WARNING Any unauthorized changes to the change adding new features or connecting to external devices cannot be covered by a product guarantee. For more information, contact your local Representative for Fuji Xerox. Follow all the warning instructions on this product. Warning signs mean the following: Used for an item that, if not followed strictly, can lead to death or severe or fatal injuries and the ability to do so is relatively high. Used for items that, if not followed strictly, can lead to severe or fatal injuries. Used for items that, if not followed strictly, can cause user injuries or damage to the machine. A: A symbol for the elements to pay attention to when handling the machine. Follow the instructions carefully to use the machine safely. Caution flammable Explodable Electric Impact heated surface Moving finger pinched object : Symbol for prohibited items. Follow the instructions carefully to avoid any dangerous action. Prohibited No Fire Don't Touch Don't Use Don't Tear in the Bathroom Down Stay Away From Wet Never Touch With a Wet Hand : Symbol for Items To Be Performed. Follow the instructions carefully to perform these important tasks. Instructions Unplug Ground / Earth 14 15 Safety Notes Electrical Safety This product must be operated by a power source, as indicated on the product data plate. Consult your local energy company to check if your power supply meets the requirements. WARNING: Connect this product to the earth's protective chain. This product comes with a fork that has a protective ground pin. The fork is placed only in the ground of the electrical outlet. It's a security feature. If the plug does not fit the socket, contact the electrician to replace the socket to avoid the risk of electric shock. Never use a grounded adapter connector to connect a product to an electrical outlet that doesn't have a land connection terminal. The wrong connection of the conductor's grounding can lead to an electric shock. Connect the power cord directly to the grounded electrical outlet. Don't use an extension cord, multi-plug adapter or multiple connectors to prevent overheating and fire accidents. Consult a local Fuji Xerox representative to see if the outlet is grounded. Connect this product to a chain branch or socket that has a larger capacity than the nominal amp and voltage of this product. See the data plate on the back of this product for its nominal amps and voltages. Never touch the power cord with wet hands. This can lead to an electric shock. Before using Machine 1, don't put the object on the power cord. Keep the plug joint free of dust. A dusty and humid environment can result in a minute of electric current in the connector. This can generate heat and eventually lead to a fire accident. To avoid the risk of electric shock and fire, use only the power cord supplied with this product or those assigned to Fuji Xerox. The power cord is an exclusive use for this product. U U Use it for any other product. Do not damage or change the power cord. Damage and change can generate heat and eventually lead to an electric shock or fire accident. If the power cord is damaged or the wires are exposed, contact your local Representative fuji Xerox to replace it. Do not use a damaged or uninsulated cord to avoid the risk of electric shock and fire. When cleaning this product, always turn it off and turn it off. Access to the interior of a live machine can lead to electrocution. Do not disable or connect this product with the switch turned on. Connecting and disabling a live connector can deform the plug and generate heat, and eventually lead to a fire accident. Hold the plug not the cord when disabling this product, or it may damage the cord and cause an electric shock or fire accident. 15 16 1 Before using the machine, turn off and disable the product when it is not in use on weekends or long holidays. Before using the machine once a month, turn off this product and check if the power cord is plugged firmly into the electrical outlet; The fork is not over-heated, rusting or tilting; The socket and electrical outlet are dust-free; and the power cord is not cracked or worn out. Once you notice any unusual state, turn this product off and turn it off first and contact your local Fuji Xerox representative. 1 Machine installation Don't find this product where people might step on or trip over the power cord. Friction or excessive pressure can generate heat and eventually lead to an electric shock or fire accident. Never find this product in the following places: Near radiators or any other heat sources Near volatile flammable materials such as curtains in a hot, damp, dusty or poorly ventilated environment In a place of receiving direct sunlight near the stove or moisturizers This product weighs 33 kg. When moving it, always wear it by a team of three or more people to avoid improper treatment or injury. When lifting this product, the first two people to keep the bottom of the folded bypass tray on the left side of the product, and the third person to keep the handrail provided on the right side of the product. Never lift it by capturing any other areas. This will prevent you from dropping the product and getting back pain or injury. Find this product on a level and a solid surface that can withstand its weight. Otherwise, when tilted, the product can fall and cause injury. 16 17 Safety Notes find this product in a well-ventilated area. Do not interfere with the vents of the product. Keep a minimum clearance as follows for ventilation and access to the socket. product if there is an abnormal condition. 80 With Duplex Automatic filing before using the machine (Unit:

mm) Do not tilt the product at more than 10 degrees angle. Otherwise, it can fall and cause injury. front rear front left right Always lock the wheels of this product after installation. Otherwise, it can fall or slide and cause injury. 17 18 1 Before using the machine to bundle wires and cables, always use cables and spiral tubes that Fuji Xerox supplies. Otherwise, it can lead to some defects. Before using Machine 1 Other operational safety to keep this product in good performance and condition, always use it in the following environment: Temperature: C Humidity: 15-85% When the product stays in a cold room and the room is quickly heated by the heater, the condensation of dew can form inside the product and cause partial removal when printed. The operator's product maintenance procedures are described in the customer's documentation supplied with the product. Do not conduct any other maintenance procedures that are not described in the documentation. This product has a safety design to prevent operators from accessing dangerous areas. Dangerous zones are isolated from operators by lids or protectors that require a tool to remove. To prevent electric shock and injury, never remove these lids and treads. To avoid the risk of electric shock and fire, turn off and disable the product quickly in the following conditions, and then contact your local Representative Fuji Xerox. The product emits smoke or its surface is unusually hot. The product emits an unusual noise or smell. The power cord is cracked or worn out. The switch, fuse or any other safety device is activated. Any liquid is poured into the product. The product is soaked with water. Any part of the product is damaged. Do not insert any object into the slots or holes of this product. Do not put any of the following on the product: a liquid container such as flower vases or coffee cups Metal parts such as staples or clips of heavy objects If the liquid is spilled or the metal parts slipped into the product, it can cause an electric shock or fire. Do not use conductive papers such as origami paper, carbon paper or coated paper. When the paper is closed, it can cause a short circuit and eventually a fire. 18 19 Safety Notes Use specially designated cleaning products when cleaning this product. Other cleaning materials can lead to poor product performance. Never use aerosol cleaners to avoid ignition and explosion. If you need to pull out the tray to remove the paper jam, contact your local Fuji Xerox representative. Do not pull out the tray, otherwise it can lead to injuries. Never play cd-ROM delivered with a product on an audio player. Always use CD-ROM Otherwise, a great sound can damage audio players or your ears. CAUTION Laser Safety: Any operations or adjustments not specified in the manual of operation can cause dangerous exposure to light and ultimately burn injury or loss of vision. This product has been tested it is found to meet the requirements of Class 1 laser equipment defined by the international standard IEC60825 and has no risk of exposure to light. The product has no hazardous light emissions because it has light protection components and covers to close in all light beams during operation and maintenance. Before using Machine 1 Keep electrical and mechanical safety locks active. Keep the security lock away from magnetic materials. Magnetic materials can accidentally activate the product and cause an electric shock or electric shock. Do not try to remove the paper deeply stuck inside the product, particularly the paper wrapped around the alloy unit or the heat roller. Otherwise, it can lead to injury or burns. Turn off the product immediately and contact your local Fuji Xerox representative. Do not use excessive force to hold a thick document on the document glass. This can break the glass and cause injuries. Air well during a long operation or mass copying. This can affect the air environment of the office due to odors such as ozone in a poorly ventilated room. Provide proper ventilation to ensure a comfortable and safe environment. Expendable consumables in accordance with the instructions given on its packaging or container. Never use a vacuum cleaner for a spilled toner and residual toner in this product, cartridge toner or toner bottle. It can catch fire with electric sparks inside the vacuum cleaner and cause an explosion. Use a broom or wet cloth to erase the spills. If you've shed a large amount of toner, contact your local Fuji Xerox representative. 19 20 1 Before using the machine before using machine 1 Never throw the cartridge toner into the open flame. The remaining toner in the cartridge can catch fire and cause burns or explosion. If you no longer need a toner cartridge, contact your local Fuji Xerox representative for recycling. WARNING: THE RISK OF EXPLOSION IF THE BATTERY IS REPLACED BY THE WRONG TYPE. RECYCLING USED BATTERIES ACCORDING TO THE INSTRUCTIONS. Keep drum cartridges and toner cartridges within reach of children. If a child accidentally swallowed a toner, spit it out, rinse his mouth with water, drink water and immediately see a doctor. When replacing drum cartridges and toner cartridges, be careful not to spill the toner. In the event of toner spills, avoid contact with clothing, skin, eyes and mouth, as well as inhalation. If the toner is poured on the skin or clothing, wash it with soap and water. If you get a particle toner in your eyes, wash it with plenty of water for at least 15 minutes until the irritation disappears. See your doctor if necessary. If you inhale toner particles, to fresh air and rinse your mouth with water. If you swallow a toner, spit it out, rinse your mouth with water, drink plenty of water and see a doctor immediately. Fusion unit safety when removing removal By fused the device, always turn off the first and wait for 40 minutes until it cools down. 20 21 Security Notes Location Warning and Caution Labels Always follow all warning instructions marked or supplied with this product. To avoid the risk of burns and electric shocks, never touch the area with high temperature or high voltage marks on. Before using Machine 1 21 22 21 Before using machine regulation before using Machine 1 Radio Frequency Emissions (Class A) This product has been tested and installed in accordance with restrictions for a Class A digital device, in accordance with the International Standard of Electromagnetic Interference (CISPR Publ. 22) and Radio Communications Act 1992 in Australia/New York. These restrictions are designed to provide reasonable protection against harmful interference in the operation of the product in the commercial environment. This product generates, uses and can emit radio frequency energy and, if not installed and used in accordance with the customer's documentation, can cause harmful interference with radio communication. The operation of this product in a residential area can cause harmful interference in which case the user is obliged to correct the interference at his own expense. Changes and changes to this product that are not specifically approved by Fuji Xerox may revoke the user's authority to operate the equipment. Product Safety Certification (UL, CB) This product is certified by the following agency using these safety standards. Standard TUV IEC Agency :ed 2 Environment For environmental protection and efficient use of resources, Fuji Xerox reuse returned toner cartridge and cartridge drum to recycle parts, recycle materials or restore energy. Proper removal is required for the cartridge toner and drum cartridge is no longer required. Don't open the toner cartridge or drum cartridge. Return them to your local Representative Fuji Xerox. 22 23 About License License This section describes license information. Don't forget to read it. Licurcl COPYRIGHT AND PERMISSION NOTICE Copyright (c) Daniel Stenberg. All Rights Reserved. Permission to use, copy, modify and distribute this software for any purpose with or without a fee is granted, provided that the aforementioned copyright notice and this permission notice appear in all copies. BEFORE using the machine 1 software AS IS, WITHOUT WARRANTY ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO MERCANTIAN GUARANTEES, FITNESS FOR A SPECIFIC GOAL AND NONINFRINGEMENT THIRD PARTY RIGHTS. IN NO CASE ARE THE AUTHORS OR RIGHTS HOLDERS LIABLE FOR ANY CLAIM, DAMAGE OR OTHER LIABILITY, WHETHER IN UNDER CONTRACT, TORT OR OTHERWISE ARISING FROM, OUT OR IN CONNECTION WITH SOFTWARE OR USE OR OTHER TRANSACTIONS IN THE SOFTWARE. Except in the cases contained in this notice, the name of the name the owner should not be used in advertising or otherwise to promote the sale, use or other transactions in this software without the prior written permission of the copyright holder. FreeBSD This product contains some of the FreeBSD codes. FreeBSD Copyright FreeBSD Project. All rights are reserved. Redistribution and use in original and binary forms, with or without change, is permitted under the following conditions: Redistribution of source codes must retain the aforementioned copyright notice, this list of conditions, and the following reservation. Binary redistributions should reproduce the aforementioned copyright notice, this list of conditions and the following reservation in documentation and/or other materials provided by the distribution. THIS SOFTWARE IS PROVIDED BY THE FREEBSD PROJECT AS IT IS, AND ANY EXPRESS OR IMPLIED GUARANTEES, INCLUDING, BUT NOT LIMITED TO, IMPLIED TRADE AND SUITABILITY GUARANTEES FOR A SPECIFIC PURPOSE ARE DISAVOWED. IN NO EVENT SHALL THE FREEBSD PROJECT OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES 23 24 1 Before using the machine before using the machine 1 MD5 (INCLUDING, BUT NOT LIMITED TO, PURCHASES OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA OR PROFIT; OR INTERRUPTION OF BUSINESS), however, BEFORE AND ON ANY THEORY OF RESPONSIBILITY, BE IN THE CONTRACT, STRICT RESPONSIBILITY, OR TORT (INCLUDING THE FREE OF THE PART OF THE GOOD GOODS OR OTHER WAY), THE EXPERIENCE OF THE USE, DATA OR PROFIT; OR INTERRUPTION OF THE BUSINESS, however, IS BOTH IN THE THEORY OF RESPONSIBILITY, WHETHER IN THE CONTRACT, OR TORT (OR TORT) The views and conclusions contained in the software and documentation are the views of the authors and should not be interpreted as representing the official policy expressed or implied in the FreeBSD draft. Copyright (C), RSA Data Security, Inc. Created all rights protected. A copy and use license for this software is granted as identified as RSA Data Security, Inc. MD5 Message-Digest Algorithm in all materials mentioning or referring to this software or this feature. The license is also granted for the receipt and use of derivatives, provided that such works are identified as derivatives from RSA Data Security, Inc. MD5 Message-Digest Algorithm in all materials mentioning or referring to the work received. RSA Data Security, Inc. makes no statements regarding the purchase of this software or the suitability of this software for any specific purpose. It is provided as is without a direct or implied guarantee of any kind. These notifications must be stored in any copy of any part of this documentation and/or Ensure. 24 25 Legal notice of copying or printing certain documents may be illegal in your country. Those found guilty could be fined or imprisoned. Below are examples of items that may be illegal to copy or print in Currency banknotes and bank checks and government bonds and securities passports and identity cards Copyright material or trademarks without the consent of the owner of postage stamps and other revolving instruments This list is not comprehensive and is not assumed to be responsible for either its completeness or accuracy. If in doubt, contact your lawyer. Before using machine 1 25 26 1 Before using the machine before using the machine 1 26 27 2 Environmental Settings This chapter describes the operating environment of the machine. Note that some models don't need to do the environment settings described in this chapter. Such models, an additional component is required. For more information, contact our Customer Support Centre. Supported environment... 28 Interface cables... 30 Installing a network environment... 32 Activation of the communication port for use... 36 Installing the dispatch function... 38 Using CentreWare Internet services... 41 Installing a print/scanner driver... 57 28 2 Environment Settings Supported environment This section describes the environment settings required to use printing machines and scan functions. The environment settings of the printing function 2 Machine can be connected directly to the computer for use as a local printer, or can be connected to the network for use as a network printer. Local USB Network Connection LPD /Port9100 Use as a local printer Connect the machine to your computer using a USB cable. Use a network printer to print from networked computers using the TCP/IP protocol. To use the machine as a network printer, you need to activate the port for printing. LPD: Activate this option when using the LPD port. Port9100: Activate this setting when using port Port9100. For information on how to install TCP/IP, please contact Network Environment Installation (P.32). For information on how to activate the port of communication, contact The Port Activation for use (P.36). The Machine Scanning feature supports the following scanning features: Using Scan's USB connection with the PC app uses a USB connection to import scanning data on your computer using the compatible TWAIN app or Windows Image Acquisition (WIA). To use this feature, you need to install a media scanning driver (Software/Product Manual). Note To install the scan driver, follow the instructions provided in the Media (Software/Product Manual) guide. For information on how to use this feature, contact P.120. 28 29 Scan-supported environment PC connections use the TWAIN (SOA) network to import scanning data on a computer with a compatible TWAIN or Windows Image Acquisition (WIA) app. To use this feature, you need to install a media scanning driver (Software/Product Manual). Note To install driver scan follow follow (HTML) included in Media (Software/Product Guide). For information on how to use this feature, contact P.120. Scan to use the SMTP protocol to send a document scanned by the machine as an application. The SMTP port must be activated to send the scanned data as an attachment. (Install at the time of shipment at the plant: Included) This feature is also used to set the head and body settings and the SMTP server used in the shipment, as well as the recipient's address (system administrator address) to notify when the transmission error is made. For information on how to activate the SMTP port, contact The Link Port Activation for use (P.36). For information on how to install an SMTP server, please contact SMTP Settings (P.38). For information on how to enter the headline and body, refer to the Title and Body Settings (P.39). For information on how to set up a system administrator's address, please contact the Administrator's Address (P.44). For information on how to use this feature, refer to sending scan data to your PC as an app - (P.121). Setting up the 2 Scan environment on the PC (Network) uses the SMB protocol to send scanned data directly from your computer to your computer. To save scanned data on your computer, you need to activate the small and medium-sized business port. (Installation at the time of shipment at the plant: Included) For information on how to activate a small and medium-sized business port, contact The Activation of the Communication Port for use (P.36). For information on how to use this feature, refer to sending scan data directly from machine to PC (P.123). 29 30 2 Environment Settings Interface Cables When connecting the machine directly to the computer, use the USB interface. When you connect your machine to the network, use the Ethernet interface. Using the USB Interface 2 environment settings, the machine supports the USB 2.0 interface. To connect the USB interface: 1 Click the power switch on position to turn the power off. Note that the display is off. 2 Connect the USB cable to the USB 2.0 interface connector. 3 Connect the other end of the usb cable to your computer. 4 Tap the power switch to the position to enable the power on. Using the Ethernet Machine interface supports the interfaces 100BASE-TX and 10BASE-T Ethernet. To connect the Ethernet interface: 30 31 Interface Cables 2 Tap power switch on position to enable power OFF. Note make sure the display is off. 2 Connect the network cable to the Ethernet interface connector. Note Preparing a network cable is suitable for connecting to the network. When replacing a network cable to our Customer Support Center. Settings Environment 2 3 Tap power switch on position to enable power ON. 31 32 2 Settings Environment Setting Network Environment This section describes how to make settings settings use the TCP/IP protocol. Please note that the machine supports IPv6 addresses in the IPv6 network environment. For more information, contact the Machine's IP Address Installation (IPv6) (P.32). Environment 2 Installation of the Machine IP Address (IPv4) To use the TCP/IP protocol, you must set the machine's IP address. By default, the machine automatically receives its IP address. This option automatically sets the machine's IP address when the machine is connected to a network containing the DHCP server. Print a report on the system's settings to check whether the machine's IP address is installed. You can also check your IP address with the following methods: on the Status machine screen, use The Tool Menu elements using CentreWare Internet Services For information on how to print a report on the system's settings, refer to Printed Reports/Lists (P.167). For information on how to check the status of the machine on the screen, please refer to the Checking the IP Address of the Machine (P.164). For information on how to test the use of tools, refer to Network Settings (P.147). For information on how to check the use of CentreWare's Internet services, please contact TCP/IP (P.45). If the MACHINE'S IP address is not installed, set up an IP address using the printer customization tool to set up the IP address included in the Media (Software/Product Manual) or use the control panel to change the Get ip address option to Static. Please note that if you have a DHCP server on the network, the machine's IP address can be changed, so check the address periodically. The machine can automatically obtain address information using the BOOTP or RARP server. To use the BOOTP or RARP server to purchase the machine's IP address, use the dashboard to change the Get ip address setting to BOOTP or RARP. For information on how to use the printer customization tool to set up your IP address, please contact When using the printer customization utility to set up the IP address (P.33). For information on how to install an IP address from the control panel, please contact Network Settings (P.147). Installing the Machine's IP address (IPv6) The machine supports IPv6 addresses in the IPv6 network environment. The machine's IP address type is set on IPv4 by factory default. To use the machine in the IPv6 network environment, set the IP address type for IPv6 or both types. The IPv6 address is set automatically when the machine restarts. Print a report on the system's settings to verify the IPv6 address. You can also check your IP address with the following methods: on the Status machine screen, use The Tool Menu elements using CentreWare Internet Services For information on how to print a report on the system's settings, refer to Printed Reports/Lists (P.167). To get how to check the status of the machine on the screen, refer to the Checking the IP address of the machine (P.164). 32 33 Set up a network environment to get information on how to Use the tools to refer to Network Settings (P.147). For information on how to check the use of CentreWare's Internet services, please contact TCP/IP (P.45). You can set a fixed IPv6 address for the machine using any of the following methods: Use the printer customization tool to set up your IP address. Use the control panel to set it up manually. Enter system administration mode. From the Tools menu, select Network Settings and Ip-Mode Settings. Set IP mode settings on IPv6 or Double Stack. From the IPv6 menu, install Set IPv6 to Enable and then enter the IP address into the IP address. Use CentreWare Internet services to make the setup by hand. Print a report on system settings to automatically check a set of addresses and then use the address to access CentreWare's Internet services. From the Properties tab, select Link and Protocols by TCP/IP IP Mode. Install IP mode on IPv6 or Double Stack. The IPv6 address can be entered manually if the Enabled Manual Address checkbox is checked according to IPv6. For information on how to use the printer customization tool to set up your IP address, please contact When using the printer customization utility to set up the IP address (P.33). For information on how to install an IP address from the control panel, please contact Network Settings (P.147). For information on how to make customization from CentreWare Internet services, refer to Installation Elements on CentreWare Internet Services (P.43). Environment 2 Settings When using the printer customization utility to set up your IP address, this section describes how to set up an IP address using the printer customization utility to customize the IP address included in the media (Software/Manual Product). It's important when using the printer customization tool to set up your IP address to make sure the machine isn't in use or in system administration mode. 1 Insert media (Software/product guide) into your computer. The launcher works automatically. 2 In the Administrator Tools tab, select Start installing a printer to set up your IP address from the administration tools, and then click Start. A printer customization tool has been launched to set up the IP address. 33 34 2 Wednesday 2 Settings 3 Make sure the network cable is connected to the machine and then click Next. Settings Environment 2 4 How do you see a list of available MAC addresses and addresses, select a machine and click Next. If you already have the MACHINE'S IP address, click Enter the IP Address and enter the IP address directly in the displayed window. 5 If necessary, make extended settings and then click Next. 34 35 After confirming the information you've displayed, click Apply. These settings apply. 7 Click Finish to exit the printer customization utility to set up your IP address. When you set it up correctly, the machine automatically reboots. Restarts. Settings 2 8 confirms the assigned IP address after the setup process is complete with one of the following methods. Printing a report on system settings on the State of the Machine screen using tool menu elements using CentreWare Internet services to get information on how to print a system settings report refers to a link to Printed Reports/Lists (P.167). For information on how to check the status of the machine on the screen, please refer to the Checking the IP Address of the Machine (P.164). For information on how to test the use of tools, refer to Network Settings (P.147). For information on how to check the use of CentreWare's Internet services, please contact TCP/IP (P.45). 35 36 2 Settings Environment Activation Port Connection to use The Internet Services CentreWare to activate the port of communication that you want to use. You can activate the following ports: Port Description Settings 2 SNMP SMB LPD Port9100 Send the TWAIN Network to Activate this port to use the SNMP protocol (used for operations such as downloading information from the printing driver's car). Activate this port to use Scan on the PC (Network). Activate this port for printing when using LPD. Activate this port for printing with Port9100. Activate this port to send. Activate this port for scanning using a PC-based app For information on how to make settings from CentreWare Internet Services, refer to Installation Items on CentreWare Internet Services (P.43). To activate the port of communication: 1 Start CentreWare Internet Services. For information on how to start CentreWare Internet Services, contact Starting CentreWare Internet Services (P.42). 2 Click on the Properties tab 3 From the menu on the left, select Link. 36 37 Activate the port to use 4 click Port Settings and check the check box of the desired port. 5 Click Apply. Note Reboot the machine to enable new settings. Environment Settings 2 37 38 2 Environment Settings Setting Environment Settings function sending SMTP Setting Environment 2 Use the SMTP server to send. Use centerWare Internet Services to set up the SMTP server. The items that will be installed are shown below. SMTP Server IP address/ host port number to send credentials to the machine to access the SMTP server to send automated emails Description of the name of the entry, enter the IP address of the SMTP server as an IP address or IPv4 or IPv6 or in FD format (up to 256 characters). Set the SMTP port number (1 to 65535). Choose No or SMTP AUTH to indicate whether you should authenticate SMTP when you submit. Enter the login name to the SMTP server (1 to 64 characters of the ASCII code). Password Enter SMTP (1 to 64 characters of ASCII code). Reprint the password Check the password of the SMTP server authentication you entered by importing it here. Note If you've chosen No for For the machine to access the SMTP server to send automated s, you can leave the entry name, password, and retype fields blank. To make the settings: 1 Start CentreWare Internet Services. For information on how to start CentreWare Internet Services, contact Starting CentreWare Internet Services (P.42). 2 Click on the Properties tab 38 39 Installation of the Send 3 Feature From the menu on the left, select Link to Protocols. 4 Click SMTP Server and enter settings. Settings Environment 2 5 Click Apply. Header and Body Settings When you send a scanned document as an app, you can enter the title and body. Use CentreWare Internet Services to create settings. The items that will be installed are shown below. Enter the message description to 128 characters of the ASCII code. (Default: Scan data (machine model name)) Enter up to 256 characters of the ASCII code. Note To send, you need to set the address of the system administrator. You can't send an email unless it's installed. For information on how to set up a system administrator's address, please contact the Administrator's Email Address (P.44). To make the settings: 1 Start CentreWare Internet Services. For information on how to start CentreWare Internet Services, contact Starting CentreWare Internet Services (P.42). 39 40 2 Wednesday 2 Settings Click on the Properties tab. 4 Click the default button and type Subject, Message and Maximum App Size. 5 Click Apply. 40 41 Using CentreWare Internet Services CentreWare Internet Services CentreWare provides services such as changing settings using a web browser on a computer connected to the TCP/IP network environment. Please note that the machine's IP address must also be installed. For information on how to set up an IP address, please contact Network Environment Installation (P.32). If you change your settings with CentreWare Internet Services, the machine must be on standby or Power Saver. Environment Settings 2 Supported Environment and Settings operating systems and web browsers Operation CentreWare Internet Services has been tested for the following web browsers: Operating system web browsers Windows 8 Windows Internet Explorer 10 Windows Server 2012 Windows Internet Explorer 10 Windows Internet Explorer 10 Windows 7 Windows Vista Internet Explorer 7 Windows XP Internet Explorer 6 Recommended by Mozilla Firefox 3.x, Netscape 7.1 Navigator Web Browser Settings with the address of the machine in the web browser. Please note that if you specify the address of the machine using a proxy, the service response time may be slow or screens may not show up. If these problems arise, you need install the machine's IP address in a web browser and not proxy. You can watch your web browser's guide on how to create settings. You will also need to do other web browser settings to make CentreWare Internet services work properly. The following procedure is based on Internet Explorer 42 2 Environment Settings 1 From the Tools menu, select Internet Options. 2 In the General tab, click Settings under Temporary Internet Files. 3 In the Settings dialog field, select Check new versions of saved pages: 4 Select Every visit to the page or Every time you start Internet Explorer. 5 Click OK. Settings Environment 2 6 Click OK in the Internet Options dialog field. Launch CentreWare Internet Services to launch CentreWare Internet Services: 1 Launch Computer and Web Browser. 2 In the address page of your web browser, enter the IP address or URL of the machine, and then tap the key. The top page of CentreWare's internet services is displayed. Example IP Address (IPv4) Example IP Address (IPv6) Example URL Note If your network uses DNS (Domain Name System) and the name of the car owner is registered on the domain name server, you can access the machine using an internet address combining the owner's name and domain name. For example, if the host's name is myhost and the domain name example.com, the internet address myhost.example.com. When you specify your port number, add: and the port number after the IP address or internet address. The IPv6 address cannot be manually entered in some cases depending on the web browser you are using. HTTPS is not supported. 42 43 Use CentreWare Internet Services Installation Elements on CentreWare Internet Services Table below list menu items on CentreWare Internet services screens. Please note that you need have a username and password to change your settings. The user ID is 1111 and the x-admin password is set by default. For information on how to change your user ID and password, contact CentreWare Internet Services (P.41) and System Admin Settings (Security) (P.54). You can't enter system administration mode from your computer while you're using the machine control panel, the side of the machine is in system administration mode, or there are any current or pending tasks. If you still can't enter system administration mode, wait 5 minutes and try again, as the background process can be triggered. In addition, you can't control the machine control panel while the computer is in system administration mode. Tab Menu View page: Properties P.44 Description P.44 General Setting - Use Counters P.44 Power Setting P.44 Connection - Port Settings P.45 Physical Connections - Ethernet P.45 Protocols - TCP/IP SNMP Конфигурация P.47 Microsoft Networking P.48 LPD P.49 Port9100 P.49 SMTP Server P.50 HTTP P.50 Network TWAIN P.51 Services - - По умолчанию P.51 Scan - Шаблоны работы P.52 Security - IP </Enter> </Enter>; P.52 Setting System Administrator P.54 Support P.54 Support P.54 Address Book P.54 View all names P.55 Wednesday Settings 2 43 44 2 Environment Settings Menu Item see page: Environment Settings 2 Properties Description Tabs Address The book Common Tasks P.56 Add a new name P.56 Office P.56 Imported Data P.56 Export Data P.56 Delete all names P.56 Important double characters cannot be used in CentreWare Internet services (except the address book). The model machine Product Name is displayed. The serial number Of the product serial number is displayed. The name of the machine You can enter the name of the printer (up to 32 characters of the ASCII code, except for the colon (;), equal marks (=), on symbols or asterisks (!) that are not valid). (Default: DocuCentre S2520 or DocuCentre S2320) Location You can enter the location of the machine (up to 255 characters of the ASCII code). Contact the person you can enter the contact person's information (up to 255 characters of the ASCII code). You can enter the address of the system administrator (up to 128 characters). This information is necessary to send. Comment You can enter the comments machine (up to 255 characters of the CODE ASCII). You can apply the Apply button by clicking on this button. Use counters (General Settings) You can check the total number of pages printed for each service. Set up Saver Power (General Settings) Note None of the low power modes or sleep mode can be disabled. 44 45 Using CentreWare Internet Services Time for low power mode You can set the time elapsed from the last operation until the machine enters low power mode. You can set the value from 1 to 60 minutes. (Default: 1) Sleep Time Mode You can set the time elapsed from the low power mode until the machine goes into sleep mode. You can set the value from 1 to 239 minutes. (Default: 1) You can apply the Apply button by clicking on that button. Port Settings (Link) Port You can activate or deactivate communication ports. You can choose from SNMP, SMB, LPD, Port9100, Send, and TWAIN Network. Activate each port by checking its check box. You can apply the Apply button by clicking on this button. Pay attention to the reboot of the machine to enable new settings. Settings Environment 2 Ethernet (Link) zgt; physical connections) Rate Score You can set the speed of the Ethernet port. You can choose from Auto, 10 Mbps Half-Duplex, 10 Mbps full duplex, 100 Mbps Half-Duplex, or 100 Mbps full duplex. (Default: Auto) The MAC address of the MAC address of the machine is displayed. You can apply the Apply button by clicking on this button. Pay attention to the reboot of the machine to enable new settings. Ip TCP/IP mode can be set up Ip. You can choose from Dual Stack, IPv4 or IPv6. Dual Stack allows you to use IPv4 and IPv6 addresses. (Default: IPv4) Shows the general protocol. Enabled. A physical connection (Ethernet) is displayed. Owner's name can set the host's name. You can enter 1 to 32 single-core alphabetic symbols or hyphens. (Default: the last 16-digit MAC address). Note that IPv4 Hyphens (-) cannot be used as the first or last character in the line. 45 46 2 Environment 2 Environment Settings - IP Address Resolution: You can install the method used to purchase IP addresses, subnet mask and gateway addresses. You can choose from STATIC, DHCP, BOOTP, RARP or DHCP/Autonet for the method of purchasing the address. (Default: DHCP/Autonet) - IP address: You can enter an IP address when STATIC is selected for IP address resolution. - Subnet mask: You can enter a subnet mask when STATIC is selected for the IP address of the permit. - Gateway address: You can enter the gateway address when STATIC is selected for IP address resolution. IPv6 - include a manual address: You can check this check box to enter the IP address and gateway address directly. (Default: Off) - IP address: You can enter an IP address when checking the Enable manual address check box. - Automatically configured address 1: The automatically assigned IPv6 address is displayed. - Local address link: an automatically assigned link-local address is displayed. - Gateway Address: You can enter the gateway address when checking the checkbox Enable the manual address. - Automatically configured gateway address: the gateway address is automatically assigned. The domain name is used to enter the domain name DNS (up to 255 characters). CONNECT DNS IPv4 - Get the DNS Server address automatically: Check this box to get the DNS server address automatically using DHCP. When setting up a method to purchase a DNS server address for DHCP, you also need to establish a method to purchase an IP address for DHCP. - Preferred DNS server: Used to enter the DNS address manually. - Alternative DNS Server 1-2: Used to enter alternative DNS server addresses manually. IPv6 - Get the IPv6 DNS Server Address automatically: Check this check box to set the DNS server address automatically using DHCP. - Preferred DNS server: Used to enter the DNS address manually. - Alternative DNS Server 1-2: Used to enter alternative DNS server addresses manually. Dynamic registration DNS (IPv4) establishes a dynamic update of the IPv4 DNS server. The Enabled check allows you to dynamically update your DNS server. The Overwrite check allows you to dynamically update data in the DNS server database. 46 47 Use CenterWare Internet Services Dynamic DNS Registration (IPv6) installs a dynamic update of the IPv6 DNS server. The Enabled check allows you to dynamically update your DNS server. The Overwrite check allows you to dynamically update data in the DNS server database. Create a domain search list by automatically checking On for automatic domain search lists. Domain name 1-3 is used to enter the domain name to search (up to 255 characters), symbols). Time out sets time out when searching for domains (1 to 60 seconds). (Default: 1) DNS resolution through IPv6 First Check (included) to prioritize IPv6 to resolve DNS names when IP mode is set up for Double Stack. (Default: On) The Apply button, click this button to confirm the settings you've entered. Pay attention to the reboot of the machine to enable new settings. The Environment 2 SNMP Configuration can be set to the SNMP protocol. The overall status of the SNMP port you can check On for use of SNMP. (Default: On) Edit the SNMP v1/v2c Properties button You can make advanced SNMP v1/v2c settings by clicking on this button. (Default: On) - Community Name (just read): You can enter a community name to purchase (up to 32 characters of the ASCII code). (Default: blank (public) - Community name (Read/Write): You can enter the community name to purchase/write (up to 32 characters of the ASCII code). (Default: Empty (private)) - Community Name Trap: You can enter the community name to notify the trap (up to 32 characters of the ASCII code). (Default: Blank (SNMP_trap) - System Administrator Log id: You can enter information related to the person responsible for machine maintenance (up to 127 characters of the ASCII code) (default: empty). Shared authentication traps, you can check On to send an authentication failure notification when you try to access an invalid community name that is not registered in the car. (Default: On) The Advanced button you can make the following settings by clicking on this button: Add UDP IPv4 Address button 47 48 2 Wednesday 2 Settings 2 You can add the recipient address to notify the UDP IPv4 trap by clicking on this button. - IP address: You can enter an IP address to enter. - UDP port number: You can set the UDP port number. to enter (between 1 and 65535). - SNMP Version: You can specify the SNMP version to enter as v1 or v2c. (Default: SNMP v1) - Community name traps: You can enter the name of community traps to enter (between 1 and 32 astro characters). (Default: SNMP_trap) Trap to be received: You can determine whether to send notifications about print, Cold Start, and Authentication events. Add UDP IPv6 Address button, you can add the recipient's address to notify you of the UDP IPv6 trap by clicking on that button. - IP address: You can enter an IP address to enter. - UDP port number: You can set the UDP port number. to enter (between 1 and 65535). - SNMP Version: You can specify the SNMP version to enter as v1 or v2c. (Default: SNMP v1) - Community name traps: You can enter the name of community traps to enter (between and 32 ASCII code symbols). (Default: SNMP_trap) - Trap to be received: You can determine whether to send notifications about print, Cold Start, and Authentication events. Remove button You can remove traps set for trap traps The recipient's IP address by clicking on this button. You can display the trap notification information you're using. You can specify the events for which to send a notification. You can apply the Apply button by clicking on this button. Pay attention to the reboot of the machine to enable new settings. Microsoft Networking can install the SMB protocol and the WINS server. Submit the destination SMB Port Status You can check On for the use of small and medium-sized businesses. (Default: On) Shows a physical connection (Ethernet). Transport (TCP/IP) is displayed. 48 49 Use Of The CentreWare (WINS Server) Internet Service Server information marks displays when IP Mode is set up for IPv4 or Double Stack. The protocol is On. Get wins Server address automatically You can check this check box to get the WINS server address automatically using DHCP. When setting up a METHOD to purchase a WINS address for DHCP, you also need to establish a method to purchase an IP address on DHCP. (Default: ON) The primary IP address of the server - Port You can set the main address of the WINS server. Secondary SERVER IP Address - Port You can set the secondary address of the WINS server. You can apply the Apply button by clicking on this button. Pay attention to the reboot of the machine to enable new settings. You can set the LPD environment. The general status of the LPD port you can check On for use of LPD. (Default: On) Shows a physical connection (Ethernet). Port number You can set the LPD port No. (between 1 and 65535). You have to set a unique number for each port. (Default: 515) Connection time you can set a timeout period that the machine waits for before you stop the connection when the incoming data stops (2 to 3600 seconds). (Default: 60) The maximum number of connections to the port is displayed the maximum number of connections. You can apply the Apply button by clicking on this button. Pay attention to the reboot of the machine to enable new settings. You can install Port9100. The total port status of Port9100 you can check On for use Port9100. (Default: On) Physical Connection 49 50 2 Environment Settings (Ethernet) is displayed. Port Info Port Number TCP Port You can set Port9100 port No. (value between 1 and 65535). You have to set a unique number for each port. (Default: 9100) Maximum connections in port environment settings 2 Display the maximum number of connections. The end of the timeout work you can set the waiting time for the machine until the connection stops when the incoming data stops (from 2 to 3600 seconds). (Default: 60) Displayed PdL. You can apply the Apply button by clicking on this button. Note Rebooting the machine to enable new settings. You can set up a SMTP server. Required INFORMATION SMTP Server IP address / host name You can log into the SMTP SMTP server as an IPv4 or IPv6 address or in F-D (up to 256 characters). You can set the port number used by the SMTP server to send (between 1 and 65535). (Default: 25) Entry credentials for the machine to access the SMTP server to send automated s You can install an authentication method when sending SMTP. You can choose No or SMTP AUTH. (Default: No) Entry name for SMTP servers that require authentication, enter the address of an authenticated SMTP user (from 1 to 64 characters of ASCII code). This can be left blank if THETP authentication is missed. You can enter a password to authenticate (1 to 64 characters of ascii code). This can be left blank if THETP authentication is missed. Reprint your password you can check the authentication password you entered by re-entering it here. You can apply the Apply button by clicking on this button. YOU can set the HTTP protocol. Shows 50 51 Using a CentreWare Internet Service Configuration. A physical connection (Ethernet) is displayed. Keep a live time-out period timeout keep-alive displayed. You can set the port number. used to communicate http://1 to 65535). You have to set a unique number for each port. (Default: 80) Connection time Set a timeout connection from 1 to 255 seconds. (Default: 30) Name You can choose a display for a header displayed in the browser, from Internet services or Printer Model - IP Address. Settings environment 2 Apply button You can apply changes by clicking on this button. Pay attention to the reboot of the machine to enable new settings. You can set up the TWAIN network protocol. The TWAIN Port Status configuration network (included) is displayed. A physical connection (Ethernet) is displayed. Connect Time Set a connection time out of 1 to 255 seconds. (Default: 30) You can apply the Apply button by clicking on that button. Pay attention to the reboot of the machine to enable new settings. By default (services are zgt;) Common Item (default: Scan data from the model name) you can enter a header (up to 128 characters of the ASCII code). The message you can enter into the body (up to 256 characters of the ASCII code). Maximum attached size (default: 20MB) you can set the maximum file size between 2 and 20MB to attach to . 51 52 2 Settings of the Apply button You can apply the changes by clicking on this button. Pay attention to the reboot of the machine to enable new settings. Patterns of Work (Services of zgt; scanning) Environment Settings 2 Network Scan Output Color You can set color mode from Black or Color. (Default: Black and The original type you can set the type of document to optimize the scan data from Text, Photo and Text, or Photo. (Default: Text) Extended Lighten/Darken Settings You can set density from five levels. (Default: Normal) You can set sharpness from five levels. (Default: Normal) Background Suppression You can check On to enable background suppression. (Default: On) Background suppression level You can set a suppression background from five levels. (Default: Normal) Resolution You can set scanning permission from 200x200dpi, 300x300dpi, 400x400dpi or 600x600dpi. (Default: 200x200dpi) Note that when Color Mode is set up for Color and 400x400 dpi or 600x600dpi is selected for resolution, Color Mode is automatically set to Black White. Squeezing the image you can set the compression of the file from five levels. (Default: Standard) Layout Adjustment Edge Erase You can set the edge erasure value between 0 and 10 mm to erase the black shadows created at the edges of the paper when scanning with the open cover of the document. (Default: 2 mm) When submitting Format In Color file variants, you can set a file format for scanned data from JPEG or PDF. In Black and White, you can set a file format for scanned data from TIFF or PDF. (Default: PDF) IP filtering (security) You can limit supported IP addresses. 52 53 Using CentreWare Internet IPv4 Filtering IP Filtering You can check enabled to IP filtering. (Default: Off) The IP Filter Rule List Of The Available IPv4 address appears. Add the IP Filter Rule button - the IPv4 screen is displayed. You can add an available IPv4 address. You can add up to 10 IPv4 addresses. - Original IP address: You can set up an available IP address. (Default: 0) IP mask source: You can set the length of the prefix of an available IP address. (Default: 0) Ip Filter Edit Rule - IPv4 screen is displayed. You can edit the available IPv4 address. - Original IP address: You can set up an available IP address. - IP mask source: You can set the length of the prefix of an available IP address. (Default: 0) The Delete environment settings 2 button you can delete the available IPv4 address. IPv6 FILTERING IP filtering You can check On to enable IP filtering. (Default: Off) Ip Filter Rule List Displays available IPv6 address. Add the IP filter rule button - the IPv6 screen is displayed. Adds an available IPv6 address. You can add up to 10 IPv6 addresses. - Original IP address: You can set up an available IP address. - IP mask source: You can set the length of the prefix of the available IP address. (default: 0) edit ip filter button - the IPv6 filter is displayed. Edits the available IPv6 address. - Original IP address: You can set up an available IP address.

amharic books.pdf download free
cadkey_19 free download
car.dealerships.in.st.albans.wv
systemic.functional.grammar.theory.pdf
fl.studio.12.4.2.regkey
acer.aspire.e15.review
human.communication.5th.edition.pearson.pdf
matter.and.its.properties.worksheet
xinevowe.pdf
game.booster.plus.4x.faster.apk.2020.pdf