


# Table of Contents

- Hardware Overview**
  - Parts Introduction
  - Buttons Introduction
  - G03K Introduction
- Screen UI Introduction**
  - Screen Icons Introduction
  - Statuses of Icons
- App Download**
  - App Name and Platform Description
- Basic Operations**
  - Powering On
  - Powering Off
  - Pairing with a Phone
  - Changing the Strap
  - Changing the Lens
- Screen Operation**
  - Volume Adjustment
  - Voice Assistant Activation
  - Call Answering & Track Selection
  - Channel Tuning
  - Custom/Public Channel Switching
  - Sub-audio Code Setup
  - Connecting 3rd Gen Walkie-Talkie Remote
- Notes and Suggestions**
  - Care Suggestions
  - Warnings
  - Charging Recommendations
  - Q&A
- Electronic Information**
  - Technical Specifications
  - Walkie-Talkie Channel Frequency Chart
  - Sub-audio Tone Table

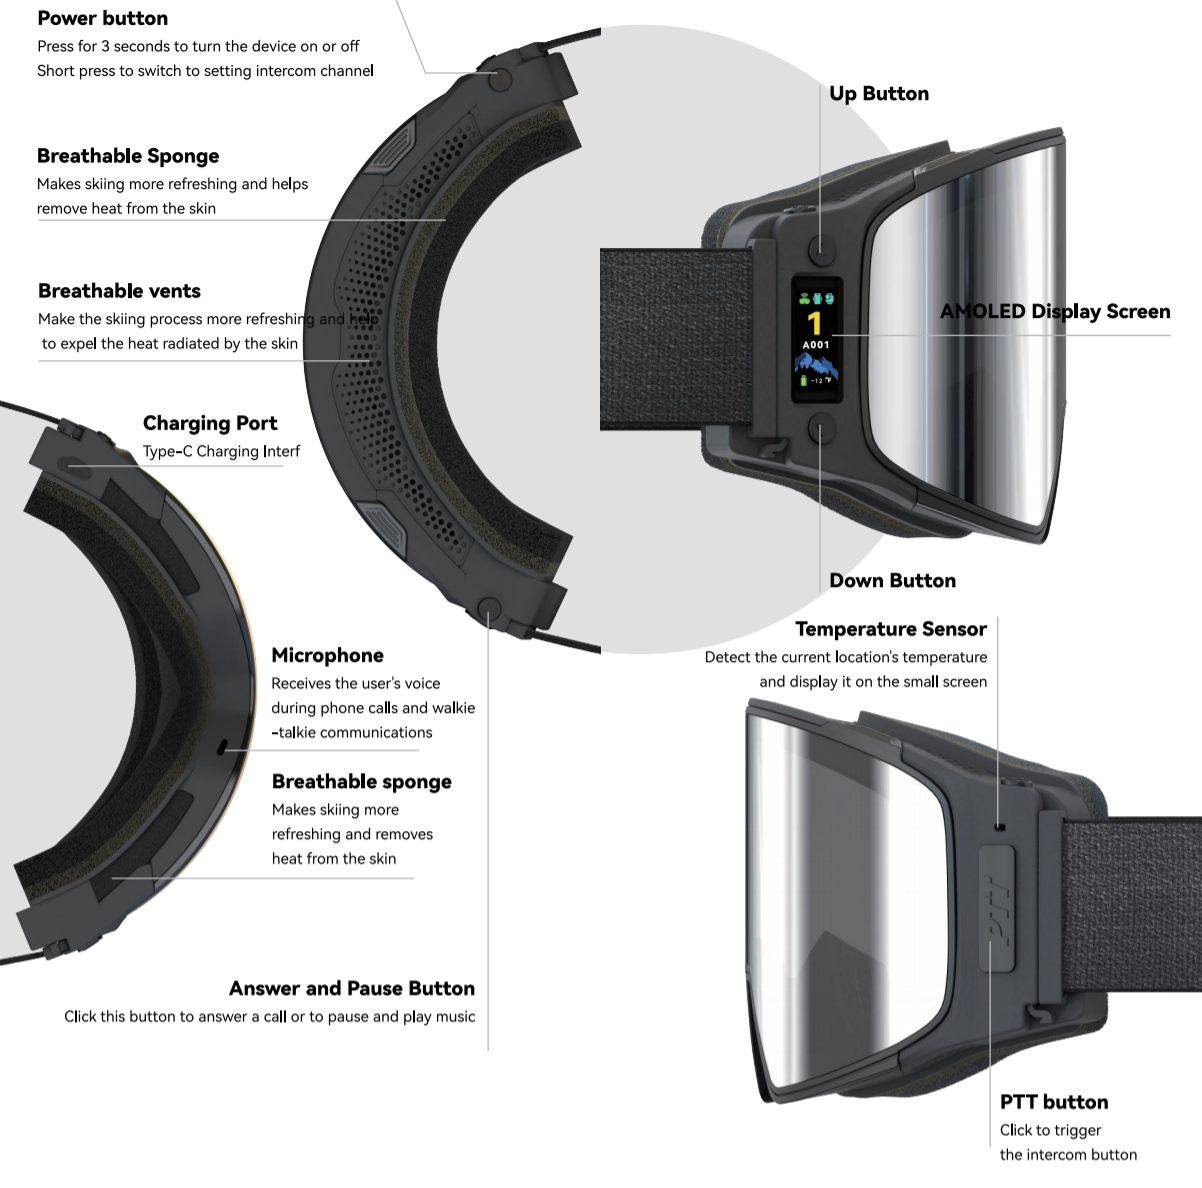

### Button Functions

#### Ski Goggle Buttons & Functions Introduction

**Up Button**  
**Single Click**  
In Volume Mode: Increases the volume by one level, with each increment accompanied by a corresponding "du" sound, which gets louder as the volume increases.  
**Long press**  
In Channel Setting Mode: Each press increases the channel number by 1, and the current channel number is announced in English with a prompt tone when setting the channel.

**Down Button**  
**Single Click**  
In the volume setting mode: reduce the volume, a prompt tone will sound for each volume reduction, the lower the volume, the lower the prompt tone "du".  
**Long press**  
In the channel setting mode: each time the channel number is pressed -1, a prompt tone will sound when setting the channel to indicate the current number.

**Double Click**  
Play the previous song.  
**Long press**  
Long press for 3 seconds to enter remote control pairing mode.

**Power Button**  
**Single Click**  
Press to switch to walkie-talkie channel setting. If there is no operation on the "1" or "1" buttons within 5 seconds after switching to the walkie-talkie channel setting, the device will exit the channel setting and return to the volume setting.  
**Long press**  
Long press for 3s to turn on or off.

**Answer Call and Play Pause Button**  
**Single click**  
Playing a song: Tap to pause the song. Incoming call: Tap to answer the call, long press to hang up. During a call: Tap to hang up. Outgoing call: Tap to hang up, with a prompt tone following the mobile system's prompt tone.  
**Long press**  
Long press for 3s to wake up the voice assistant.

**PTT Intercom Button**  
**Long press**  
Press to start intercom, prompt tone "du". Release to end intercom, prompt tone "du-du".

### G03K Intercom Remote Control Hardware Introduction

#### G03K Parts & Functions Overview

**PTT Button**  
**Long Press**  
Hold to activate walkie-talkie.  
**Release**  
Let go to end walkie-talkie.

**Up Button**  
**Single click**  
Volume Increase  
**Double click**  
Skip to Previous Song  
**Long press**  
Activate Voice Assistant

**Indicator Light**  
Displays battery level and button press status.

**Down Button**  
**Single click**  
Volume Decrease  
**Double click**  
Skip to Next Song

**Power Button**  
Press and hold the power button for 3 seconds to turn the device on or off.

### Screen UI Introduction

#### Screen Home Page Introduction

Intercom switch status

Mobile Bluetooth Connection Status

Remote Control Connection Status

Current Channel Number

Sub-audio Tone

Battery Level Display

Temperature Display

**Home Page Introduction**  
 Custom Channel Screen  
 Channel Adjustment Screen  
 Volume Adjustment Screen

### Status Introduction

Introducing the Functions of ICON in Different States

**Walkie-Talkie Power Status**

**Green Status**  
Walkie-Talkie is On

**Gray Status**  
Walkie-Talkie is Off

**Remote Control Connection Status**

**Blue Status**  
Remote Control is Connected

**Gray Status**  
Remote Control is Disconnected

**Pairing Status**  
Goggles are in Pairing Mode. Remote Control Connection Status

**Mobile Bluetooth Connection Status**

**Blue status**  
Mobile Bluetooth Connected

**Gray Status**  
Mobile Bluetooth disconnected

**PTT Intercom status identification**

**Walkie talkie**

### Download App

By downloading our App, you can unlock more operations and use more features!

### How to Turn the Device On/Off

As shown in the diagram on the right, press and hold the button at the top end of the screen for 3 seconds to power the device on or off.

Visit the App Store on your iPhone or Google Play on your Android device to search for "SKIGO" and download our app.

The App Store is a registered trademark of Apple Inc. in the United States and other countries.  
 Google Play is a registered trademark of Google Inc. in the United States and other countries.

### How to Pair with a Mobile Phone

**Connect to your phone's Bluetooth system**

Step 1: Turn on the snow goggles to enter pairing mode.  
 Step 2: Go to your phone's Bluetooth pairing interface.  
 Step 3: Select the snow goggles' Bluetooth name for pairing, as shown in the figure below.

**Snow Goggle Bluetooth Name**

**SKIWARRIOR**

**Connecting to the APP**

Step 1: Launch the "SKIGO" App.  
 Step 2: If it's your first time pairing, the app will display the status shown in Figure 1 on the right. Tap the "Bind" button at the bottom to start searching for devices.  
 Step 3: Select your device and then tap "Connect".

### Strap Removal and Installation

**Removal Process**

- 1 Locate the small lever under the strap buckle
- 2 Press the small lever upward
- 3 While pressing, slide the strap buckle downward to slide it out of the slot.

**Installation Process**

- 1 Refer to the diagram above to locate the slots on both ends
- 2 Slide the strap buckles from the bottom up into the slots. Continue sliding until you hear a "snap" sound, indicating that the strap is securely in place.

**Lens Removal and Replacement**

**Lens Removal**  
Grasp the lens firmly and gently pull it out with a bit of force; the lens will then be removed.

**Lens Installation**  
Guide the lens close to the frame's groove, and the lens will automatically attach, completing the lens installation.

**Be cautious to avoid finger pinching**

**Screen Function Operation**

**Adjust volume**  
On the home page, simply press the up and down arrow keys to adjust the volume.

**Answer calls and pause music**  
When you receive a call or are listening to music, press this button to answer the call or pause the music.

**Voice Assistant**  
Long press for 3 seconds to activate the voice assistant.

**Adjust Channels**

- 1 click the confirmation button at the top
- 2 click the up and down arrows to adjust the channel

### Select or Switch Between Custom and Public Channels

**Custom Channels**  
Tap the switch at the bottom right corner of the square to enable Custom Channels mode.

**Public Channels**  
Tap the switch at the bottom right corner of the square to enable Public Channels mode.

**Figure 1**  
Please select the sub-audio code

**Selecting a Sub-audio Code**

- 1 Whether you are choosing a public channel or a custom channel, after clicking on the sub-audio code selection option, a pop-up window will appear on the right side.
- 2 After the pop-up window is displayed, scroll down to view more sub-audio code channels.
- 3 The first item in the list is the off button. If you need to turn off the sub-audio code, scroll to the first item in the list and select "OK" to confirm.

**Figure 2**

**After Selection Complete**  
Once the selection is finished, the snow goggles' screen will display the current sub-audio code channel, shown below the main channel, as illustrated in Figure 2.

### Pairing the G03K Remote Control

- 1 Press and pair on, hold for 3 seconds to enter pairing mode, and you will hear the prompt "pair on".  
If no remote control is paired within 15 seconds, the pairing process will fail and exit the pairing mode, with an audio prompt saying "pair off".
- 2 Press "1" and "1" on the remote control simultaneously to enter pairing mode. The green light will flash 5 times, and it will pair automatically. The pairing result will be announced by voice through the snow goggles' speaker.  
Auto-exit pairing mode after 15 seconds.

**Pairing Successful** Voice prompt: "pair ok"  
**Pairing Failed** Voice prompt: "pair off"

### Technical Specifications

Snow goggles electronic information display

Bluetooth version	5.2
Bluetooth connection distance	30m
Intercom distance (unobstructed)	3km
Charging method	Type-C
Standby time	7 days
Battery life	2 days
Protection level	IP65
Input voltage and current	5V/1A
Applicable temperature	40°C ~ -20°C
Implementation standard	GB 4943.1-2022 EN62369-1:2015

**CTCSS sub-tone code (16hex)**

Serial number	D0 D1	Serial number	D0 D1
1	63 30 06	11	91.5 15 09
2	67 70 06	12	94.8 48 09
3	69.3 93 06	13	97.4 74 09
4	71.9 19 07	14	100 00 10
5	74.4 44 07	15	103.5 35 10
6	77 70 07	16	107.2 72 10
7	79.7 97 07	17	110.9 09 11
8	82.5 25 08	18	114.8 48 11
9	85.4 54 08	19	118.8 88 11
10	88.5 85 08	20	123 30 12

**Digital sound**

Serial number	D0 D1	Serial number	D0 D1
52	D017N 17 80	66	D071N 71 80
53	D023N 23 80	67	D072N 72 80
54	D025N 25 80	68	D073N 73 80
55	D026N 26 80	69	D074N 74 80
56	D031N 31 80	70	D114N 14 81
57	D032N 32 80	71	D115N 15 81
58	D036N 36 80	72	D116N 16 81
59	D043N 43 80	73	D122N 22 81
60	D047N 47 80	74	D125N 25 81
61	D050N 50 80	75	D131N 31 81
62	D051N 51 80	76	D132N 32 81
63	D053N 53 80	77	D134N 34 81
64	D054N 54 80	78	D143N 43 81
65	D055N 55 80	79	D145N 45 81

### Intercom Frequency Table

Channel Number	US	EU
1	462.5625	446.00625
2	462.5875	446.01875
3	462.6125	446.03125
4	462.6375	446.04375
5	462.6625	446.05625
6	462.6875	446.06875
7	462.7125	446.08125
8	462.7375	446.09375
9	462.7625	
10	462.7875	
11	462.8125	
12	462.8375	
13	462.8625	
14	462.8875	
15	462.9125	
16	462.9375	
17	462.9625	
18	462.9875	
19	463.0125	
20	463.0375	
21	463.0625	
22	463.0875	

### Care Recommendations

1. This product comes with a storage bag and a box to protect the goggles. The box allows you to carry the goggles in your bag or hang them on your bag for protection while skiing.
2. Do not use tissues or other rough materials to wipe the lenses to avoid irreversible damage.
3. Store this product in a cool, dry environment.
4. Keep the product charged to prevent battery aging.
5. Store the product in the provided soft cloth bag, and place the lenses and other sensitive parts in the storage bag to prevent damage and scratches from sharp objects.

### WARNING

1. Read and follow the warnings and instructions carefully.
2. This product is designed to enhance comfort and provide some protection against wind, snow, and fog in certain winter outdoor mountain sports activities.
3. This product is not intended for any other use.
4. This product is not suitable for situations involving foreign object impact or chemical splashes, as it will not provide protection in such cases.
5. Ski within your control and always be aware of your surroundings, direction, and speed; do not submerge this product in water.
6. This product is not suitable for children under 12 years of age.

### Troubleshooting Q&A

What to do if the device won't turn on?  
 1. Please check the battery level to see if it's depleted. Try reconnecting the battery.  
 2. Please try turning on the device in an environment with suitable temperature for this product.

What to do if it can't connect to a phone?  
 1. Please try restarting the goggles.  
 2. Please check the battery level. If it's low, it might not be able to connect to Bluetooth.

What to do if there's no sound when playing music?  
 1. Please try adjusting the volume on the goggles and on your phone.  
 2. Please check the battery level. If it's low, there might be no sound.  
 3. Please charge it in time.

What to do if there's no sound during intercom communication?  
 1. Please confirm whether you are on the same channel. Check if the volume is set to the minimum; if so, please increase it.  
 2. Please ensure that the intercom distance is within 3km (unobstructed). The signal may not be received or the reception may be distorted due to obstructions in the usage environment.  
 3. Please confirm whether the intercom function on the goggles is turned on.