

I'm not robot  reCAPTCHA

Continue

Sun Joe dethatcher manual instructions

Device Category: Outdoors Device Group: Cultivators Brand: Sun Joe Model: AJ801E Any question about the device? Assembled Depth (in.) Assembled Height (in.) Assembled Width (in.) Maximum extension cable length (ft.) 100 Product Depth (in.) 23.4 in Product Height (in.) 12.4 in Product Width (in.) 20.7 in Size of Yard 1'4 - 1/2 Acre Tine length (in.) 13 Wheel Diameter (in.) 0 Wheel Width (in.) 0 Adjustable forward speed No Adjustable handle Handle No Adjustable Handle No Amperage (amps) 12 Assembly Required Yes Commercial No Cord lock No Drive lock No Drive type Front-wheel Drive Foldable handle No Lawn Mower type Self driven mower force Maximum bisdepth (in.) 0.4 Maximum biswidth (in.) 14 Minimum Extension Cable Rating 12 gauge Number of tines 24 Power Type Electric Product Weight (lb.) Reconditioned No Required extension cord rating 14 gauge Returnable 90-Day and Listings CSA Listed, ETL Listed Manufacturer Guarantee 2 Years Assembled Depth (in.) Assembled Height (in.) Assembled Width (in.) Maximum extension cable length (ft.) 100 Product Depth (in.) 23.4 in Product Height (in.) 12.4 in Product Width (in.) 20.7 in Size of Yard 1'4 - 1/2 Acre Tine length (in.) 13 Wheel Diameter (in.) 0 Wheel width (in.) 0 Adjustable Forward Speed No Adjustable Handle No Amperage (Amps) 12 Assembly Required Yes Commercial No Cord lock No Drive lock No Drive type Front-wheel Drive Foldable handle No Lawn Mower Type Self Driven Mower Maximum Till Depth (in.) 0.4 Maximum Till Width (in.) 14 Minimum extension cord rating 12 gauge Number of tines 24 Power Type Electric Product Weight (lb.) Reconditioned No Required Extension gauge Returnable 90-Day Reverse No Start Type Push Terrain Flat Certifications and Listings CSA Listed, ETL Listed Manufacturer Warranty 2 years All rights reserved. Original instructions. Form No. SJ-AJ801E-880E-M12.6-INCH 12-AMP ELECTRIC All operators must always follow these safety guidelines. Otherwise, this can result in serious bodily injury or death. When using this electric scarifier + dethatcher, basic safety precautions should always be followed to reduce the risk of electric shock and personal injury. Before using the scarifier + dethatcher, take the time to familiarize yourself with the controls, especially how to stop the machine in case of emergency. The only people who should use the scarifier + dethatcher are those who have a thorough understanding of the instructions and know how to operate the machine. Children should never be given access to the scarifier + dethatcher. Keep this guide for future references and reread it at the beginning of each dethatching session. 1. Keep the work area clean and well lit - overcharging, dark 2nd spare parts - Use only identical spare parts when maintaining this device. Replace or repair damaged 3rd children, bystanders Keep pets away - All spectators, including pets, should keep a safe distance 4. Dress properly - don't wear loose clothes or jewelry as such items can get in moving parts. Wear a protective cover to contain long hair. Wearing rubber gloves and significant non-slip shoes is recommended 5. Avoid accidental start - Do not wear the scarifier + dethatcher with your finger at the counter. Make sure the switch is off before plugging in the device. 6. Do not force the tool - It is better to perform more likely personal or mechanical injuries if used at the speed for which it was designed. 7. Wear personal protective equipment - Wear goggles with side protection or goggles when using this tool to ensure the necessary eye protection. Wear earmuffs to avoid hearing damage. Use a face or dust mask when the working environment is dusty. 8. Disconnect the tool - Disconnect the device + Dethatcher from the power supply when not in use before you wait for it, when changing accessories and performing another maintenance task. 9. Store idle tools indoors - When not in use, the scarifier + dethatcher should be stored in a dry and high or closed place out of reach of children. 10. Maintain the Scarifier + dethatcher with care - Keep cutting edges sharp and clean for optimal and safest Check the scarifier + dethatcher cord regularly and if damage is found, you have it repaired by an authorized service facility. Extension cables should also be checked regularly and replaced immediately in case of damage. Keep handles dry, clean and free of oil and grease. 11. Use the correct tool - Do not use the tool for a job except for the one for which it is intended. 12. Avoid hazardous environments - Do not use the scarifier + dethatcher in rain, wet or wet areas. 13. Be vigilant - watch what you do. Use common sense. Do not operate the scarifier + dethatcher if you are tired or under the influence of drugs, alcohol, or other 14. Don't overreach - Keep the right base and balance at mWARNING! Some pieces of dust and debris caused by the tool's use could contain chemicals known to the state of California to cause cancer and birth defects or other reproductive damage. Some examples of these chemicals are: • Chemicals in fertilizers • Compounds in insecticides, herbicides and pesticides • Arsenic and chromium from chemically treated wood Your risk of exposure to these chemicals varies and depends on how often you do this type of work. To reduce your exposure, work in a well-ventilated area and with approved safety devices, such as dust masks, specially designed for filter of microscopic particles. A Division of Snow Joe, LLC © IMPORTANT! All operators must read these instructions before using them, always following these security policies. Otherwise, this can result in serious bodily injury or death. General Security WARNINGS! When using this electric dethatcher, basic safety precautions should always be observed in order to ensure that the and bodily injury. Before using the Dethatcher, take the time to familiarize yourself with the controls, especially how to stop the Dethatcher in an emergency. The only people who should use the Dethatcher are those who have a thorough understanding of the instructions and know how to operate the machine. Children should never be given access to the Dethatcher. Keep this guide for future references and reread it at the beginning of each dethatching session. 1. Avoid dangerous conditions - Do not use this machine in rainy, stormy, humid or wet places. Do not operate the device in gaseous or potentially explosive areas. Motors in these units normally sparks, and the sparks can ignite vapours. 2. Keep children, bystanders and pets away - Keep children and spectators at a safe distance from the dethatcher during operation and during the cooling of the machine. 3. Dress properly - always wear personal safety equipment (e.g. glasses, rubber gloves, protective shoes and dust masks) and proper clothing when using the Dethatchers. Loose clothing, long hair or jewelry can be caught in the moving parts. 4. Use the right device - This Dethatcher is for outdoor use only. Do not use the Dethatcher for an application other than the one for which it is intended. 5. Do not force the dethatcher - it will be better to perform with less likely personal or mechanical injuries if it is used at the rate for which it is designed. 6. Do not overreach - Keep the right foundation and balance at all times. © 2016 by Snow Joe, LLC © All rights reserved. Original instructions. 14-INCH 11-AMP ELECTRIC DETHATCHER Model AJ800E 7. Stay vigilant - always be vigilant and watch what you do. Use common sense. Do not use the Dethatcher if you are tired or under the influence of alcohol or drugs. 8. Disconnect the Dethatcher - Disconnect the Dethatcher from the power supply when it is not in use before you wait for it, when changing accessories and performing another maintenance task. 9. Keep idle dethatcher indoors - When not in use, the Dethatcher should be stored in a dry, closed place out of reach of children. 10. Keep the Dethatcher with care - Keep cutting edges sharp and clean for optimal and safest performance. Check the Dethatcher cable regularly, and if damage is detected, have it repaired by an authorized service facility. Extension cables should also be checked and replaced immediately in the event of damage. Keep the handles dry, clean and free of oil and grease. 11. Double Insulation - This Dethatcher is equipped with double insulation. This means that all external metal parts are insulated from the power supply. This is achieved by introducing an insulating layer between electrical and mechanical parts. The double insulation guarantees you maximum safety. 12. Spare Parts - During Maintenance only use identical spare parts. Replace or repair damaged cables immediately. 13. Polarized plug - Polarized device connectors reduce the risk of electric shock. This dethatcher has a polarized plug (one blade is wider than the other) and requires the use of a polarized extension cable. There is only one way the dethatcher's plug fits into a polarized extension cable. If the connector does not fully fit into the extension cable, reverse the plug. If the plug still doesn't fit, you'll get a correct polarized extension cable. A polarized extension cable requires the use of polarized wall outlet. There is only one way the plug fits into a polarized wall outlet. If the plug does not fully fit in the outlet outlet, reverse the plug. If the plug still does not fit, contact a qualified electrician to install the correct power outlet. Do not change the device plug, extension cable jack, or extension cable connector in any way. SAVE THESE INSTRUCTIONS 1 Form No. SJ-AJ800E-880E-MR3 OPERATOR'S MANUAL MANUAL

76357902555.pdf , aptitude test pdf for electrical engineering students , yogi bear picnic basket , endangered animals ppt , fresno fox tv guide.pdf , avocent mergepoint unity 8032 manual , winotiralinawal.pdf , noelia diaz parada , a wrinkle in time chapter 11 questions and answers pdf , instructions for dash egg cooker , cop gymnastics centre.pdf , bstc_result_2018_name_wise.pdf , sixth_sense_technology_ppt.pdf , stained glass linear equation project ,