

[Click Here](#)



Aorus sli hb bridge rgb 1 slot spacing user manual

Aorus sli hb bridge rgb. Aorus sli hb bridge rgb (1 slot spacing). Aorus sli hb bridge rgb (2 slot spacing). Aorus sli bridge 1 slot.

* The trademarks and logos of HDMI Licensing Administrator, Inc., including HDMI, HDMI High-Definition Multimedia Interface, and HDMI Trade dress, are used by GIGABYTE. * Product specifications and designs may vary across countries due to local market conditions. For accurate information on available products, please consult your local dealers. * Color representations may differ from those shown on this website due to photographic limitations and monitor settings. Please note that: - GIGABYTE graphics cards are designed for desktop use only, except for the "Mining Series" models. - Using these cards for other purposes, such as blockchain computing or cryptocurrency mining, will void the product warranty. - Linux drivers may not be available from chipset vendors. Please download them from their official websites or third-party sites. - Some older operating systems (Win9X/ME/2000/XP SP1/SP2) may no longer receive driver support. - For improved download experiences: # Download speed can vary by region, and it's recommended to use other regions for faster downloads if needed. # Files available in the "Asia" region should be tried first. # If issues persist, please contact our Technical Service team for assistance. Monitor your file download status for saving treasure time and efforts. This includes a 5-pin LED C header cable, which is used to connect to the AORUS RGB SLI HB Bridge. # 1. Attach the AORUS RGB SLI HB Bridge to the SLI connectors of two graphics cards as shown in the image. 2. Note the orientation from the image on the left for proper installation. 3. Install the bridge according to the diagram, making sure it is properly aligned with the SLI gold fingers. # - 5-pin LED C header cable included - Compatible with NVIDIA GeForce GTX 1070 and 1080 series graphics cards - 1 slot PCIe spacing - AORUS Logo LED illumination - Supports NVIDIA GeForce GTX 1070 and 1080 series graphics cards - 1 slot PCIe spacing # The SLI bridge comes with three buttons that allow for lighting effects control. - Options button: Toggles between five functions. * Static mode: Switches between 20 colors using the "Next" or "Previous" button. * Brightness adjustment: Switches between 10 levels of brightness using the "Add" or "Minus" button. * Flash mode: Switches between five flashing effects: Single Flash, Double Flash, Breath, Cycling through all colors, and Random using the "Next" or "Previous" button. * Sync mode: Synchronizes the bridge LED color and activity with that of the motherboard's integrated LEDs. (Note) - Next/Add Button: Changes the bridge LED color (Static mode), switches flashing effects (Flash mode), or increases brightness. - Previous/Minus Button: Changes the bridge LED color (Static mode), switches flashing effects (Flash mode), or decreases brightness. # 1. Before powering on, plug the white plug of the included 5-pin LED C header cable into the corresponding header on the side of the bridge. 2. Then, plug the other end into the LED C header on the motherboard to use GIGABYTE RGB Fusion software for control. Turn on your system and enter the operating system to enable SLI mode with the NVIDIA Control Panel. Next, follow these steps: Step 1: Align the arrow marking on the plug with the 12V header on your motherboard. Step 2: Refer to the previous instructions and toggle the Options button to select Sync mode. Step 3: Ensure you have installed the GIGABYTE APP Center from the motherboard driver disk. Access the App Center by clicking its icon in the notification area, then launch the RGB Fusion application. Step 4: Go to the Advanced screen, click the 5-pin LED C header icon, and use the Calibration option to fine-tune the LED display color. Return to the Basic screen, select a lighting mode, and sync the LEDs on the bridge with those on your motherboard. The supported lighting modes are Pulse, Color Cycle, Static, Flash, and Intelligent. It is recommended that you use the GIGABYTE RGB Fusion app to control the lighting effects of the SLI bridge for proper operation. If using a third-party app like NVIDIA LED Visualizer, ensure it has the LED effects set to "On" (or static mode), as Flash and Breath modes are not supported. Try the following solutions if you're experiencing interference with your device: move or replace the antenna, increase the space between equipment, plug into a different outlet, or consult an expert. Also, note that this Class B digital apparatus complies with Canadian regulations and must accept any potential interference. In French, it is noted that the device's operation is subject to two conditions, ensuring no interference caused by the device itself and accepting any possible interference affecting its functioning.