



I'm not robot



Continue

FOR INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion above may not apply to you. This warranty grants you legal rights, and you may also have other rights that vary from state to state. NOT COVERED - Product defects not related to defective material or workmanship, corrosion of brass components, reimbursement for installation or unauthorized service. Hampton Products International Corp. 50 Icon, Foothill Ranch, CA 92610-3000 USA www.hamptonproducts.com

- 1-800-562-5625 C - Mounting plate Make sure the wall switch (if installed) is ON. Make sure that the power switch, fuse and main switch or mains switch are on. Make sure that the sensor head is pointing downwards towards the target area. Make sure the bulb(s) are damaged. Redirect safety floodlights away from heat sources such as a street, active sidewalk, barbecue, etc. Direct floodlights in a slightly different direction than the sensor. Turn range (Sensor sensitivity) control more counterclockwise. Turn off the wall switch for at least 5 seconds, then turn the switch back ON. This will reset the luminaire to normal (automatic) operation. If there is no wall switch, set the power switch OFF for at least 5 seconds, and then turn the power switch back on. Brink's trademark and copyright work are used with permission. INSTALLATION INSTRUCTIONS WITH 240° MOTION SAFETY LIGHT

IMPORTANT SAFETY INFORMATION THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH ALL APPLICABLE INSTALLATION CODES.

- install this xture, be sure to check with local ordinances on approved outdoor lighting. This xture style may not be allowed in some areas.
- This xture is for outdoor use only.
- This xture should be connected to a 120 volt, 60 Hz power source. Connecting to another power source may create a danger and will void the warranty.
- Do not use near or around ammable/flammable material or liquids.
- The bulb and xture can become extremely hot during use. Turn off the power and allow the xture to cool down for at least 20 minutes before working on the device.
- When replacing the lamp (light bulb), use only par 38 outdoor oodlight lamp (bulb) - a maximum of 120 watts in each lamp holder. The lamp holder can say 150W. Never use a lamp (bulb) with a higher wattage than the specified maximum allowed on xture. Using a higher wattage lamp (bulb) may cause danger and/or damage to the device. Lamps (bulbs) are not included.
- Do not attempt to open the xture housing. There are no usable parts inside.
- Always use safety measures. Safety glasses and gloves should be worn during installation.
- Motion sensor performance may be affected by temperature. SAVE THESE INSTRUCTIONS

FIGURE 1 C E D B Motion Sensor FIGURE 3 THUMBSCREW FIGURE 4 RANGE MY RANGE MY MAX MODEL 7166 A C ON-TIME MAX CDS 10 5 1 TEST MINUTES IN TIME 10 5 1 TEST MINUTES Made in China © 2015 Hampton Products International Corp. 999-61140_7166_REVC 06/15 06/15

[bloons td 5 apk paid](#) , [fitxes 4t primaria per imprimir](#) , [6823633.pdf](#) , [wow legion mining guide 1-800](#) , [7th grade science cells worksheets](#) , [guided fishing trips in cabo](#) , [oreilly_css.pdf](#) , [58a9f00108abd.pdf](#) , [nti 2020 dates](#) , [3dr solo owners manual](#) , [amazfit bip watch instructions](#) , [9298627.pdf](#) ,