



I'm not robot



Continue

Evistr l53 manual pdf

If you're someone who needs a recording on site, whether it's a university lecture or a radio podcast interview, you can definitely work with a small and portable voice recorder that provides a clear voice recording. This is where the magic of the PCM audio format begins. Unlike a standard digital recorder, a PCM voice recorder uses pulse-code modulation, a fine technique invented in the 1940s to digitally display sampled analog signals using pulses and rooms to represent the digital bits. With a linear digital PCM voice recorder such as Evistr L53, the recorded analog signal is not compressed, but displayed directly in digital form; Therefore, the recording you make with a linear PCM recorder is closest to the recorded original analog signal. CD audio also uses the PCM format, but only at 16-bit/44.1 kHz sampling rate, while the evistr linear PCM digital voice recorder can record WAVE files in linear PCM format 24-bit/48kHz (2,304 Kbps bit rate) and 16-bit/48 kHz (1,536 Kbpsbit/sbitrate). The L53 can also record in MP3, as well as in APE and FLAC, which are also lossless uncompressed wave formats. You may be able to record over 270 hours thanks to the 8GB built-in flash memory As the Evistr L53 manual, it will show you how to restore the factory settings, format the device and use the recording feature. To restore factory settings, press M (menu), select System Setting, press M, select Factory Settings, press M, select YES, press M, press M, press M, and confirm your selection. If the L53 voice recorder stops responding or displays a disk failure, you must format the L53 voice recorder. To format the L53, you can connect the L53 voice recorder to your computer and format it the same way you format a USB flash drive, or you can format the L53 directly from the device itself by pressing M (menu), select System setting, press M, select Format device, press M and select YES to format the device. Beautiful aluminum alloy finish as far as the recording, the L53 voice recorder has three different recording functions, the VOR (Voice activated Recording), Track On and Sectional Recording. Sectional Recording is a track recording feature that allows you to program the L53 to record, save a recording, and start a new recording automatically (you can set recording from at least 30 minutes to a maximum of 2 hours). With track-on recording, you can set the L53 voice recorder to record only when sound is detected If the L53 does not detect any sound within 5 seconds, it saves the file and automatically starts a new recording. Built-in 3.7V 800mAh lithium battery AVR (VOX or VOR) recording is similar to track-on. The only difference is that the voice recorder stops recording and automatically resumes recording when the sound is detected, rather than saving a file when the sound is not recognized. Music can also be for the linear PCM voice recorder Evistr L53 via micro USB port, so that the Evistr L53 can be used as a music player. The L53 captures broadcast-quality audio and you can record in stereo by using the included microphone, which you connect via the stereo microphone jack of the L53. If you use your own dynamic condenser microphone, the L53 recorder can also power a microphone that requires ONE DC power supply. 128 x 48 OLED 1.1 inch display screen A kolnifty feature that comes with the Evistr L53 linearPCM digital voice recorder is the recorder's ability to automatically store audio files before the battery runs flat. The last thing you want is to lose a valuable audio recording because your recorder is empty. Included with the Evistr L53: Phone Recording Adapter Headphones USB Connection LineMicrophone 1 REQUEST CUSTOMIZED VIDEO Mailto: Write us your problems, and model number or Amazon order ID, so we could effectively answer you thanks for purchasing EVISTR Digital Voice Recorder EVISTR - the leading voice recorder brand we hear from our user, do all our efforts to better service L53 PCM Pro Voice Recorder from EVISTR page of -22 - 2 CHAPTER ONE How to use your Voice Recorder - L) Recharge your Voice Recorder) Open your Voice Recorder) How to Record) How to Pause and Resume Your Recording) How to Playback Your Recording) How to Playback Music) How to Connectback Setting) Playback Setting) Go to Menu Choice Setting CHAPTER TWO ADVANCED OPERATION GUIDE) How to select the Record Quality) Voice Activated Recording (AVR Mode) AUTO Recording) What is Record Monitor) Phone Recording) T-Mark) Set Date and Time) Date and Time) Information) Format Device) Factory Settings) A-B Repeat) Lock Button) Connect External Microphone) External Earphone CHAPTER THREE) Failed Connect to computer) Failed Connect to computer) Can I delete recordings from computer page of the keys do not work) Can not find my recordings in the recorder) How to activate Voice function) How to use the AVR mode (Voice Activated Function)) Press REC, it shows memory is full) Why it plays only 10 seconds each recording /music) Why it is played randomly) How to: Use the A-B retry function) Why it shows the LOCK on the screen, and all buttons do not work) The recording is noise) It suddenly shows file delete) screen shows no voice recordings! I couldn't do anything) screen shows no songs, I couldn't do anything) I Cannot Shut Off My Voice Recorder) How to format the recorder) Space is Page of -22 - 4 CHAPTER ONE How to use your voice recorder - L53 1) Charge your voice recorder Connect it to your computer with an enclosed cable, it will charge once it has charged (usually about 3 hours), you can eject the device from the USB port You could also connect the enclosed cable to your voice recorder and other USB jack for charging, or use your Android phone adapter to connect Connect to computer, mobile phone adapter, USB socket to Voice Recorder NOTE: When you connect to the computer for charging, it will enter the connection mode (as the yellow image shows) When fully charged, the battery icon will be full 2) Open your voice recorder Just press the power button (on the left) on ON position , it will boot on (screen light on, and see EVISTR logo) page of -22 - 5 Turn it back to OFF, it will shut down See below picture NOTE: after the first time boot on the voice recorder by pressing the hard switch on ON position, you could press & hold PLAY button, to switch on/OFF in the near future, we recommend you long press YOU PLAY on - OFF your voice recorder TO switch ON - OFF your voice recorder TO switch OFF: press the power button on ON position OFF: press it down to OFF position, completely shut down 3) How to press & hold PLAY button power on your voice recorder (NOTE: Hold your left side POWER switch at ON position when it is on , it saves your recordings 1) Press and hold YOU PLAY to activate one 2) Press REC to record page of -22 - 6 NOTE: do not turn off your voice recorder directly. During recording you need to press STOP to save your recordings before you turn off your voice recorder 3) Press STOP, save your recordings or it will corrupt the recording file If you press REC and STOP e.B. 3 times, the recorder creates 3 recorded files that match each time, and they are usually called in this format: YYYYDDMM+sequence number.mp3 (or. WAV) Example: We take a shot on So Shots name will be: MP3 See How below pictures, it has 3 sample recordings Each recording will be saved a file name with date, but it has a timestamp if you want to see the recorded date of the MP3 file, you can click on the right button and view file properties, you will see the recording file time See the right side image shows: 4) As you stop and resume your recording during recording, press PLAY/PAUSE pause recording again, set your recording page of -22 - 7 5) How to stop your recording during recording NOTE: If you can't find your recordings, please check if you have switched to the music folder or not. On the left there is a DVR/MUSIC button, it is for switching between MUSIC and RECORD folder 1) Press & hold YOU PLAY, open your voice recorder 2) if should display the screen, as image shows NOTE: Press REW/FF for rewind/fast forward when playing Press REW/FF, for the previous /next recording VOL+VOL-, for playback volume set 3) Press PLAY, start to play the recordings 6) As you delete your recordings At the status of the stop recording, your screen will display a recording name press YOU ERASE, it will show YES /NO, select YES, and press M (menu) page of -22 - 8 The screen will delete, and the recording is deleted. For example: You will see a recording on the screen with the name: MP3 Now simply press the ERASE button, enter the confirmation notification to delete, if you have selected YES, and press M (menu), this record will be deleted NOTE: Press And hold ERASE, it will display All YES No delete when you press YES select and M (menu) press, all recordings will be deleted, be careful with it if you accidentally deleted a recording, please contact us. We will try to help you restore the file (if the device has been formatted, file cannot be restored) See below picture 2) Screen looks like above, display the recording 1) Press & hold PLAY press, open your recorder 3) Now press ERASE, you could delete this recording. 4) You can press FFREW to select the recording, and then press ERASE to delete the recording you want 7) How to open music page from -22 - 9 Open your voice recorder EVISTR VOICE RECORDER Press the MUSIC/DVR button on MUSIC position, Go to the Music folder (if you are in the recording folder) Press PLAY to play music (if it contains songs) Or does it show no songs 8) How to connect to the computer Use the connected cable to connect between your computer and voice recorder, if they are successfully connected, see the connection icon, see how image After you have successfully connected to your computer, you can delete the files in the recorder, copy the files from the recorder to your computer , copy file into your voice recorder, it was just like your normal flash drive 2) You will see EVISTR L53 on your computer 1) Successful with your computer page of -22 - 10 3) All recordings were in RECORD folder 4) You could create a MUSIC folder, and copy songs to this folder (if you need) 9) Playback setting The steps to adjust your playback as follows, in Play setting, you could press Repeat & Equalizer M (MENU), enter the menu choice, and Step to step as in this way A. Set Repeat & Replay Play Setting -- & Play Mode Repeat: it has 4 repeat mode. Repeat all, play view, repeat, repeat 1 NOTE: playing view, if this is set, the device will play only 10 seconds and go to the next track and go to the next track : Play the recordings/songs in the device in a random way B. Set Equalizer Play setting -- & Mode, Off, Rock, Popular, Soft, Jazz, Classic, Techno Use the FF/REW select & select your setting, and then press M(menu) to confirm the setting See picture example when setting the REPEAT ALL mode page of -22 - 11 1) Press & hold PLAY button, turn on your recorder 2) screen will be like above 3) Press M (MENU) button, enter the menu selection, and select the playback setting 4) Press the M button (MENU), enter the playback setting and select the playback mode page of -22 - 12 5) Press the M button (MENU), enter the playback mode and select the repeat button, it will play all recordings or songs in your recorder 7) Press M (MENU) button, confirm setting, screen will return to playback mode page of -22 - 13 10) Go to menu selection setting menu selection: you could press M (menu), enter menu selection At menu selection and settings, the FF/REW keys performs for the selection M (menu), performs for the confirmation selection If selected, it will be highlighted (with dark background) If you have encountered some problems with my voice recorder, don't worry, if you find that your recorder isnetworking, don't give up yet and assume that it's broken in chapter two and chapter 3, we'll offer some very common issues shoot for you, just a scan based on our customer feedback , mostly negative review issues could be solved from below If you still can't fix your problem, don't hesitate to contact your order, so we could help you solve the issue more effectively. You can request us a call, customized video tutorials to solve the problems for you. CHAPTER TWO ADVANCED OPERATION GUIDE 1) How to choose the recording quality 2) Voice Activated Recording (AVR Mode) 3) Adjust microphone sensitivity During recording 4) What is TRACK ON Recording 5) What is subsection recording 6) What is AUTO recording 7) What is recording monitor page of -22 - 14 8) Phone recording 9) T-Mark EVISTR VOICE RECORDER A. While recording, press T-Mark, you can add bookmarks (flags) to your recording. Each recording could add MAX 10 bookmarks if adding bookmarks (flags), so playback of this type of recordings, just press FF, it will jump to the next bookmark position (dot); just press REW, it will jump back to the previous bookmark position (dot) B. In the status of the recording, select a recording file, play it, and then pause it. You could use T-Mark for Voice Cut, Voice Divide, Voice Insert, Voice Append, Go to bookmark, Delete bookmark the voice cut, Voice Divide, Voice Insert, Voice Append Voice Cut: delete the recording last part, stay up to the point where you stopped voice divide: Divide the recording in 2 part at the point where you stopped Voice Insert: Insert: new recording in the middle part of the recording Voice Append: Add new recording to the endpoint of the existing recording Go to Bookmark: View and select a bookmark bookmark delete: Bookmark and delete bookmarks and the snippet NOTE: this feature only support. When recording at.wav format Voice Cut REMAIN DELETED Voice Divide PART ONE PART TWO Played part, PART ONE, it will be the same file name as original Paused Point Unplayed, PART TWO, it will be renamed to OriginalFileName_0.wav NOTE: If you use T-mark to share the file with the name wav PART ONE, the name will be called wav PART TWO will be called _0.wav page of -22 - 15 Voice Insert : select Voice use, and then enter the recording mode, after recording, press STOP, save the recording, the newly recorded part NEW PART will be added to the Original Recording Voice Append PART ONE PART TWO NEW PART Played part Paused Point Added New part will be added to the end of your original recording NOTE: select Voice Append, and then press the recording mode, press, press STOP, press save the recording, the newly recorded part NEW PART is added at the end of the original recording 10) Set date and time The path for set dates & time set date press M (menu) -- & menu selection -- & system setting -- & date and time -- & Set date And now you could adjust the year month tag (YY/MM/DD) to adjust YY (year), press PLAY/PAUSE to select and highlight MM (month) B. Press FFREW to adjust MM (month) after adjusting the correct month, press PLAY/PAUSE to select and highlight DD (day) after adjusting the correct day, and now press M (menu), confirm your setting, and the screen returns Back Set Time Press M (menu) -- & system setting -- & Date and time -- & Set time page of -22 - 16 And now you can adjust the hour, Minute (HH/MM) A. Press FFREW to set HH (hour) After setting the correct hour, press PLAY/PAUSE to select and highlight MM B. Press FFREW to set MM (minute) and now press M (menu), confirm your Setting , and screen returns 11) Information 12) Format Device 13) Factory Settings 14) A-B Repeat 15) Lock Button 16) Connect External Microphone 17) Line-in Recording 18) Connect External Earphone CHAPTER THREE 1) Failed Connect to computer Sometimes you may have failed the Created a problem with your computer , is normal as if you are not connecting your flash drive to the computer, so the solutions have the same way to solve it. Here are some suggestions for you to fix this problem A. Before you connect the voice recorder to the computer, turn off the voice recorder B. When you connect the voice recorder to the computer, do not press any buttons on the voice recorder, and connection mode C will exit. Do not swing the MicroUSB cable when in the case of an unstable connection D. Sometimes failed connection due to MicroUSB cable is broken or USB jack is loose, change a new cable (like your Android phone cable) or a connection via another USB jack, or simply restart your computer E. Worse still, still failed connection, here is an advanced solution We could debug as follows: Page of -22 - 17 1) On your computer, go to Manage Computer 2) Computer Management 3) Find Device Manager 3) Right mouse button, activate the recorder device/ or scan update disk changes to help you find the recorder drive If you are still the failed connection with computer problems, please contact us soon. CHAPTER FOUR TROUBLE SHOOTING 1) No voice recordings if there are no voice recordings or you have deleted all recordings in your voice recorder when you open your voice recorder, you will not see any voice recordings on the screen. Don't worry, you could just continue to press UM REC to start a new recording, or press m(menu) to menu selection, or switch side of -22 - 18 DVR/MUSIC button to position music music of music in your recorder (if it belongs to it) 2) Format error error, this usually happens from 2 aspect A. During recording, directly press the POWER BUTTON to OFF position, which will cause file damage before you turn off your voice recorder, you need to press STOP, save the recordings first B. Computer does not support the .wav file. The recordings were saved as .wav format. Windows 10 or MAC users may experience this problem. Don't worry you could download the free VLC Media Player to solve this problem NOTE: This voice recorder support recording of.mp3 format, you could also go to record settings, change the recording quality to long time recording, the recordings will be saved as.mp3 format file. 3) How to connect to the computer Use the connected cable to connect to your computer, or your Android phone cable If you do not connect it to your computer, you could contact us, we will help you solve it, or you could shoot some problems, said after our next chapter, or you could go the easy way, just change a new socket or new cable. Because this problem usually occurs as if you are not connecting your flash drive to your computer, it is the same problem. 4) Error connecting to the computer Before connecting the voice recorder to the computer, you should turn off the recorder and if you connect to the computer, you should not press the voice recorder keys, it means that you should not use the voice recorder, otherwise the connection mode will stop and the connection to the computer will fail. In this state it will only charge the voice recorder for further failed connection with computer problem, please contact us. We will answer you as soon as possible. 5) Can I delete recordings from the computer Yes, if the recorder was successfully connected to your computer, you should consider it as As EVISTR L53, the removable drive names are stored as EVISTR L53, and all your recordings have been stored in a folder named RECORD in the drive. You can delete or copy the file into it as you used it with your normal USB flash drive. 6) When connecting to computer, the buttons do not work page of -22 - 19 When connected to the computer, it was in connection mode, the voice recorder screen shows the CONNECTION ICON as the CHAPTER ONE. POINT 8 image shows. All buttons do not work in this situation, if you press and hold M, it will exit the connection mode and will not be able to connect to your computer. 7) Can't find my recordings in the recording This mainly because when you open the voice recorder, it reads the MUSIC folder, just a check of the left side MUSIC/DVR button (above), confirm it at DVR position, if not, just press up to DVR position or you could connect it to your computer to check if there are recordings in your recorder 8) How to open Voice enabled elution function Go to menu choice, find record setting, enter it, select AVR mode, enter it, select and press it. Screen shows disable track, that is, the voice activated function is open. Press REC now, you will see VOX on the screen, it means that you have successfully set the voice-activated recording function 9) How to use AVR mode (Voice Activated Function) When The AVR mode is open, the recorder will switch to voice-activated recording mode. It will only be loud enough decibel voice (all sounds). This allows you to adjust the AVR level in record-setting>avr mode, select the best AVR level as you want, and get the best effect of voice-activated recording. For the L53 voice recorder, the AVR level of level 1-5 could be selected; The lower number means that higher decibel voice is needed to activate the recorder, and it needs a louder voice; At level 5 it is very sensitive, only very low decibels or quiet speech could be recorded. At the same time, you can press the VOL+VOL during recording to adjust the microphone sensitivity, which also affects the voice-activated sensitivity. 10) Press REC, do not record it First check, the recording light flash or not second, you can see VOX on the screen If yes, it means that you open the voice-activated recording function, during this setting, it will only record if high enough decibel sound detected, they could go to recording setting, find AVR sensitivity, and adjust it. It helps page of -22 - 20 we suggest that you could close the AVR mode if you don't want this feature 11) Press REC, it shows memory is full If you press REC, it doesn't record it, it shows memory full, which means the voice recorder memory is full. Although you can't record for too long. Maybe there are some files that cannot be read by the recorder, so you can not find directly from the recorder, so you need to format the voice recorder, or connect to the computer and have a scan to format this format Recorder from your computer directly 12) Why it only plays 10 seconds of each recording/music This is because you have entered View Playing mode, it will play 10 seconds of each file When status of playback, you could press M (menu), go to Play setting -& enter it Play Mode -& Repeat, select All or another mode repeat, m press (menu), confirm your setting 13) Why it randomly plays back to solve this problem, such as just 10 seconds to play, it because of the game mode setting problem, just go to change to change all 14) How to use the A-B retry feature during playback, press A-B, see a on the screen, and B , chose it the starting point press A-B again , select point B Now it will be between point A to B NOTE: Exit A-B repeat, just press A-B key again, it will show 15) Why it will show the LOCK on the screen, and all buttons do not work press & hold the A-B key, all buttons will be locked, and can not operate if you press any buttons on the screen, it will show LOCK icon. NOTE: Exit LOCK, just press a-b button again, it will leave 16) The recording is noise Not recording near computer, electric fans, air conditioning, sound bar, which will easily cause noise, the recorder will record this static noise side of -22 - 21 17) It will suddenly delete file When you press ERASE button, on the left, next to A-B

button, it will enter the delete mode. So if you see this information, you should mistakenly switch to delete mode, press FF/REW to select No, and press M (menu), they will exit this mode; If you have selected YES and press M, all your files will be deleted! Beware of this. 18) Screen shows no voice recordings! I couldn't do anything If you see this, it's because you've deleted all the recordings in your recorder. So it will not show any voice recordings! At this moment you just need to press REC to record a new recording, which will be OK, at this status, many buttons will not work, it is normal because no file. 19) Screen shows no songs I couldn't do anything If you see this, it's because you typed the MUSIC folder, and there is no songs music file in your recorder. So it won't show any songs! At this moment you just need to have a check, press the MUSIC/DVR button on DVR position, or you could connect your voice recorder to your computer, and copy songs into the recorder drive. With this status without songs, many buttons do not work, it is normal because no 20) I can't turn off my voice recorder When the recorder is charged or connected to the computer, even if the POWER BUTTON was ON/OFF in OFF, it will still be OFF, and you can't turn off the voice recorder in this state (because the voice recorder gets power directly from charging socket or computer) 21) How to enter the recorder formatting M (menu) Format disk, select OK press M (menu), confirm and start formatting, after formatting completed, all files on the recorder will be deleted, and now you will get your 8GB memory back on your voice recorder. 22) The storage space is full When the storage space is full, you can connect to your computer and copy and save your recordings to your computer, and then delete all recordings in your voice recorder. The voice recorder has a limited memory at 8GB, so after a while of use, it may be full of memory, you need to use it on your computer page of -22 - 22 we will regularly update our e-book, based on our customer feedback. We hope to get more interaction from your site, and let us know more we could do, you could visit more of this information from our website: / page of -22 - - -

[normal_5f8f413fab8aa.pdf](#) , [use of determiners in english.pdf](#) , [normal_5f8c6ba207dd0.pdf](#) , [basketball shot recorder](#) , [horse racing academy near me](#) , [normal_5f93a8ad2ef48.pdf](#) , [reality is not what it seems.pdf](#) , [archer guide wynncraft](#) , [messenger app for iphone 5](#) , [relationship marketing bruhn.pdf](#) , [normal_5fa816ec6b68b.pdf](#) , [gta vc apk obb highly compressed](#) ,