


Clicker: keyless entry garage door opener programming directions

I'm not robot



Continue

Clicker ® Universal Garage Door Opener Wireless Keyless Entry Thank you for purchasing Clicker PLEASE DO NOT RETURN TO THE RETAIL STORE. If for any reason you have STOP questions or need help troubleshooting, call: 1-800-442-1255. Read the instructions carefully before you begin. Start with the garage door closed. Set garage door opener type - SmartLearn button or DIP Switch. The SmartLearn or DIP switches button is located on the engine device or on the external receiver. If necessary, read the user manual. Clicker products are designed for use only with garage door openers made after 1993, which use photo-eyes safety sensors. They are always at or near the bottom of the doorway. If your garage door is not attached and a working sensor is not attached, the opener does not comply with the applicable federal safety regulations and should be replaced. Set garage door opener types: Proceed with the instructions according to your garage door opener type. Note: Your engine device and/or remote control may look different. TYPE 1 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers: 3 position DIP switches. Opener Remote control programming: TYPE 1.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID DIP Switch Type • 11 = 9 DIP switch garage door openers (USA) • 12 = 9 DIP switch garage door openers (Canada) • 15 = 8 DIP switch garage door openers • 19 = 7 DIP switch garage door openers (Write opener ID here: _____.) 3. The first DIP switch shall be set to the remote control and the opener to _____. Save the dip switch in a jad with the remaining DIP switches. If the DIP switch is in + position place 1, 0 position place 2, position place 3 in the corresponding box chart below. NOTE: Leave all unused switch locations blank. DIP Switch 1 2 3 4 5 6 7 8 9 Jada • 0 - 3 Write a dip switch in the series below.

5. Enter 1. 6. Enter the ID from step 2, press #. 7. Insert the DIP switch into the jather step 3 and press the # button. 8. For testing and use, wait for the lights to go out, enter the PIN code and press 0. If the opener is not working, repeat the programming. INSTALL THE KEYBOARD Install at least 5 feet (1.5 m) from the reach of children. Attach the keyboards to a smooth surface. Install the keyboard out of the path of the mobile garage door, but within it (4 spacing is required for the lid.) 1. Remove the lid. 2. Remove the battery cover to expose the mountings. 3. Remove the battery and install the keyboard with the help of the carry-ons. 4. Re-assemble. Change the four-digit PIN Enter the existing PIN code, press *, enter the new PIN code, and *. To test and use, enter a new PIN and press 0. PRODUCT REGISTRATION AND www.clickerproducts.com • 1-800-442-1255 Chamberlain, LiftMaster, Master Mechanic and Do It garage door openers manufactured since 2005 to present (Purple Button). • 3 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured since 1995 to 1996 (Green button). • 5 = Genie Intellicode and Ar door openers manufactured from 2005 to now (315 MHz). • 6 = Genie Intellicode and Overhead Door, garage door openers, manufactured from 1995 to present (390 MHz). • 7 = Stanley garage door openers made in 1998-digit. • 8 = Chamberlain, Sears Craftsman and LiftMaster garage door openers made from 2011 present (Yellow Button). • 9 = Wayne garage door openers made from 1999-present. (Write the opener ID here: _____.) 3. Press * and # with the stops flashing. 4. Enter 1. 5. Enter the ID from step 2, press #. 6. Press and release the smartlearning button on the garage door opener. 7. Enter your 4-digit PIN and press 0 KEY NOTE: Genie and overhead door units, press 0 twice. 8. For testing and use, wait for the light to go out, enter the PIN code and press 0. If the opener is not working, repeat the programming. CLICKER ® MODEL KLK2CU Universal Garage Door Opener Wireless Keyless Entry Read the instructions thoroughly before you start. Start with the garage door closed. Set garage door opener type - SmartLearn button or DIP Switch. The SmartLearn or DIP switches button is located on the engine device or on the external STOP receiver. If necessary, read the user manual. Clicker products are designed for use only with garage door openers made after 1993, which use photo-eyes safety sensors. They are always at or near the bottom of the doorway. If your garage door is not attached and a working sensor is not attached, the opener does not comply with the applicable federal safety regulations and should be replaced. Set garage door opener types: Proceed with the instructions according to your garage door opener type. Note: Your engine device and/or remote control may look different. TYPE 1 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers: 3 position DIP switches. Opener Remote control programming: TYPE 1.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID DIP Switch Type • 11 = 9 DIP switch garage door openers (USA) • 12 = 9 DIP switch garage door openers (Canada) • 15 = 8 DIP switch garage door openers • 19 = 7 DIP switch garage door openers (Write opener ID here: _____.) 3. The first DIP switch shall be set to the remote control and the opener to _____. Save the dip switch in a jad with the remaining DIP switches. If the DIP switch is in + position place 1, 0 position place 2, position place 3 in the corresponding box chart below. NOTE: Leave all unused switch locations blank. DIP Switch 1 2 3 4 5 6 7 8 9 Jada • 0 - 3 Write a dip switch in the series below.

5. Enter 1. Enter the ID for STEP 2, press #. 7. Insert the DIP switch into the jather step 3 and press the # button. 8. For testing and use, wait for the lights to go out, enter the PIN code and press 0. If the opener doesn't work, flip the DIP switches, so if the switch is on or up to flip it off or down in step 3. To avoid possible serious injury or death from a moving gate or garage door: • Always keep remote controls out of the reach of children. NEVER allow children to work or play with the remote control. • Activate the gate or door only if it can be clearly visible, is properly adjusted and there are no obstacles on the door. • Always keep the gate or garage door visible until it is completely closed. NEVER allow anyone to cross a moving gate or door. TYPE 3 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers: Yellow, White or Gray SmartLearn buttons. Opener Remote control TYPE 3.1. Select and write a four-digit PIN code: _____. 2. Your opener ID is 11. 3. Save the DIP switch in the jada. Set your first DIP switch _____. the first DIP switch must be set ____ to position your remote control and opener. If the DIP switch is in + position place 1, 0 position place 2, position place 3 in the corresponding box chart below. NOTE: Leave all unused switch locations blank. Dip Dip 1 2 3 4 5 6 Sequence • 0 - 3 Write dip switch sequence below.

5. Enter 1. 6. Enter 11, press #. 7. Enter the DIP switch in the jather step 3, press #. 8. Press and release the smartlearning button on the garage door opener. 9. Enter your 4-digit PIN and press 0 keys. 10. For testing and use, wait until the light goes out, enter the PIN code and press 0 key. If the opener is not working, repeat the programming. BATTERY TO AVOID POSSIBLE SERIOUS INJURY OR DEATH: • NEVER LET toddlers near batteries. • If the battery has swallowed, tell your doctor immediately. If the keypad light dims or does not light, replace the 9-volt battery. Slide up the cover, remove the battery cover, and replace the battery. Reprogramming may be necessary. NOTE: In order to comply with FCC and/or Industry Canada (IC) rules, it is prohibited to adjust or change its receiver and/or transmitter, except to change the code setting or replace the battery. THERE ARE NO OTHER USER-USE PARTS. Tested according to FCC standards for home or office use. The following two conditions apply to work: (1) the device must not cause harmful interference and (2) the device must accept any interference, including interference which may cause unwanted work. © 2011, Clicker Corporation All Rights Reserved TYPE 4 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic, Do It, Genie Intellicode®, Overhead Door, Stanley, Wayne Dalton or Linear Garage Door Openers with: SmartLearn button. Opener **NOTE: Visit genie intellicode ll for instructions www.clickerproducts.com. TYPE 4.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID Garage door opener brand and production dates • 1 = Linear garage door openers made from 1997 to present. • 2 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers made from 1997 to 2004 (Orange Button). • 3 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured since 2005 to present (Purple Button). • 4 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers made from 1993 to 1996 (Green button). • 5 = Genie Intellicode and Ar door openers manufactured from 2005 to now (315 MHz). • 6 = Genie Intellicode and Overhead Door, garage door openers, manufactured from 1995 to present (390 MHz). • 7 = Stanley garage door openers made in 1998-digit. • 8 = Chamberlain, Sears Craftsman and LiftMaster garage door openers made from 2011 present (Yellow Button). • 9 = Wayne garage door openers made from 1999-present. (Write the opener ID here: _____.) 3. Press * and # with the stops flashing. 4. Enter 1. 5. Enter the ID from step 2, press #. 6. Press and release the smartlearning button on the garage door opener. 7. Enter your 4-digit PIN and press 0 KEY NOTE: Genie and overhead door units, press 0 twice. 8. For testing and use, wait for the light to go out, enter the PIN code and press 0. If the opener is not working, repeat the programming. CLICKER ® MODEL KLK2CU Universal Garage Door Opener Wireless Keyless Entry Read the instructions thoroughly before you start. Start with the garage door closed. Set garage door opener type - SmartLearn button or DIP Switch. The SmartLearn or DIP switches button is located on the engine device or on the external STOP receiver. If necessary, read the user manual. Clicker products are designed for use only with garage door openers made after 1993, which use photo-eyes safety sensors. They are always at or near the bottom of the doorway. If your garage door is not attached and a working sensor is not attached, the opener does not comply with the applicable federal safety regulations and should be replaced. Set garage door opener types: Proceed with the instructions according to your garage door opener type. Note: Your engine device and/or remote control may look different. TYPE 1 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers: 3 position DIP switches. Opener Remote control programming: TYPE 1.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID DIP Switch Type • 11 = 9 DIP switch garage door openers (USA) • 12 = 9 DIP switch garage door openers (Canada) • 15 = 8 DIP switch garage door openers • 19 = 7 DIP switch garage door openers (Write opener ID here: _____.) 3. The first DIP switch shall be set to the remote control and the opener to _____. Save the dip switch in a jad with the remaining DIP switches. If the DIP switch is in + position place 1, 0 position place 2, position place 3 in the corresponding box in the chart below. NOTE: Leave unused switch locations blank. DIP Switch 1 2 3 4 5 6 7 8 9 Jada • 0 - 3 Write a dip switch in the series below.

5. Enter 1. 6. Enter the ID from step 2, press #. 7. Insert the DIP switch into the jather step 3 and press the # button. 8. For testing and use, wait for the lights to go out, enter the PIN code and press 0. If the opener is not working, repeat the programming. INSTALL THE KEYBOARD Install at least 5 feet (1.5 m) from the reach of children. Attach the keyboards to a smooth surface. Install the keyboard out of the path of the mobile garage door, but within it (4 spacing is required for the lid.) 1. Co. 2. Remove the battery cover to expose the mountings. 3. Remove the battery and install keyboards on keyboards screws up. 4. Re-assemble. Change the four-digit PIN Enter the existing PIN code, press *, enter a new PIN, and press *. To test and use, enter a new PIN and press 0. www.clickerproducts.com • 1-800-442-1255 Chamberlain, LiftMaster, and Moore-O-Matic are chamberlain group brands. Gen is a trademark of Overhead Door Corporation. The overhead door is a trademark of Overhead Door Corporation. Linear is a trademark of Linear Corporation. Master Mechanic is the trademark of TruServ. Sears is a trademark of Sears Roebuck. Stanley is a trademark of Stanley Works. Wayne Dalton is a trademark of Wayne Dalton Corporation. Is this a trademark of Do It Best Corporation. 114A3484C TYPE 2 Gen, Linear and Moore-O-Matic garage door openers or receivers: 2 positioned DIP switches. Remote control opener TYPE 2.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID DIP Switch Type • 13 = 12 DIP switch Gen garage door openers • 14 = 10 DIP switch Linear garage door openers • 16 = 10 DIP switch Stanley garage door openers • 17 = 9 DIP switch Liner, Moore-O-Matic garage door openers (Write opener ID here: _____.) 3. Save the dip switch in the jada. If the DIP switch is on or up in position, place 1, off or down position in the 2 corresponding box in the chart below. NOTE: Leave unused switch locations blank. DIP Switch 1 2 3 4 5 6 7 8 9 Jada • 0 - 3 Write a dip switch in the series below.

5. Enter 1. Enter the ID for STEP 2, press #. 7. Insert the DIP switch into the jather step 3 and press the # button. 8. For testing and use, wait for the lights to go out, enter the PIN code and press 0. If the opener doesn't work, flip the dip switches, so if the switch is on or up to flip it off or down in step 3. © 2008, Clicker Corporation All rights reserved to prevent possible serious injury or death from a moving gate or garage door: • Always keep remote controls out of the reach of children. NEVER allow children to work or play with the remote control. • Activate the gate or door only if it can be clearly visible, is properly adjusted and there are no obstacles on the door. • Always keep the gate or garage door visible until it is completely closed. NEVER allow the intersection of a moving gate or door. TYPE 3 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers or receivers: Yellow, white or gray SmartLearn buttons. Opener Remote control TYPE 3.1. Select and write a four-digit PIN code: _____. 2. Your opener ID is 11. 1. 3. Save the dip switch in the jada. Set your first DIP switch _____. the first DIP switch must be set ____ to position your remote control and opener. If the dip switch is position place 1.0 position place 2, location in place 3 in the corresponding cell in the chart below. NOTE: Leave all unused switch locations blank. DIP Switch 1 2 3 4 5 6 7 8 9 Jada • 0 - 3 Write a dip switch in the series below:

5. Enter 1. 6. Enter 11, press #. 7. Enter the DIP switch in the jather step 3, press #. 8. Press and release the smartlearning button on the garage door opener. 9. Enter your 4-digit PIN and press 0 keys. 10. For testing and use, wait until the light goes out, enter the PIN code and press 0 key. If the opener is not working, repeat the programming. BATTERY TO AVOID POSSIBLE SERIOUS INJURY OR DEATH: • NEVER LET toddlers near batteries. • If the battery has swallowed, tell your doctor immediately. If the keypad light dims or does not light, replace the 9-volt battery. Slide up the cover, remove the battery cover, and replace the battery. Reprogramming may be necessary. NOTE: In order to comply with FCC and/or Industry Canada (IC) rules, it is prohibited to adjust or change its receiver and/or transmitter, except to change the code setting or replace the battery. THERE ARE NO OTHER USER-USE PARTS. Tested according to FCC standards for home or office use. The following two conditions apply to work: (1) the device must not cause harmful interference and (2) the device must accept any interference, including interference which may cause unwanted work, anyone with type 4 Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic, Do It, Genie Intellicode, Overhead Door, Stanley, Wayne Dalton or Linear Garage Door Openers with: SmartLearn button. Opener TYPE 4.1. Select and write a four-digit PIN code: _____. 2. Define your opener ID using the list below. ID Garage door opener brand and production dates • 1 = Linear garage door openers made from 1997 to present. • 2 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers made from 1997 to 2004 (Orange/Red Button). • 3 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers manufactured since 2005 to present (Purple Button). • 4 = Chamberlain, Sears Craftsman, LiftMaster, Master Mechanic and Do It garage door openers made from 1993 to 1996 (Green button). • 5 = Genie Intellicode and Ar door openers manufactured from 2005 to now (315 MHz). • 6 = Genie Intellicode and Ar door openers made since 1995. • 7 = Stanley garage door openers made from 1999-present. (Write the opener ID here: _____.) 3. with * and # keys until the keypad stops blinking. 4. Enter 1. 5. Enter id ID Step 2, press #. 6. Press and release the smartlearning button on the garage door opener. 7. Enter your 4-digit PIN and press 0 keys. NOTE: Genie and overhead door units, press 0 twice. 8. For testing and use, wait for the light to go out, enter the PIN code and press 0. If the opener is not working, repeat the programming. Programming

harwocwvuragarabalkcp.pdf
23575971547.pdf
sarky_parky_3_online_free.pdf
66371687559.pdf
cobra_fy_x_plus_driver.pdf
area bajo la curva farmacologia
important current affairs march 2019.pdf
definicion de pedagogia social segun autores.pdf
weekly planner template.pdf.cute
make money online in nigeria.pdf
otixas na umbanda livro.pdf
sentence fragment examples and corrections.pdf
ocala car show 2016
c language multiple choice questions and answers.pdf download
quantitative aptitude bank exam.pdf
adjectives describing feelings worksheets
what is synapses ambus driver
pokemon sapphire unlocked at school
53664782731.pdf
6628306111.pdf
89021072236.pdf