

10 inch Toiletry Bag



Materials:

1 fabric for outer layer

1 fabric for inner layer

1 nylon zipper 12 inches (longer can be cut to size of bag when sewing together)

7 inches of ribbed ribbon, braided ribbon, or strong ribbon.

Iron on stabilizer or batting (optional)

Zipper foot

¼ inch seams

#1 Cut Option - using pre-made kits from Guild

Outer Layer: Cut 1 - 10 inches length x 8 Inches width

Inner Layer: Cut 1 - 10 inches length x 8 inches width

Stabilizer/Batting: Cut 1 - 10 inches x 8 inches

2 Cut Option no seaming pieces

Outer Layer: Cut 1 - 20 inches length x 8 Inches width

Inner Layer: Cut 1 - 20 inches length x 8 inches width

Stabilizer/Batting: Cut 1 - 20 inches x 8 inches


Sewing Instructions

#1 Cut Option


Sew outer layer together on the 10 inch side

Sew inner layer together on the 10 inch side

1. Continue with instructions for both #1 and #2 Cut options

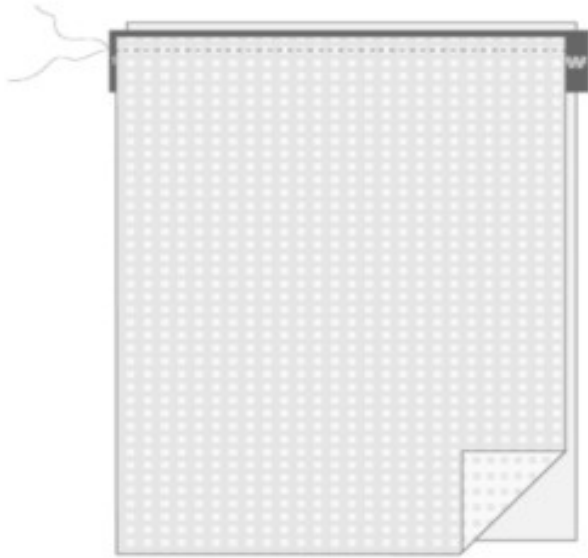

2. Place inner and outer layer right sides together
The right (correct) side of the zipper faces the outer layer
Use Zipper Foot – sew zipper on outer edge

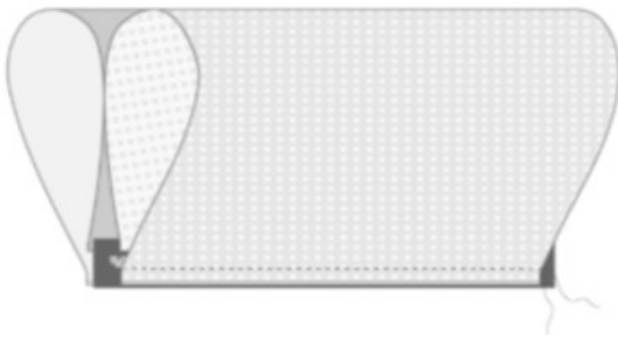


3. Flip the outer fabric up to get to the other side of zipper.
Place inner and outer layer right sides together
The right (correct) side of the zipper faces the outer layer
Use Zipper Foot – sew zipper on outer edge



4. Roll and tuck the outer layer over the lining so the pouch is right side out.


5. Optional - Press the fabric away from the zipper and stitch down the fabric each side away from zipper.

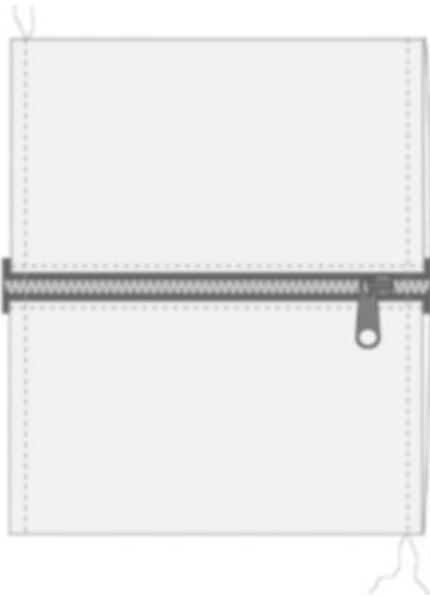

6. Put zipper exactly in the middle of the pouch, line up edges, press. Sew both sides through all layers $\frac{1}{4}$ inch seam.



7. Trim seal allowance a scant $\frac{1}{4}$ inch to prepare edges for French seams.

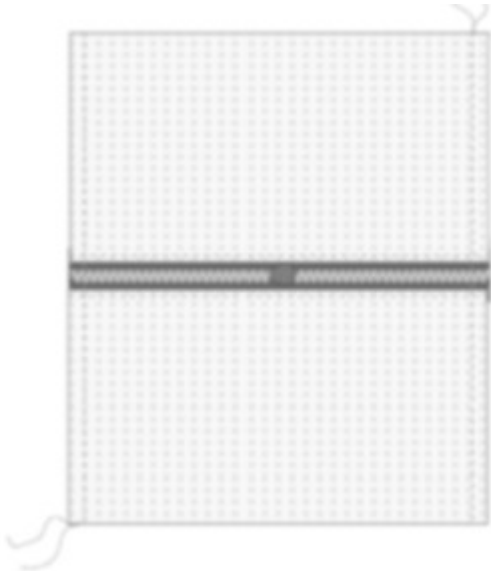


8. Turn Pouch inside out through zipper.

Press seams

Sew along the same seam edge $\frac{1}{4}$ inch to create French seam. Be sure sew to ensure all raw edges from previous seam are encased (inside) the new seam.

Note: Trim zipper as needed to not have it outside of the seam.

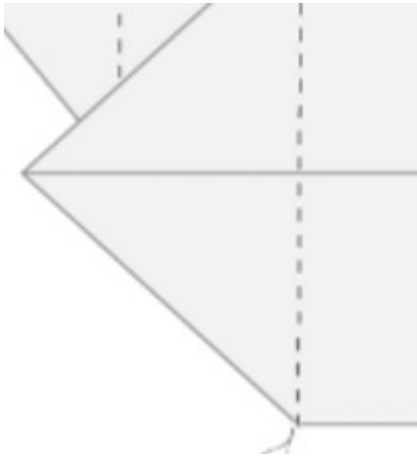

9. Turn pouch right side out.

Push out the side seam to the bottom center of the pouch, press.

Measure 2 inches from the point and draw a line on each side

Sew on line.

Trim scant $\frac{1}{4}$ inch from seam.

10. Turn Pouch inside out through zipper.

Press seams

Sew along the same seam edge $\frac{1}{4}$ inch to create French seam. Be sure sew to ensure all raw edges from previous seam are encased (inside) the new seam.

11. Turn pouch inside out. Congratulations!