



Hydra Jet Showers


Installation instruction

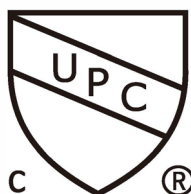


Always ask your installer to check the product before installation, make sure the shower working properly.

models:
Waikiki
Miami
Sorrento
Noosa
Bondi
Esperance

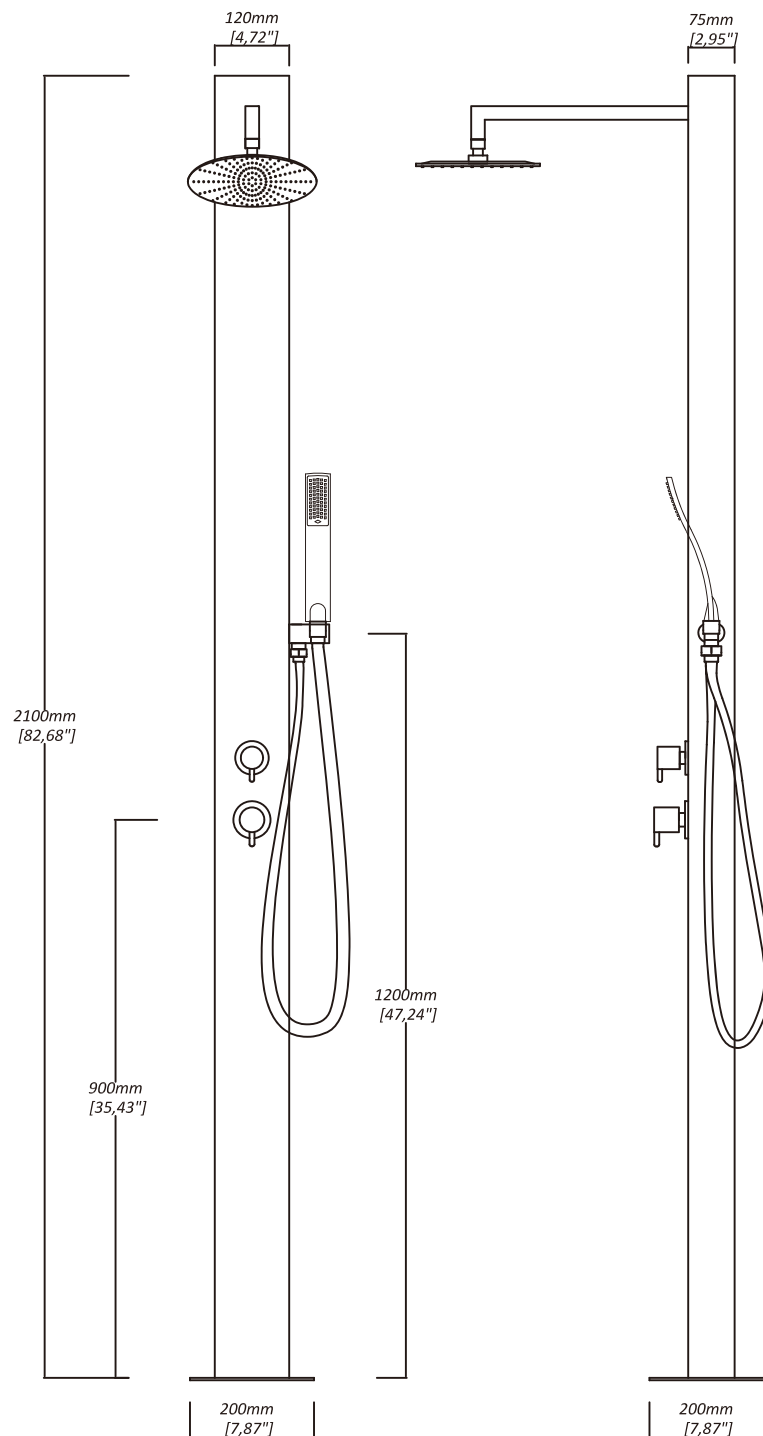


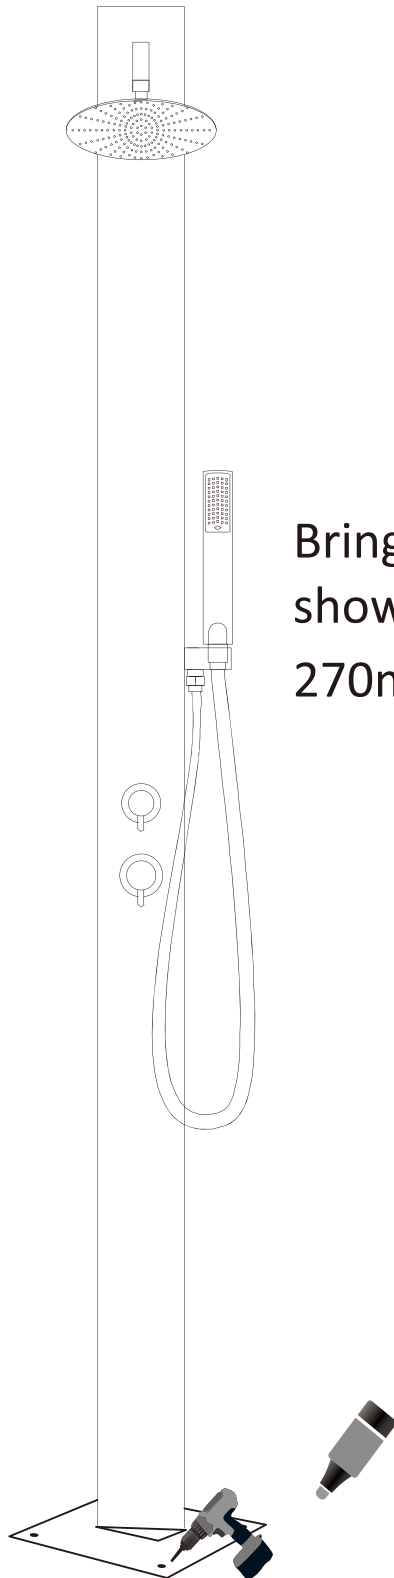


Bring one hot and cold water line to where the shower is being installed, 1/2" inch water pipe, 270mm above the ground; Mark and drill holes

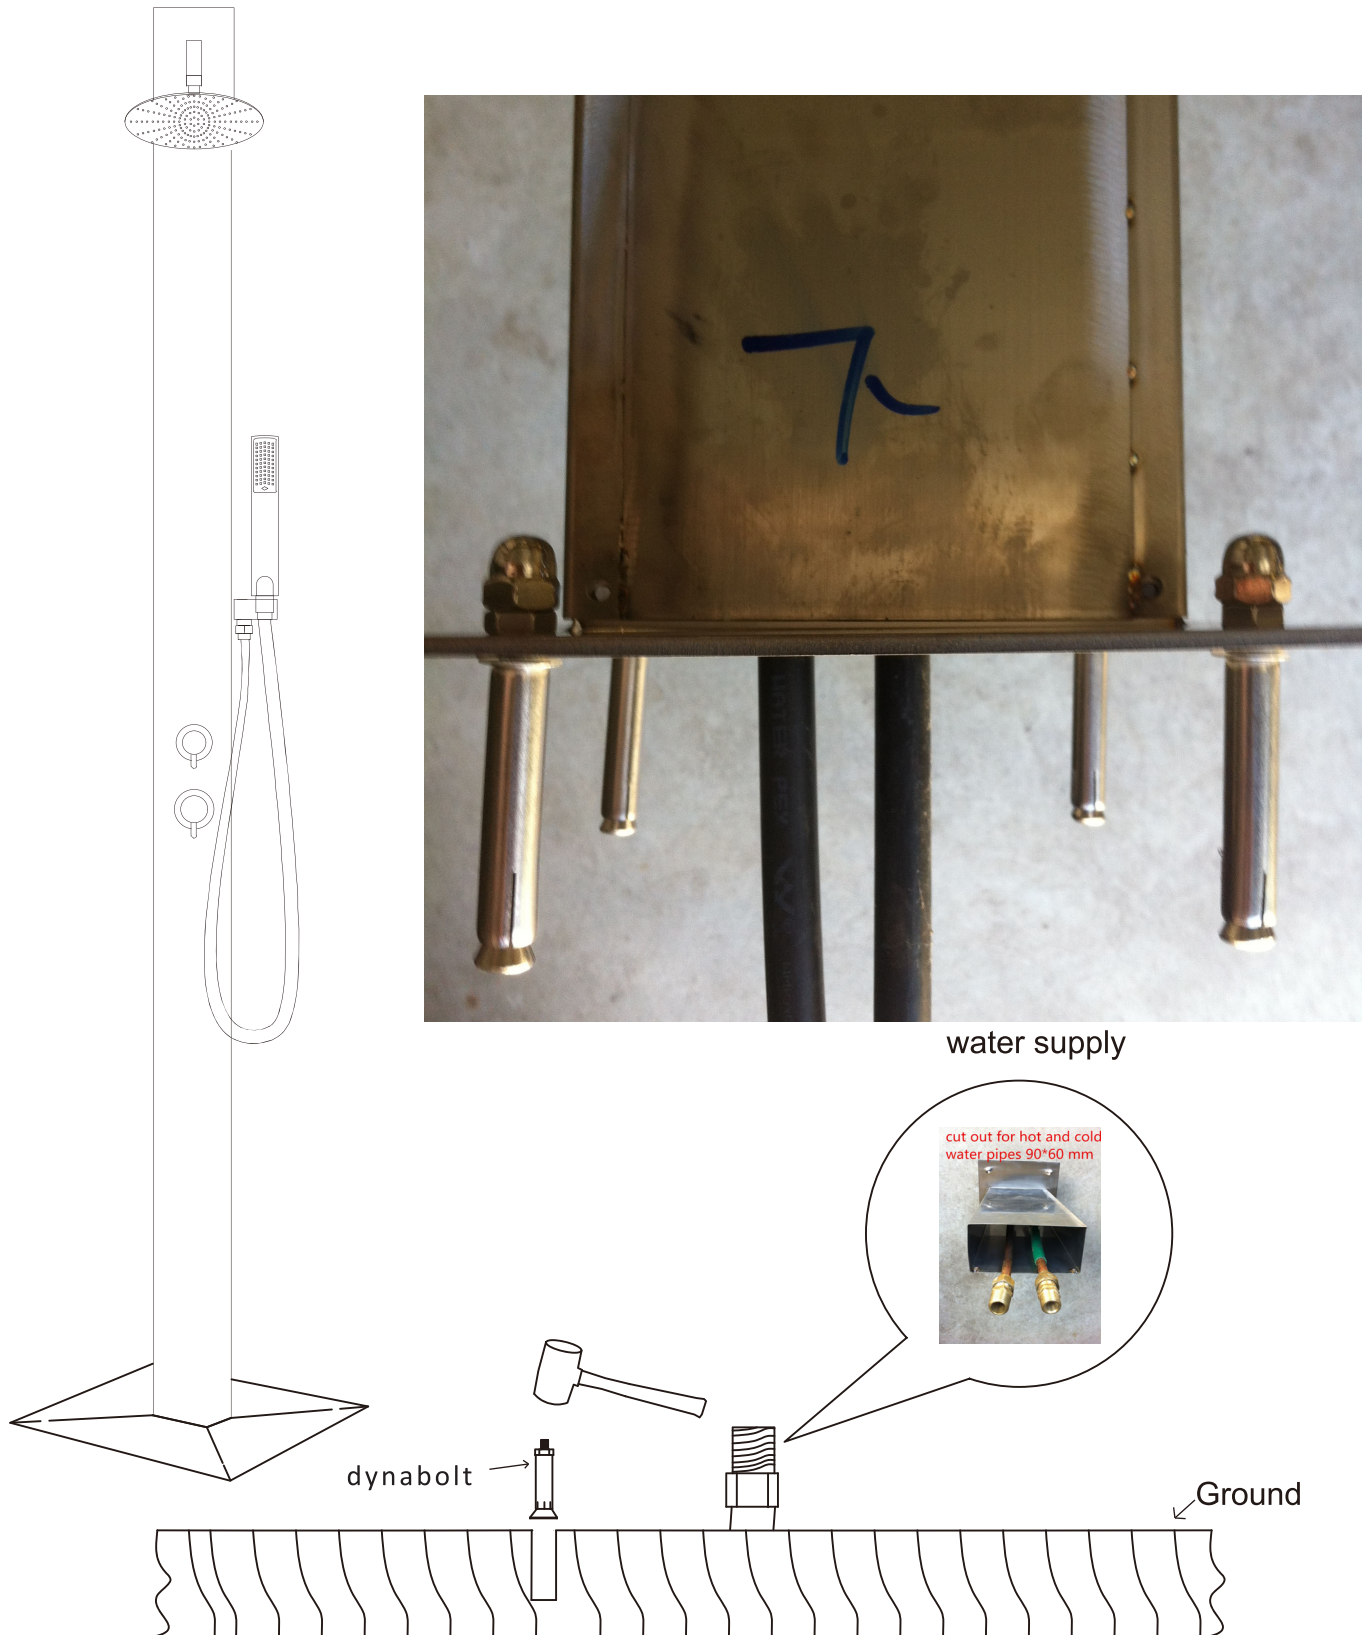

Hammer the dynabolts into the hole in the concrete
1/2" inch water pipe with male compression unions, 270mm above the ground

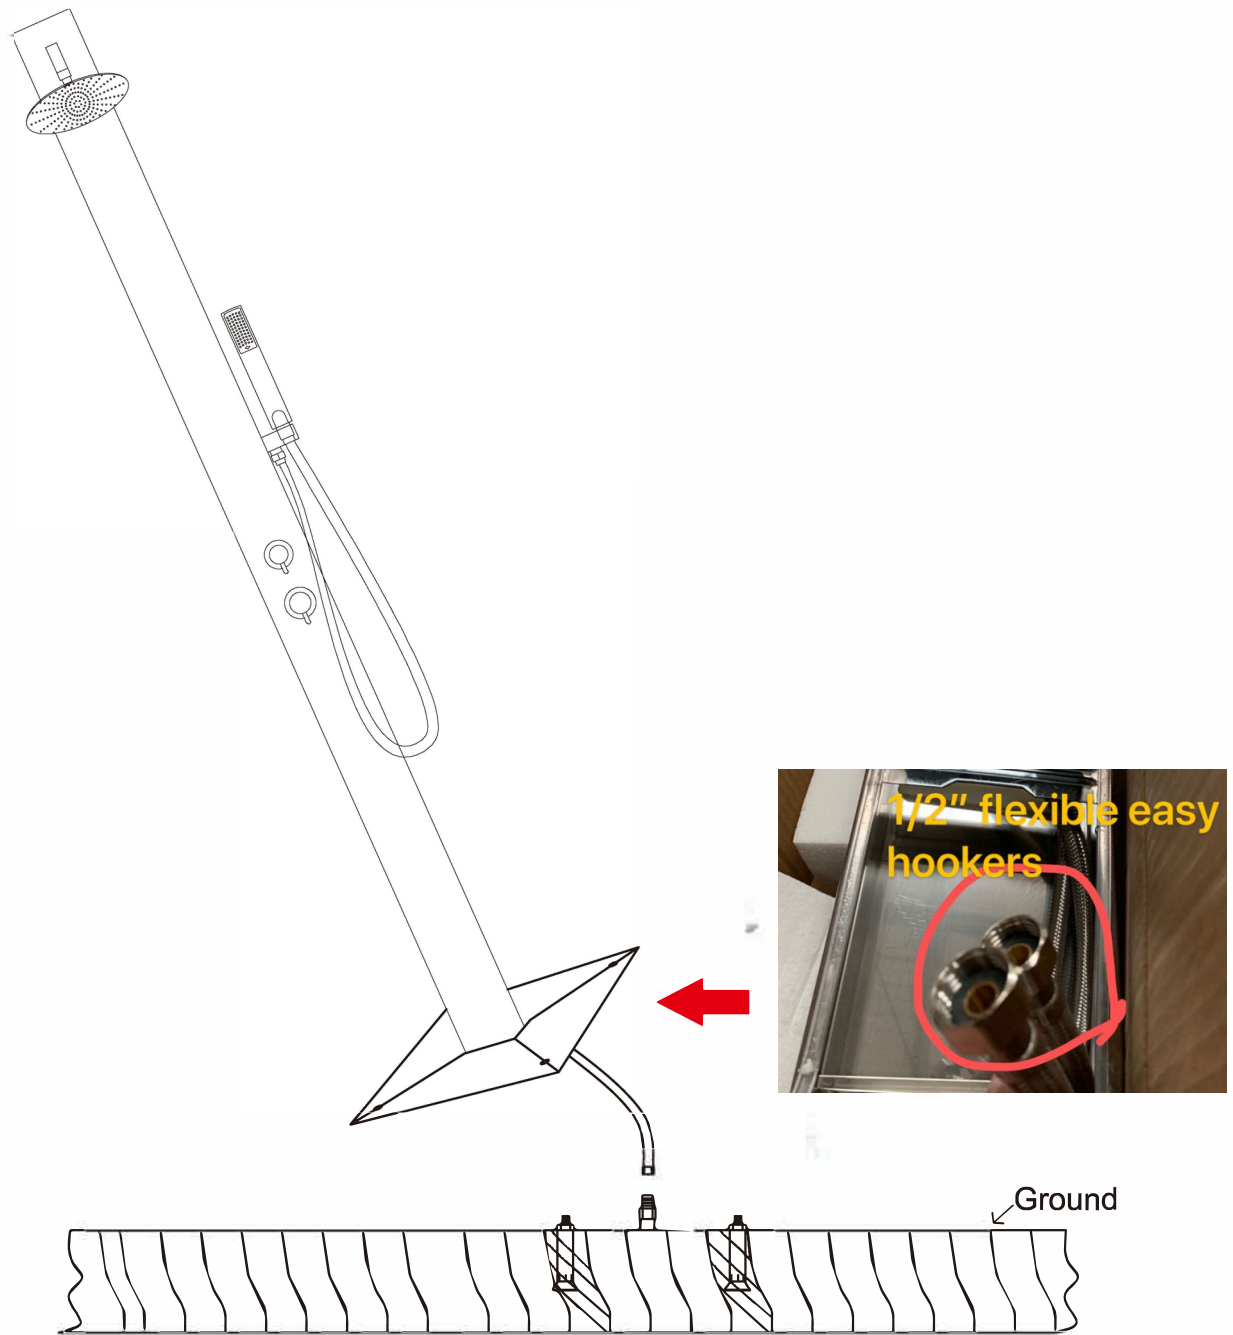

connect installed 1/2" flex water connectors to water service ,
level the base plate properly and ensure the placement is
properly

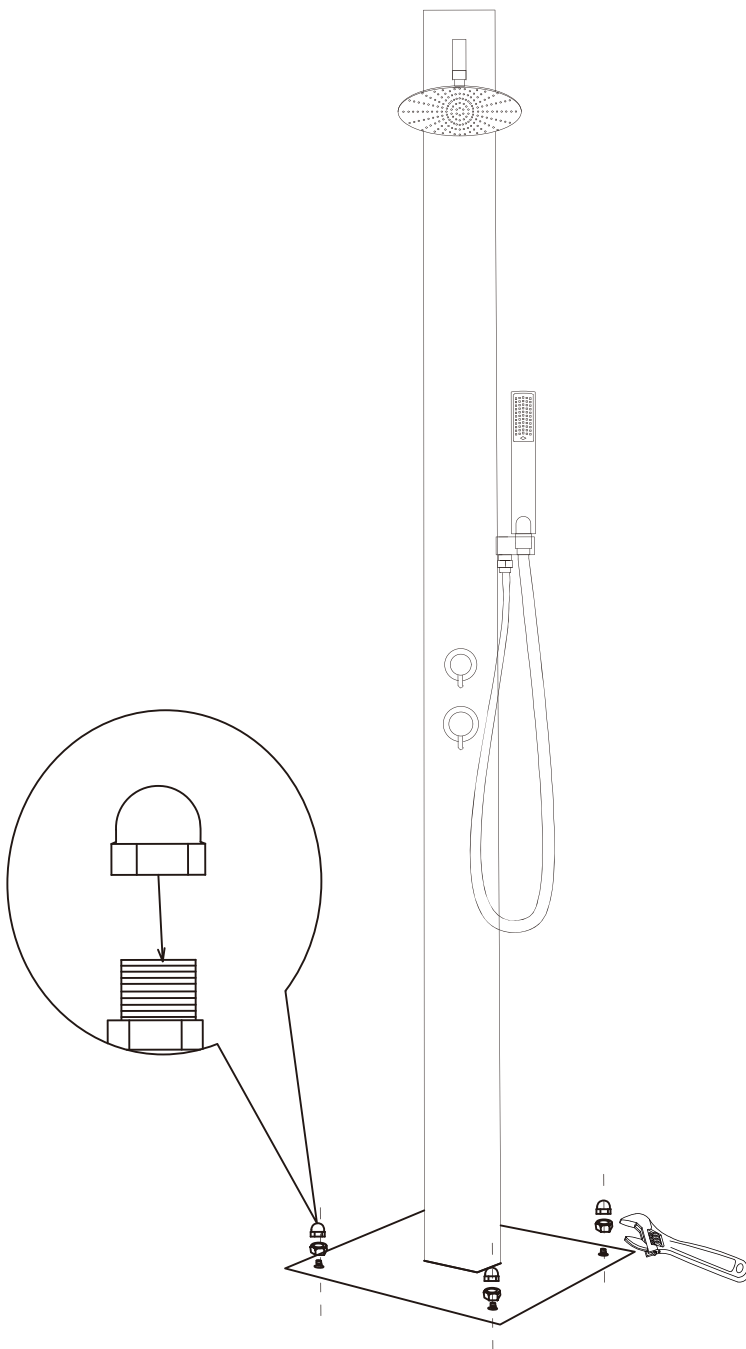

Tighten the nut with a torque wrench, covered by screw caps